

8. 배전반용 수신지시계 (Panel & Switch-board Meter)



TYPE : WY-R □ □ M



TYPE : WY-S □ □ M



TYPE : WY-SH96 □ □



TYPE : WY-W □ □ M

Specifications

- DC Ampere meter or AC Ampere meter

Type	Size(mm)	Input	Operating Principle	Class (%)	Burden (VA)	Weight(g)	Dimension	
		DC current or AC current (by Order)	 or 	±2,5	1,0		Refer to Page 679	
WY-R05A □M	50×50					110		
WY-R06A □M	60×60					120		
WY-R08A □M	80×80					130		
WY-R10A □M	100×80					170		
WY-S47A □M	47×47			100		±1,0 ±1,5	110	Refer to Page 680
WY-S72A □M	72×72			200				
WY-S96A □M	96×96			200				
WY-SH96A □M	96×96			270				
WY-W08A □M	80×80			470				
WY-W11A □M	110×110							

- DC Volt meter or AC Volt meter

Type	Size(mm)	Input	Operating Principle	Class (%)	Burden (VA)	Weight(g)	Dimension
		DC voltage or AC voltage (by Order)	 or 	±2,5	0,5		Refer to Page 679
WY-R05V □M	50×50					110	
WY-R06V □M	60×60					120	
WY-R08V □M	80×80					130	
WY-R10V □M	100×80					170	
WY-S47V □M	47×47			100		Refer to Page 680	
WY-S72V □M	72×72			110			
WY-S96V □M	96×96			200			
WY-SH96V □M	96×96			200			
WY-W08V □M	80×80			270			
WY-W11V □M	110×110			470			


Description

- 본 수신지시계는 공업량 또는 물리적인 량을 변환기기 (Transmitter), 열전대 등을 통하여 계기 고유의 전기적인 량(계기 입력 전기량)으로 변환하여 그 물리적인 량 (rpm, spm, %, m/min, 기타)을 표시하기 위한 계측기입니다.
- This receiving indicating meter is measuring instrument for electrical value of V,A,RPM etc, change to physical-biographical amount by transducer and thermocouple etc, sensors,


● Dimension

· WY-R Type Dimension

(Unit = mm)

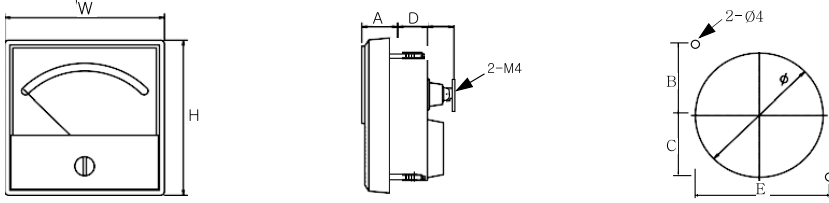
Front view 									
Rear view 	Type	W	H	D	A	B	C	E	Ø
	WY-R08	80	80	36	15	34	30	64	65
	WY-R10	100	80	36	15	36	28	80	65

· WY-R Type Dimension

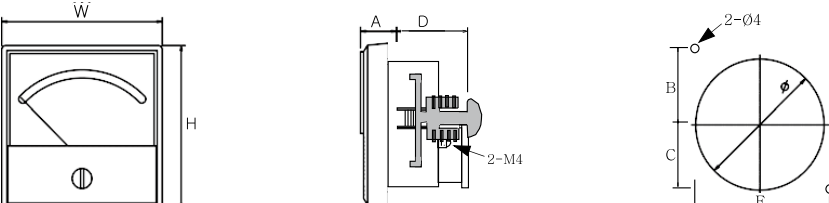Front view 									
Rear view 	Type	W	H	D	A	B	C	E	Ø
	WY-R05	51	51	35	14	18	18	36	44
	WY-R06	60	60	35	14	24	24	48	54

· WY-S Type Dimension

(Unit = mm)

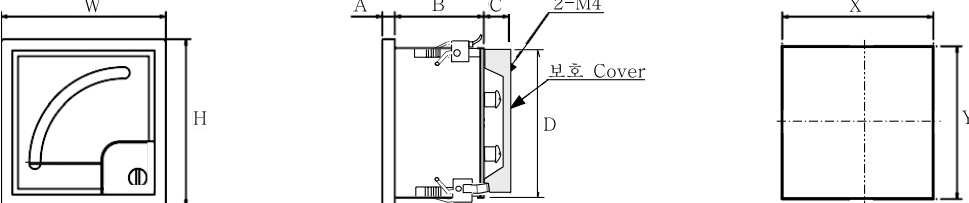
Front view 									
Rear view 	Type	W	H	D	A	B	C	X	Y
	WY-S47	48	48	44	5	44	12	44,5	44,5
	WY-S72	72	72	67	5	44	22	68	68
	WY-S96, SH96	96	96	91	5	44	22	92	92

· Mounting Introduction

WY-S47, WY-S96		WY-S72		WY-SH96	
					


● Dimension

· WY-W08 Type Dimension

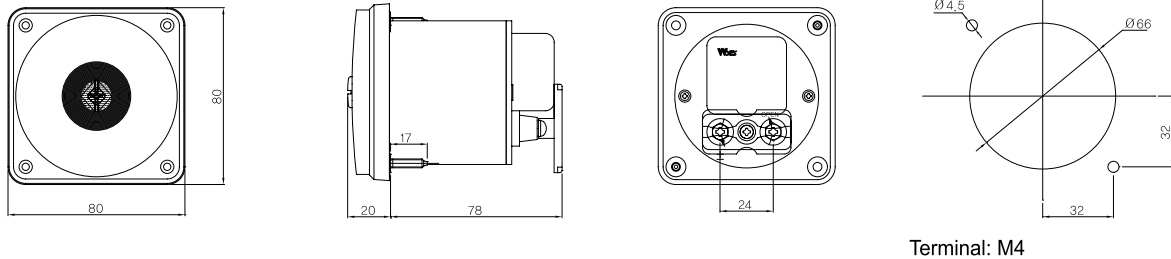


Terminal: M4

· WY-W11 A, V Type Dimension

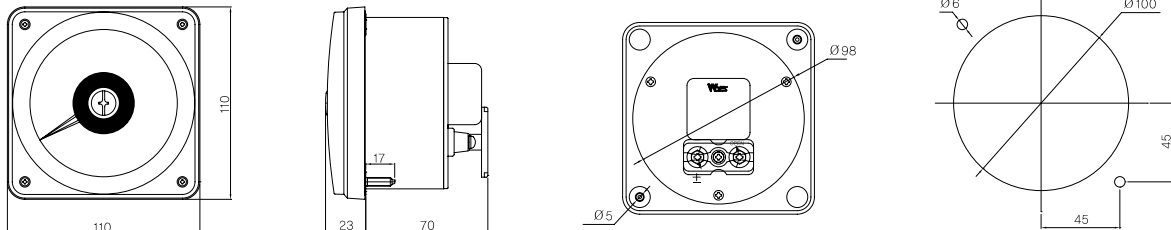


Terminal: M4

· WY-W11 KW, var, PF Type Dimension

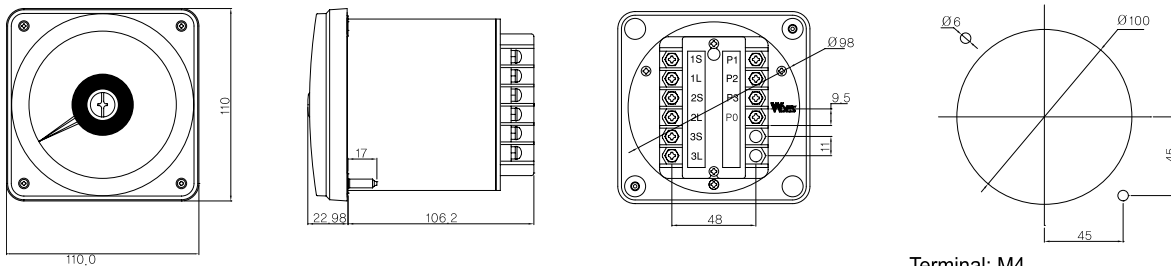

Terminal: M4

· WY-SH96 KW, var PF Dimension

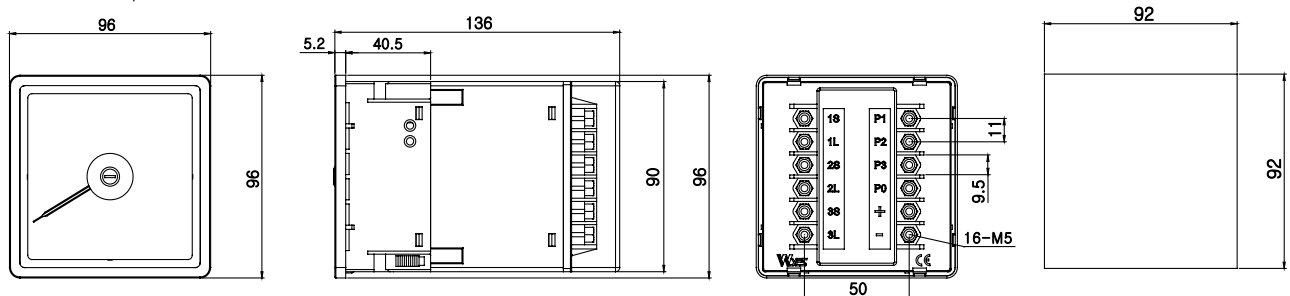

● 외부 변환기 사용

R, S, W08 타입의 Watt, var, Hz PF 계측기는 외부에 우측과 같은 변환기 (T/D) 를 사용합니다.

● External Transducers (For meter)

The Transducer for meter is used with the Watt, var and PF meter, etc., of the R type and S type or W08 type which is external transducer.

