

: WEBSERVER

---

# QUICK GUIDE


---

2018.02.07


# WEBSERVER

1. Operate web server through [XP-Manager]-[Communication]-[Manage Web Server].

After selecting the node registered at XP-Manager, click the right mouse button and operate it through [Web Server Management].

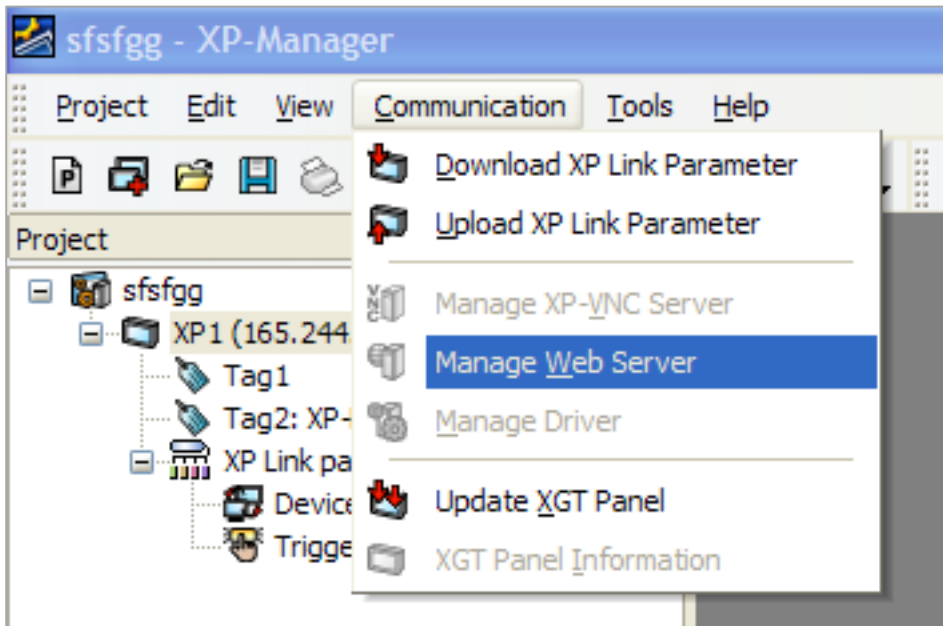

2. After executing as the above, make sure to press [Set] and [Start] as below.

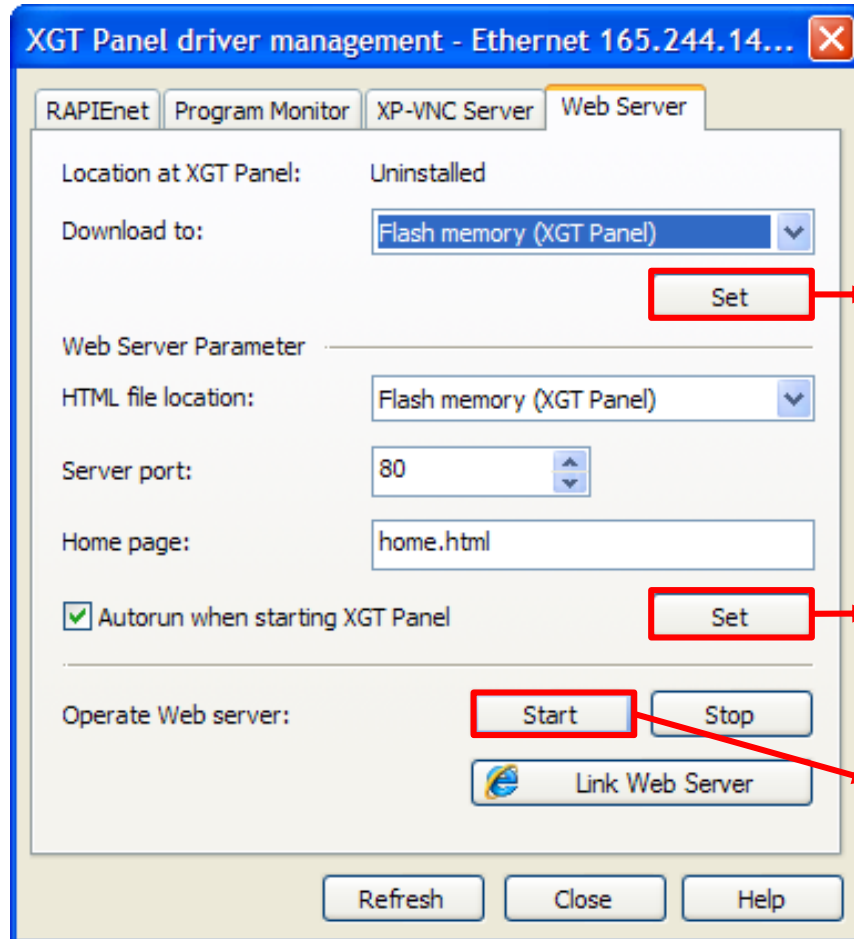


This is to download the Web Server to XGT Panel's Flash memory.

Select if you want the Web Server to start automatically as XGT Panel is turned on. Otherwise, you need to start it each time you want to use the WebServer.


Click Start button to operate Web Server.

3. If you download the Web Server module in the Web Server management dialog box of the XP-Manager, the image like figure below will be displayed. Click the Start button in the Web Server management dialog box you used when installing, then Web Server starts. Though the XGT Panel is "Start Menu" status, Web Server can operate.

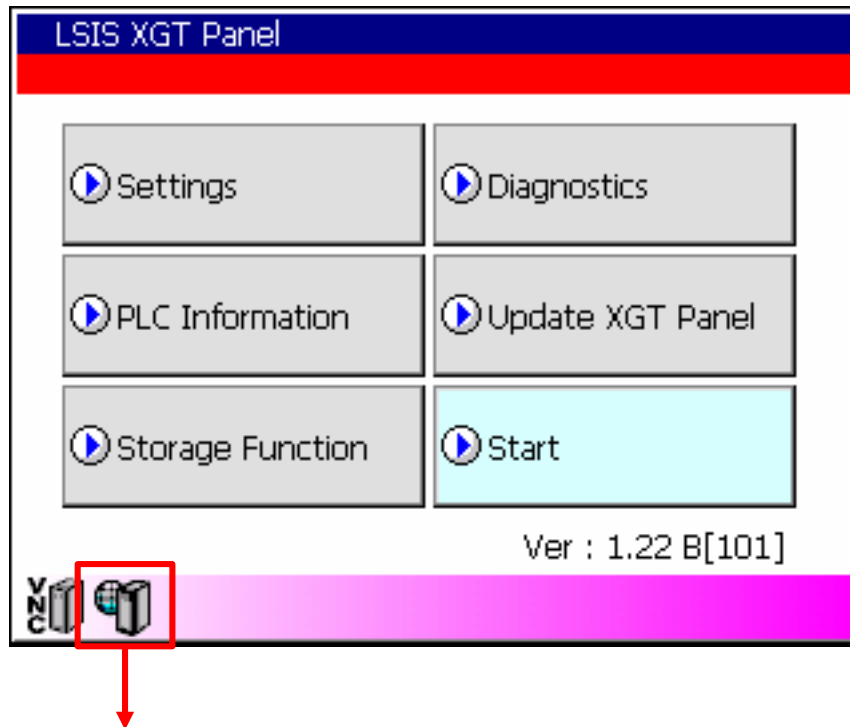


The icon below means Web Server has been installed and is ready to operate.

4. Click [Link Web Server], then web browser will be executed automatically with the below screen

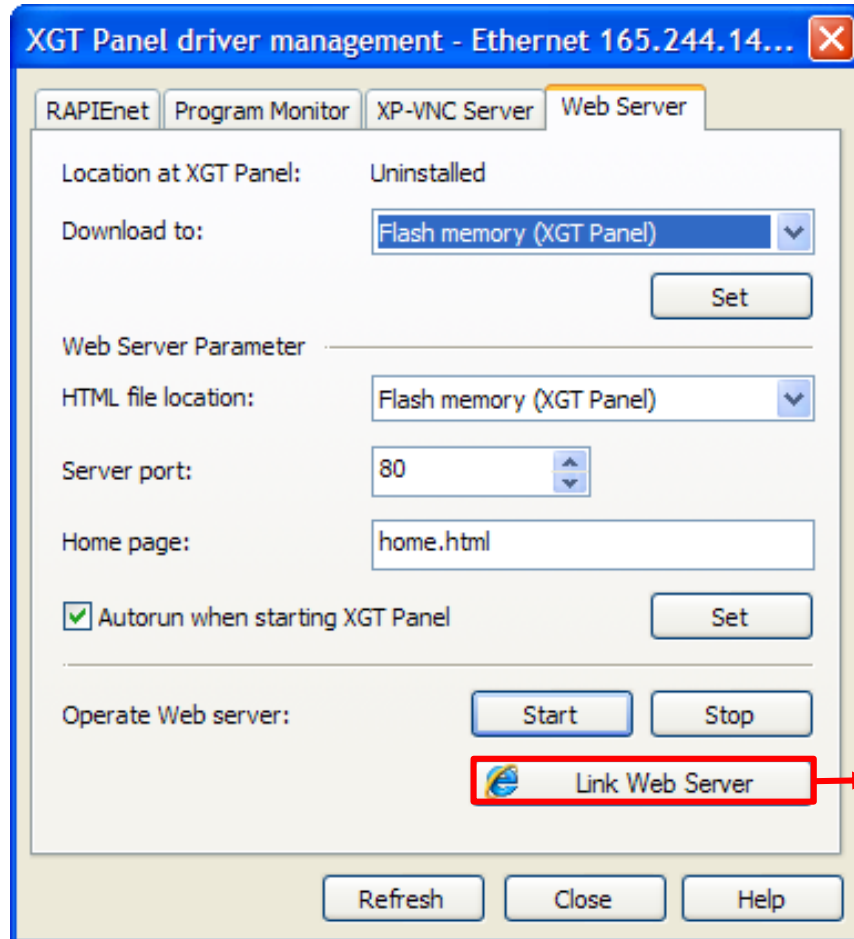

Click Start button to operate Web Server.

5. Below is the start page of the Web Server. By clicking on each menu, you will be able to get different results.

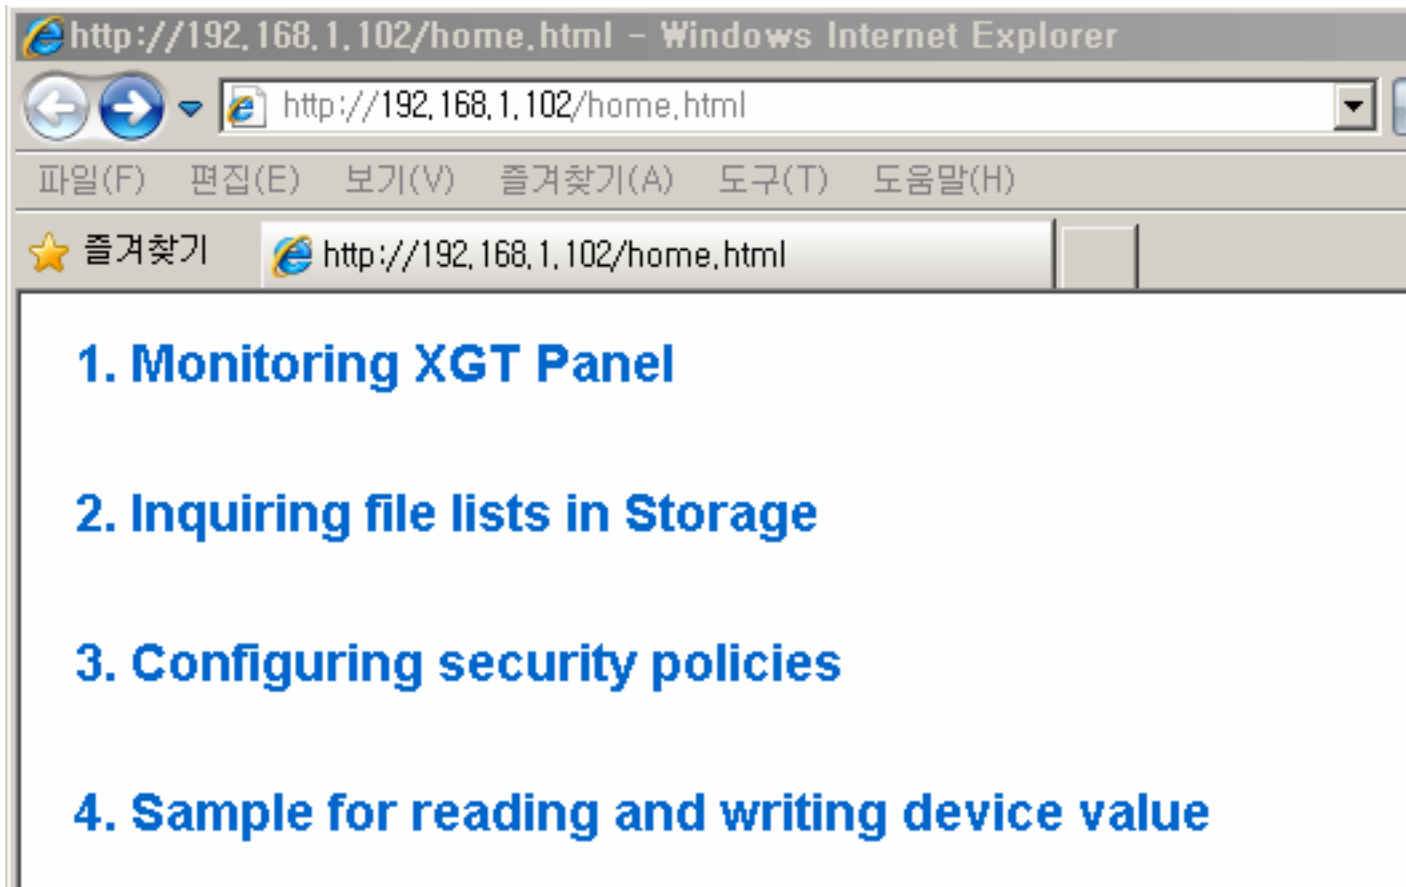

You can view the backup file saved in the device or download them to your PC through web server. If you click the “Inquiring file lists in Storage” of homepage basically provided by the XGT Panel, you can view the list of the backup file as follows.

On the top of the page, entire paths you are viewing are displayed. If you click each path, the list of the directory and file on the corresponding path will be displayed. And if you click the file among directory, file list on the bottom, you can download the file.

