

INSTALLATION / OPERATING MANUAL

IR PTZ Camera

- Before attempting to connect or operate this product, please read these instructions carefully and save this manual for future use.
- The design and specifications are subject to be changed without prior notice to improve product's quality.

TABLE OF CONTENTS

1. PRECAUTIONS

1. 1 Important Safety Instruction	3p.
---	-----

2. GETTING STARTED

2. 1 Unpacking	4p.
2. 2 Part name	4p.
2. 3 DIP Switch Setting	5p.
2. 4 Cable Connection	6p.

3. INSTALLATION

3. 1 Installation	7p.
-------------------------	-----

4. MAIN SETUP MENU

4. 1 Initialize	9p.
4. 2 Motion Setting	9p.
4. 3 Dome Setting	30p.
4. 4 Clear Setting	41p.
4. 5 Factory set	41p.
4. 6 PTZ Reset	41p.
4. 7 Other Quick Operating Guide	41p.

5. SPECIFICATION

5. 1 Mechanism Specification	42p.
------------------------------------	------

6. DIMENSION

6. 1 DIMENSION	43p.
----------------------	------

7. CONFIGURATION

7. 1 Connecting to Keyboard with DVR	46p.
--	------

1. PRECAUTIONS



1.1 Important Safety Instruction

 
- Read these instructions.
- Pay attention on all the warnings.
- Follow all instructions.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not disassemble or insert foreign objects.
- Do not install near any heat sources such as radiation, heat registers, stoves, or other apparatus. (Including amplifiers) that produce heat.
- Do not aim the camera at the sun or any other strong light source.
- Do not install the camera in intermittent lighting environments.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Installation should be done only by qualified personnel and conform to all local codes.
- Installation should be done in a place strong enough to hold it.
- Use only installation methods and materials capable of supporting four times the maximum specified load.
- It is designed for indoor use only and it must not be installed where exposed to rain and moisture without additional outdoor housing and bracket.
- To prevent damage from water leakage when installing a mount outdoors on a roof or wall, apply sealant around the bolt holes between the mount and mounting surface.
- These instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Only use replacement parts recommended by manufacturer. Ad these instructions.

2. GETTING STARTED

2.1 Unpacking

The following parts are supplied with the outdoor speed PTZ dome system.

<Figure 1. package Components>

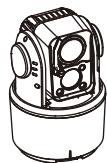

Body



Mount



SCREW (M4*8 SUS)

Screw

 


SCREW (SET ANCHOR 1/4")

Screw




Wiper(Spare)

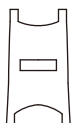

Mount joint




Manual

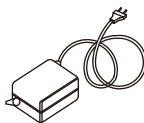

Power adaptor(Optional)
 
<Wall type>

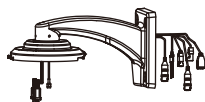


Wall bracket



Wall bracket
Plate rubber

<Ceiling type>

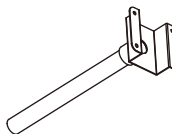

Ceiling bracket




Mount+Socket+Cable




TAPE SEAL

2.2 Part name


FRONT

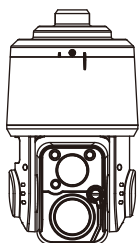

BACK

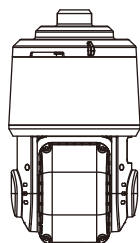

SIDE

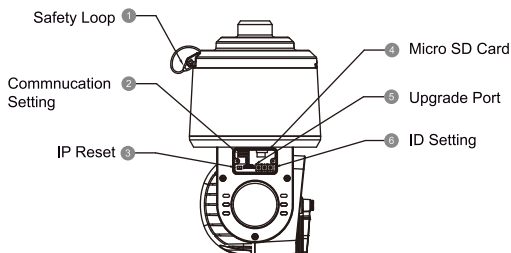

*DIP S/W setting refers page 5.

2.3 DIP Switch Setting

 
Before start up the dome camera, set the protocol and camera address and termination set with dip-switches and click-switches as shown in the below diagram.

1.Set the camera address (ID)

Open the top cover of the product to set camera address.



Address switch

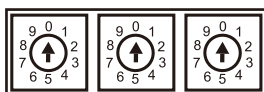

S1
(x1)

S3
(x10)

S4
(x100)

S1 : 1-digit number of address
S3 : 10-digit number of address
S4 : 100-digit number of address

Ex) S4 = 1


S3 = 2

S1 = 8

The ID number is 128.

* ID setting is 1~255 available

2. Protocol, Baudrate, Camera setting

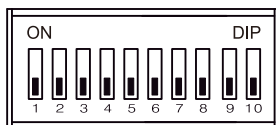


SW2

1	2	3	PROTOCOL
OFF	OFF	OFF	PELCO-D
OFF	OFF	ON	PELCO-P
OFF	ON	OFF	WTX
OFF	ON	ON	EZP
ON	OFF	OFF	NC
ON	OFF	ON	NC
ON	ON	OFF	NC
ON	ON	ON	NC

4	5	6	BAUDRATE
OFF	OFF	OFF	2400
OFF	OFF	ON	4800
OFF	ON	OFF	9600
OFF	ON	ON	19200
ON	OFF	OFF	38400
ON	OFF	ON	57600
ON	ON	OFF	115200
ON	ON	ON	NC

7	RSMODE	8	NTSC/PAL	9	RS LOOP	10	SDI
OFF	RS-422	OFF	NTSC	OFF	OFF	OFF	HD-SDI
ON	RS-485	ON	PAL	ON	ON	ON	EX-SDI

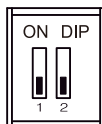 

SW3

1	IP SELECT	2	UCC
OFF	IP OFF	OFF	OFF
ON	IP ON	ON	ON

3.Set the termination On/Off




ON : Terminated
OFF : Not terminated

The device which is connected at the end of the line must have the cable communication terminated. Without proper termination, there is potential for control signal errors.

The product have the cable communication terminated by setting the appropriate dip switch.

2.4 Cable connection

2.4.1 Power/Data communication cable connection

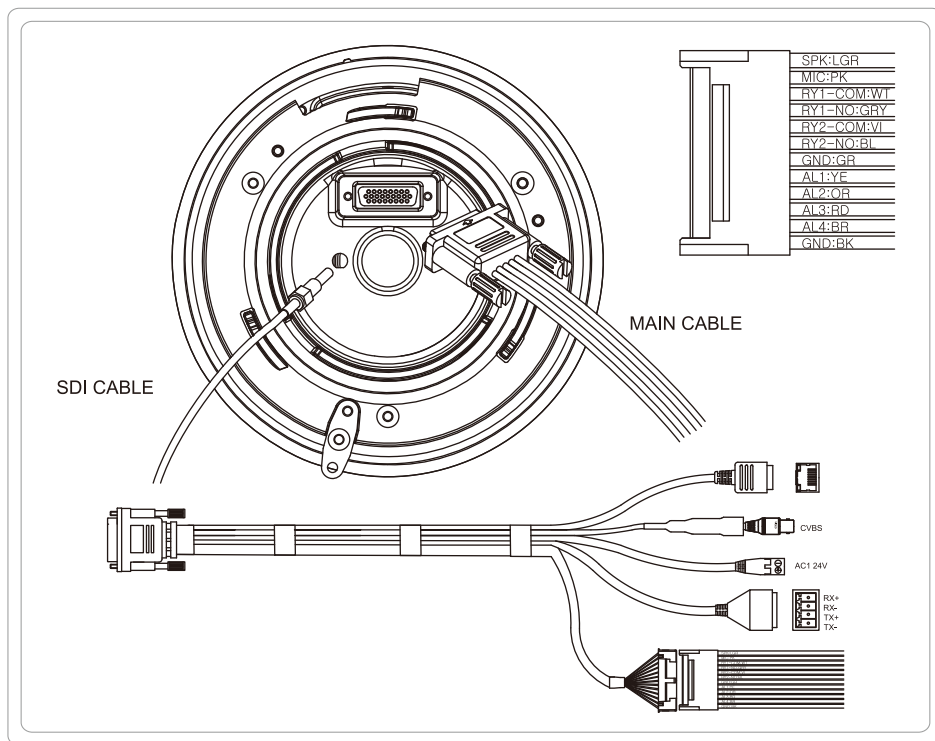

2.4.2 RS-485/RS-422 Connection

RS-422/485 connection

The PTZ can be remotely controlled by an external device or control system, such as a control keyboard or DVR, using RS-485 half-duplex, RS-422 duplex or simplex serial communication signals. Connect marked TRx+, TRx- to Tx+ and Tx- of the RS-485 control system.

If control system is RS-422, connect Tx+, Tx- of controller to Rx+ and Rx- of the PTZ Camera series. And also connect the Tx+, Tx- to Rx+, Rx- of the control device respectively. Total length of the cable for communication should not exceed 1.2Km.

2.4.3 SDI Output connection

Connect the SDI out (BNC) connector to the monitor or video input of DVR. Video cable and RS-485/422 communication cable are not provided in this product's package.



Caution



Do not connect the AC24V power terminal to the communication terminal.


- Power Terminal: 2PIN
- Com Terminal: 4PIN

3. Installation


- The following steps of installation and connection work should be done by qualified service personnel or system installers and should conform to all local codes.
- Be sure to switch the camera off before installation is completed.
- Do not install the camera near the air outlet of an air conditioner.
- Before installation, set the dome system with Dip switch on the back side of the mechanism part, and assemble the mechanism and housing according to the below instruction

3.1 Installation


<Wall Mount Type>

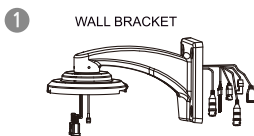


Install cables into the bracket first.

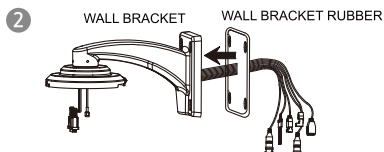

Attach the provided wall bracket rubber to a wall bracket as shown in the below picture.

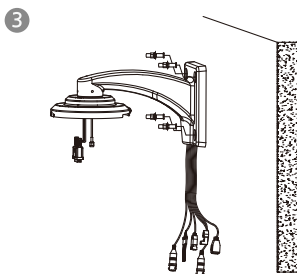


Install the bracket to the wall using anchor bolt.

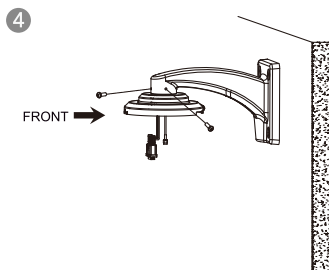


After connecting the cable, set the mount in the proper position and fix the 2 screws (M4*8)


<Ceiling Mount Type>

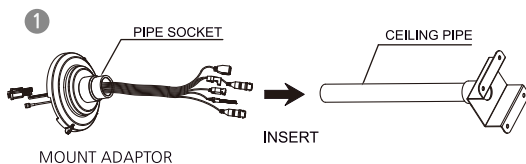


When install the ceiling bracket, screw the ceiling pipe to the pipe socket as figure.

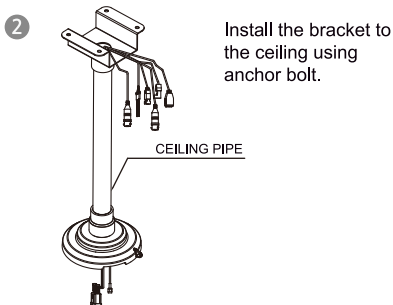


Install the bracket to the ceiling using anchor bolt.

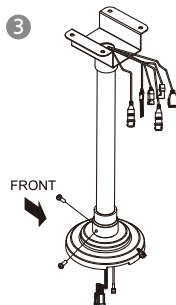

After connecting the cable, set the mount in the proper position and fix the 2 screws (M4*8)

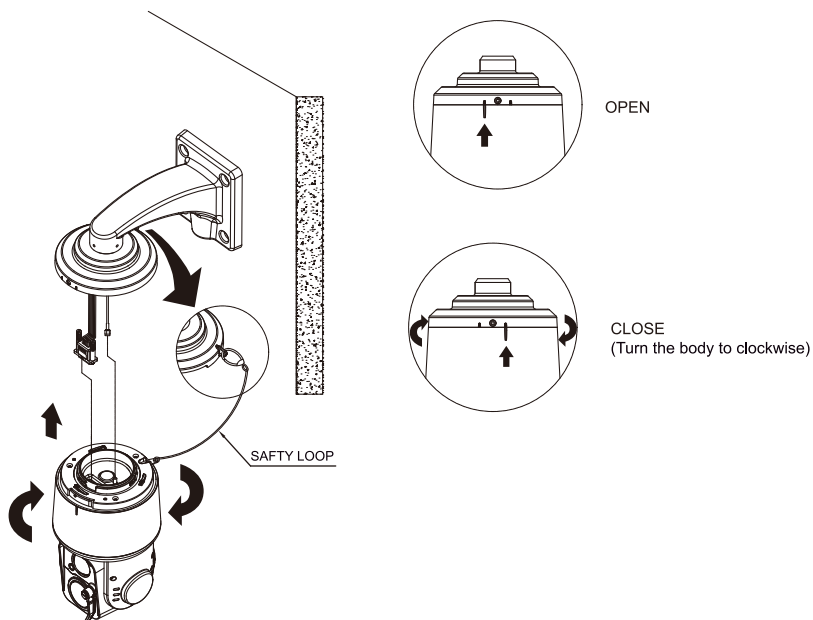

1. Connect the safety loop on the body and mount back side.
2. Connect MAIN cable and SDI cable onto the main body as figure.
(Caution! Fix the main body tightly.)
3. Align the arrow mark in the body and mount.
4. Fix the body by turn it to clockwise.

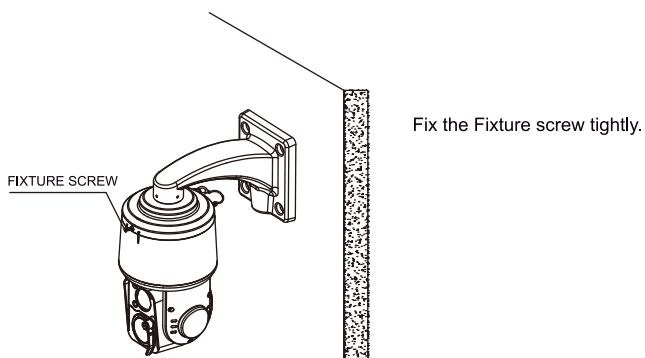

4. MAIN SETUP MENU

4.1 Initialize

When the device is powered on, you can check the address, version, protocol and video setting values.

```
INITIALIZE
PTZ ID      : 001
VERSION     : X.XX
D-OUTPUT    : 1080p30/NTSC
IP INFO     : IP PROTOCOL
              2400 (CU)
RS INFO     : PELCO D
              2400, N, 1/422
CAMERA      : XX XXX..OK
              VER: XX, XX
▷ PAN INIT   .... OK
▷ TILT INIT  .... OK
▷ NORMAL SETTING WAIT ..
```

IP

```
INITIALIZE
PTZ ID      : 001
VERSION     : X.XX
D-OUTPUT    : 1080p30/NTSC
UCC INFO    : UCC PROT. (9600)
RS INFO     : PELCO D
              2400, N, 1/422
CAMERA      : XX XXX..OK
              VER: XX, XX
▷ PAN INIT   .... OK
▷ TILT INIT  .... OK
▷ NORMAL SETTING WAIT ..
```

UCC

4.2 Motion Setting

4.2.1 Preset

```
MAIN MENU
MOTION ►
DOME    ▷
CAMERA  ▷
CLEAR   ▷
FACTORY SET
PTZ RESET
EXIT
< NEAR / RIGHT ▷ MOTION >
```

```
MOTION MENU
PRESET ►
TOUR    ▷
GROUP   ▷
SCAN    ▷
PATTERN ▷
AREA    ▷
ALARM   ▷
PRIVACY ▷
HOME POS ▷
BACK    EXIT
< NEAR / RIGHT ▷ PRESET >
```

The preset function is that the camera memorizes positions of the pan/tilt and zoom.

This function is a representative function of the speed dome which can find memorized

preset positions just by selecting the preset No. A Maximum of 255 Preset positions are toured in order.

(1) Select the Preset number

P001 : Defined Preset number / 001 : Undefined Preset number

Move :  JOYSTICK

Select : 


```
PRESET MENU
NUMBER : 001
TITLE   :
FOCUS   : AUTO
POSITION SET ►
EXIT TIME : OFF
MOVE SPEED : DISABLE
SAVE     CLR     BACK     EXIT
< NEAR / RIGHT ▷ PRESETNUM >
```

```
PRESET MENU
PRESET SELECT : 001
P001 P002 P003 P004 P005
006 007 008 009 010
011 012 013 014 015
016 017 018 019 020
021 022 023 024 025
026 027 028 029 030
031 032 033 034 035
036 037 038 039 040
041 042 043 044 045
<EXIT ▷ FOCUS NEAR>
```

(2) Set the Preset TITLE

Move :  or  Select :  or  Delete : 


It's available to set the desired TITLE, displayed on the executing screen of Preset.

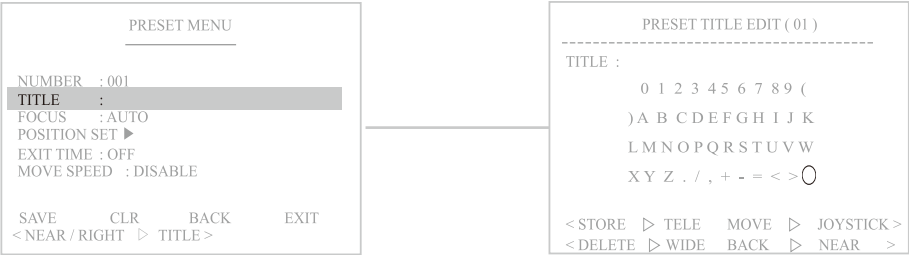

After the TITLE is set, push the NEAR button to exit.

(3) Select the focus mode for Preset


- ① Select the Focus menu ② Move and set the Focus Menu

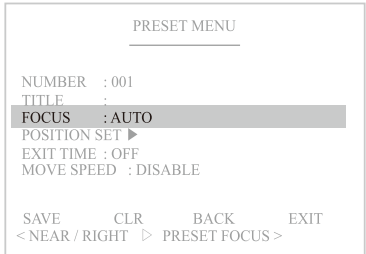

On focus menu, there are 3 modes
: AUTO, MANUAL, ONESHT.
* Focus will be adjusted once after preset moving.

(4) Define the Preset position

- ① Select the Position menu ② Move and set the position ③ Set & Back

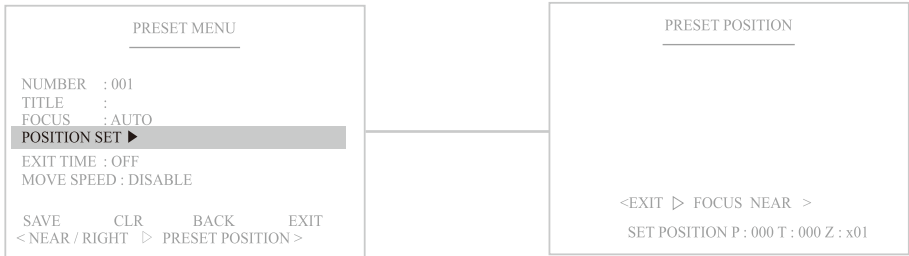

(5) EXIT TIME

PRESET MENU

NUMBER : 001

TITLE :

FOCUS : AUTO

POSITION SET ▶





EXIT TIME : OFF

MOVE SPEED : DISABLE

SAVE CLR BACK EXIT

< NEAR / RIGHT > EXIT TIME >

Setting the dwell time to exit Preset mode after completing Preset working.
(OFF / 5SEC / 10SEC / 20SEC / 30SEC / 1MIN / 5MIN / 10MIN / 30MIN) ※ Default : OFF

Select :  or  Set ON : 
Set OFF : 

PRESET MENU

NUMBER : 001

TITLE :

FOCUS

POSITION SET ▶

EXIT TIME : OFF

MOVE SPEED : 64

SAVE CLR BACK EXIT

< NEAR / RIGHT > EXIT TIME >

(6) MOVE SPEED
: Set the move speed(1~64)

PRESET MENU

NUMBER : 001

TITLE :

FOCUS

POSITION SET ▶

EXIT TIME : OFF


MOVE SPEED : DISABLE

SAVE CLR BACK EXIT

< NEAR > DATA SAVE >

- (7) “Save” above setting Pattern data to the memory.
- (8) “CLR” means above setting Pattern data will not be saved and be cleared.
- (9) “BACK” means it goes back to the previous menu :Motion.
- (10) “EXIT” means it goes out of MENU.


4. 2. 2 Tour

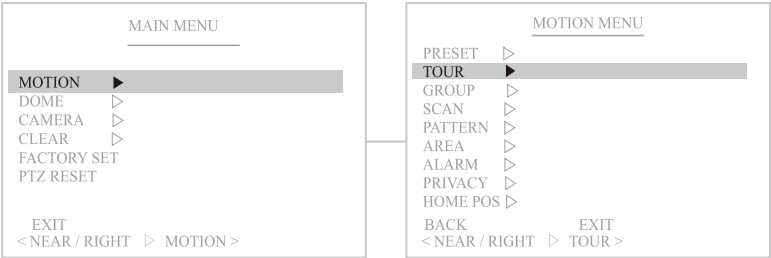

The Tour function consists of several presets run by turn. It is also adjusts the moving speed (1~64 step) and dwell time (1~99secs). Maximum of 8 Tour functions are toured in order. (※ 1 Tour can be set for 15 presets.)

- (1) Select the Tour number
T01 : Defined Tour number / 01 : Undefined Tour number


Move :  JOYSTICK Select : 

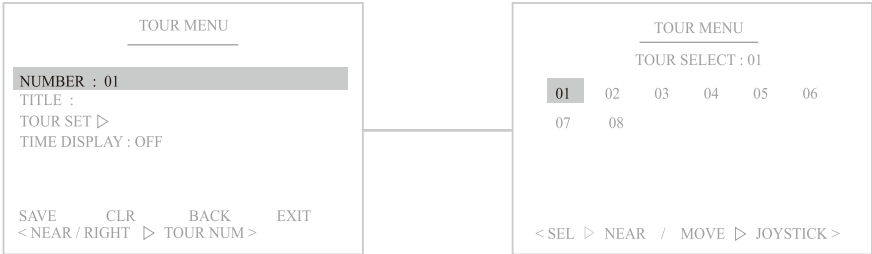

- (2) Set the Tour TITLE

Move :  JOYSTICK Select :  or  JOYSTICK Delete :  or  JOYSTICK

It's available to set the desired TITLE, displayed on the executing screen of Tour.

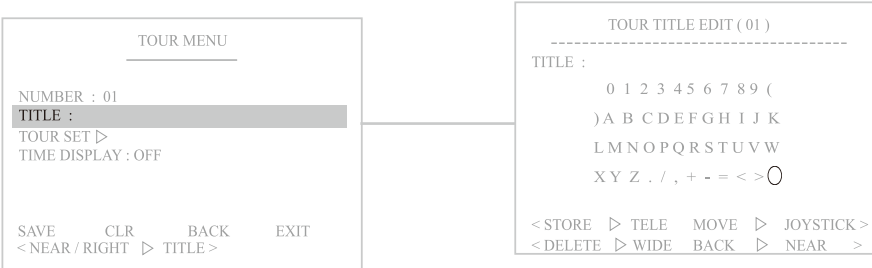

After the TITLE is set, push the NEAR button to exit.

(3) Define the Preset position

- ① Move to the set-up window ② Move and set the position ③ Set & Back



TOUR MENU

NUMBER : 01
TITLE :
TOUR SET ▶
TIME DISPLAY : OFF

SAVE CLR BACK EXIT
< NEAR / RIGHT > TOUR SET >

TOUR EDIT (01)

NO	PRESET	SPEED	DWELL
01	◀ 01	63	01
02	< 02	63	01
03	XX	XX	XX
04	XX	XX	XX
05	XX	XX	XX
06	XX	XX	XX
07	XX	XX	XX
08	XX	XX	XX
<SEL & NEAR		PRESET & LEFT >	
<SEL & NEAR		DELETE WIDE >	

TOUR MENU

PRESET SELECT : 001

P001	P002	P003	P004	P005
006	007	008	009	010
011	012	013	014	015
016	017	018	019	020
021	022	023	024	025
026	027	028	029	030
031	032	033	034	035
036	037	038	039	040
041	042	043	044	045

<EXIT > FOCUS NEAR >

(4) Time Display

TOUR MENU

NUMBER : 01
TITLE :
TOUR SET ▶
TIME DISPLAY : OFF

SAVE CLR BACK EXIT
< NEAR / RIGHT > TIME DISPLAY >

Display the remain time of each Preset dwell time during Tour operation.(OFF / ON) ※ Default : OFF

Select : or Set ON :

Set OFF :

TOUR MENU


NUMBER : 01
TITLE :
TOUR SET ▶
TIME DISPLAY : OFF

SAVE CLR BACK EXIT

< NEAR > DATA SAVE >

- (5) “Save” above setting Pattern data to the memory.
- (6) “CLR” means above setting Pattern data will not be saved and be cleared.
- (7) “BACK” means it goes back to the previous menu :Motion.
- (8) “EXIT” means it goes out of MENU.

4.2.3 Group

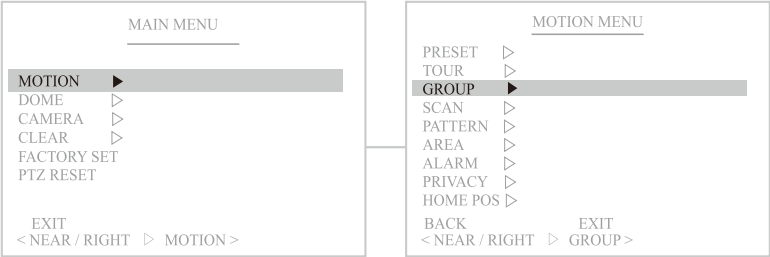


GROUP : You can make Max. 6 groups and call the saved tour by turn.

(1) Select the Group number

G01 : Defined Group number / 01 : Undefined Group number
Set from 1 to 6 groups.


Move :  Select : 

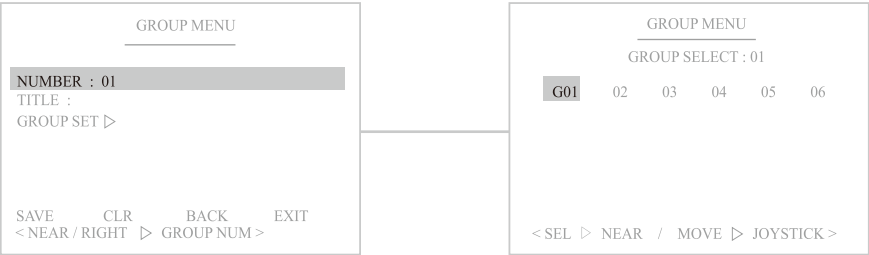

(2) Set the Group TITLE

Move :  Select :  or  Delete :  or 

It's available to set the desired TITLE, displayed on the executing screen of Group.

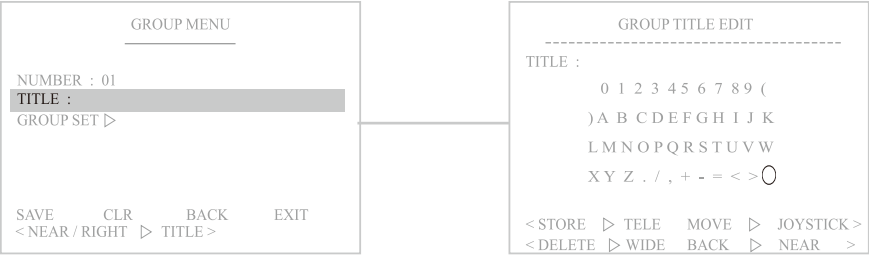

After the TITLE is set, push the NEAR button to exit.

(3) GROUP SET

① Move to the set-up window



② Move and set the position



③ Set & Back



GROUP MENU

NUMBER : 01
TITLE :
GROUP SET ▶

SAVE CLR BACK EXIT
< NEAR / RIGHT ▷ GROUP SET >

GROUP EDIT (01)

NO	TOUR
01	<001>
02	002
03	XXX
04	XXX
05	XXX
06	XXX

< SEL & NEAR PRESET & LEFT >
< SEL & NEAR DELETE WIDE >

- GROUP EDIT : Set the tour from 1 to 6 of group.

GROUP MENU

NUMBER : 01
TITLE :
GROUP SET ▶

SAVE CLR BACK EXIT

< NEAR ▷ DATA SAVE >

(4) “Save” above setting Pattern data to the memory.

(5) “CLR” means above setting Pattern data will not be saved and be cleared.

(6) “BACK” means it goes back to the previous menu :Motion.

(7) “EXIT” means it goes out of MENU.


4. 2. 4 Scan



The Scan function means that the camera keeps panning between two programmed pan positions. It also adjusts the moving speed(1~64 step). Maximum 8 Scan functions are toured in order.

- (1) Select the Scan number
S01 : Defined Scan number / 01 : Undefined Scan number


Move : Select :

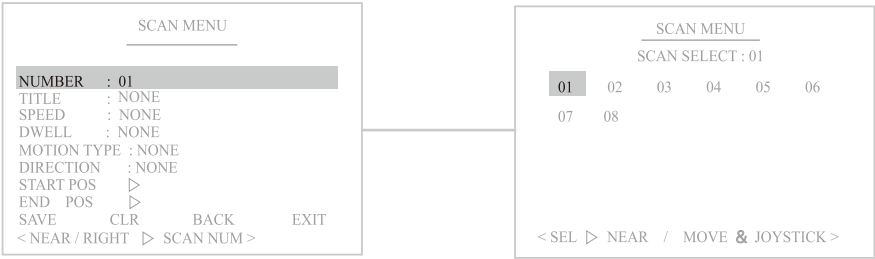

- (2) Set the Scan TITLE

Move : Select : or Delete : or

It's available to set the desired TITLE, displayed on the executing screen of Scan.

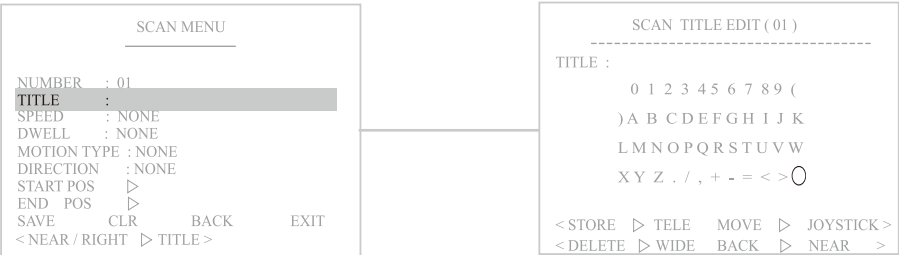


After the TITLE is set, push NEAR button to go out.

(3) Set the Scan speed

Increase :  or  JOYSTICK

Decrease :  or  JOYSTICK

It adjusts the moving speed from 1~64 steps.

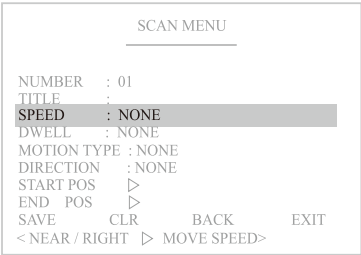


(4) Set the Dwell Time

Increase :  or  JOYSTICK

Decrease :  or  JOYSTICK

Dwell time means the time that the camera stay at the start & end pan positions.
It's adjustable from 00~59 seconds.

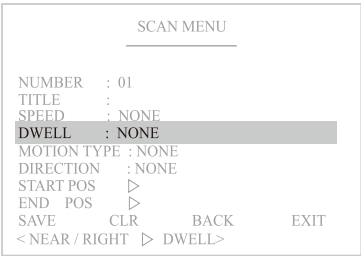

(5) Set the Motion Type

Set PAN/TILT direction


When PAN is set,PAN SCAN is proceeded with the specified coordinate value.

When TILT is set,TILT SCAN is proceeded with the specified coordinate value.

Select :  or  JOYSTICK



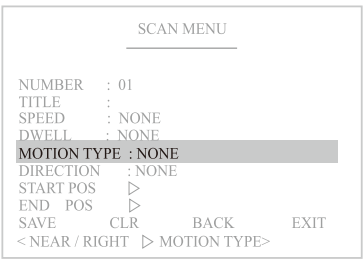

Set ON :  JOYSTICK

Set OFF : 



(6) Set the Direction


PAN : Select Clock Wise or C_Clock Wise direction
When select C_Clock WISE, counterclockwise progression
When select Clock WISE, clockwise progression
TILT : Set the UP & DOWN.

Select :  or  Set ON : 
Set OFF : 

SCAN MENU	
NUMBER	: 01
TITLE	:
SPEED	: NONE
DWELL	: NONE
MOTION TYPE	: NONE
DIRECTION	: NONE
START POS	▷
END POS	▷
SAVE	CLR BACK EXIT
< NEAR / RIGHT ▷ DIRECTION >	

(7) Define the Start position

 - ① Select Start Pos menu ② Move and set the position ③ Go back

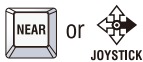

SCAN MENU	
NUMBER	: 01
TITLE	:
SPEED	: NONE
DWELL	: NONE
MOTION TYPE	: NONE
DIRECTION	: NONE
START POS	▷
END POS	▷
SAVE	CLR BACK EXIT
< NEAR / RIGHT ▷ START POS >	

STRAT POSITION	
< EXIT ▷ FOCUS NEAR >	
SET POSITION P : 000 T : 000 Z : x01	

(8) Define the End position

- ① Select End Pos menu ② Move and set the position ③ Go back



SCAN MENU	
NUMBER	: 01
TITLE	:
SPEED	: NONE
DWELL	: NONE
MOTION TYPE	: NONE
DIRECTION	: NONE
START POS	▷
END POS	▷
SAVE	CLR BACK EXIT
< NEAR / RIGHT ▷ END POS >	

SCAN END POSITION	
< EXIT ▷ FOCUS NEAR >	
SET POSITION P : 000 T : 000 Z : x01	

- When Motion type is PAN, Pan is available.
- When Motion type is TILT, TILT is available.

- (9) “Save” above setting Pattern data to the memory.
- (10) “CLR” means above setting Pattern data will not be saved and be cleared.
- (11) “BACK” means it goes back to the previous menu :Motion.
- (12) “EXIT” means it goes out of MENU.

SCAN MENU

NUMBER : 01

TITLE : NONE

SPEED : NONE

DWELL : NONE

MOTION TYPE : NONE

DIRECTION : NONE

START POS ▶

END POS ▶

SAVE


CLR

BACK

EXIT

<NEAR ▶ DATA SAVE >

4.2.5 Pattern

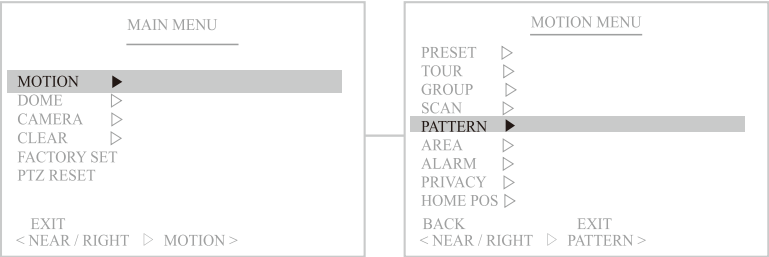


The Pattern function memorizes User's random moving path and zoom ratio. Total recording time limit is 65secs and maximum 4 Pattern functions are toured in order.

(1) Select the Pattern number

PAT01 : Defined Pattern number / 01 : Undefined Pattern number


Move :  Select : 

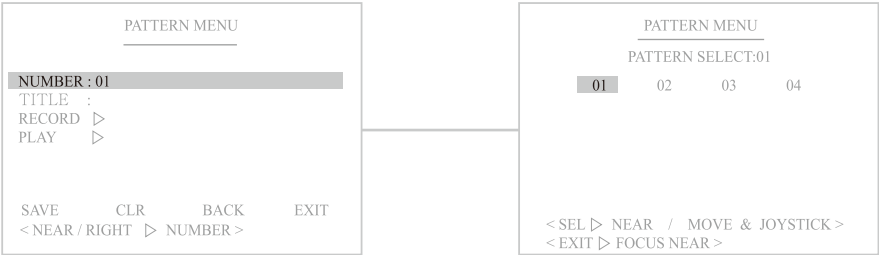

(2) Set the Pattern TITLE

Move :  Select :  or  Delete :  or 



It's available to set the desired TITLE, displayed on the executing screen of Pattern.

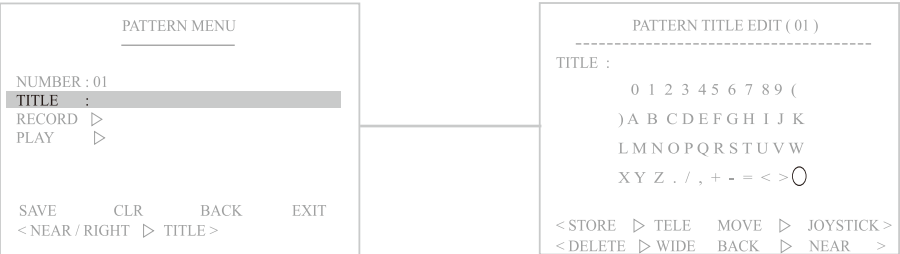


After the TITLE set, push NEAR button to go out.

(3) Record and Save the User's random Pattern data

 
- ① Select the "Record" Menu
- ② Move and record the pattern
- ③ NEAR -> EXIT
FAR -> RECORD ON

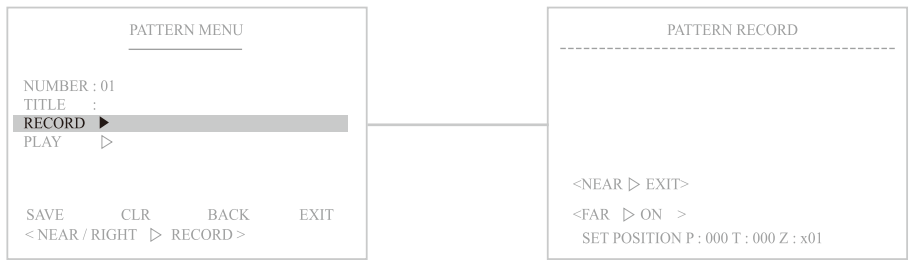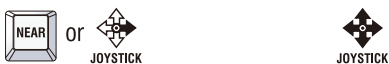


(4) Play back the recorded Pattern data

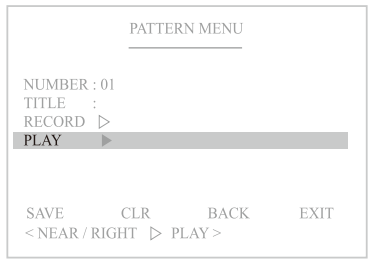

- (5) "Save" above setting Pattern data to the memory.
- (6) "CLR" means above setting Pattern data will not be saved and be cleared.
- (7) "BACK" means it goes back to the previous menu :Motion.
- (8) "EXIT" means it goes out of MENU.

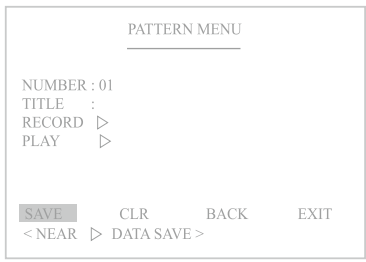

4. 2. 6 Area

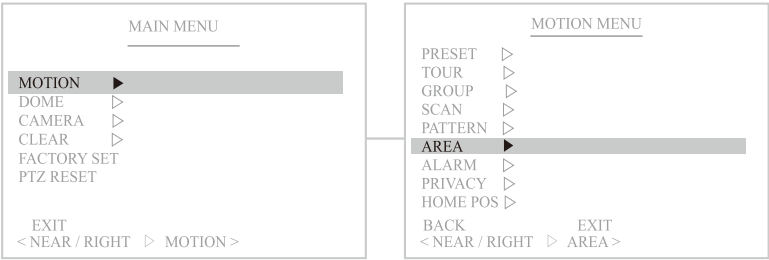

The Area function means that it displays the Area name between two programmed pan positions. Maximun 16 Area functions are toured in order.

- (1) Select the Area number
AR 01 : Defined Area number / 01 : Undefined Area number

Move :  Select : 

JOYSTICK




- (2) Set the Area TITLE

Move :  Select :  or  Delete :  or 

JOYSTICK

It's available to set the desired TITLE, displayed on the executing screen of Area.

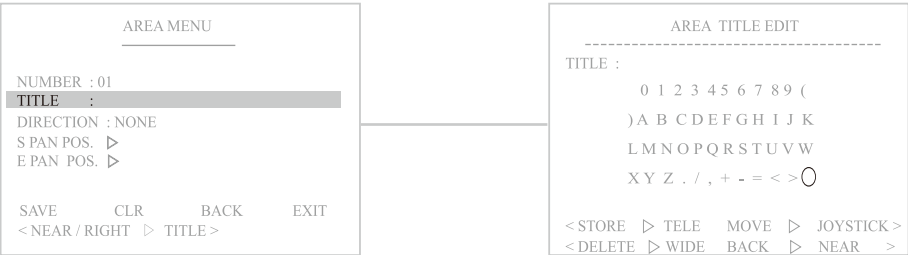

After the TITLE set, push NEAR button to go out.

(3) Set the Direction

Select :  or  Set ON :  Set OFF : 

C_ Clock WISE is counterclockwise mark, Clock WISE is clockwise mark.

 
AREA MENU

NUMBER : 01
TITLE :
DIRECTION : <C_ CLOCK WISE>
S PAN POS. ▷
E PAN POS. ▷

SAVE CLR BACK EXIT
< NEAR / RIGHT ▷ DIRECTION >

(4) Define the Start pan position

① Select the "Start Pan Pos" menu

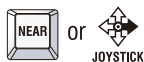

② Move and set the position



③ Set & Back



AREA MENU

NUMBER : 01
TITLE :
DIRECTION : NONE
S PAN POS. ▶
E PAN POS. ▷

 
SAVE CLR BACK EXIT
< MOVE & NEAR / START POS >

AREA START PAN POSITION

< EXIT ▷ FOCUS NEAR >
SET POSITION P : 000 T : 000 Z : x01

(5) Define the END pan position

① Select the "END Pan Pos" Menu

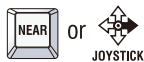

② Move and set the position



③ Set & Back



AREA MENU

NUMBER : 01
TITLE :
DIRECTION : NONE
S PAN POS. ▷
E PAN POS. ▶

SAVE CLR BACK EXIT
< MOVE & NEAR / END POS >

AREA STOP PAN POSITION

< EXIT ▷ FOCUS NEAR >
SET POSITION P : 000 T : 000 Z : x01

- (6) “Save” above setting Area data to the memory.
- (7) “CLR” means above setting Area data will not be saved and be cleared.
- (8) “BACK” means it goes back to the previous menu :Motion.
- (9) “EXIT” means it goes out of MENU

AREA MENU

NUMBER : 01

TITLE :

DIRECTION : NONE


S PAN POS. ▷

E PAN POS. ▷

SAVE CLR BACK EXIT

< NEAR ▷ DATA SAVE >


4. 2. 7 Alarm

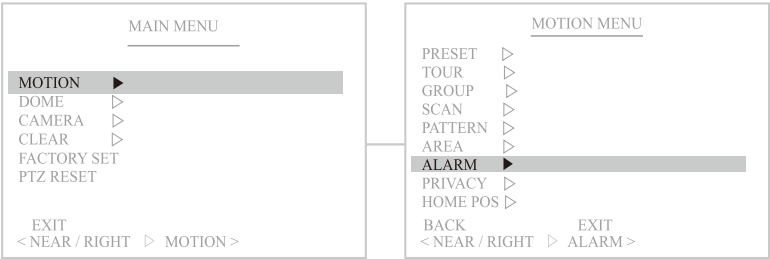

The Alarm function means that the camera moves to the programmed Preset position by the Alarm trigger. Maximum 4 Alarm functions are toured in order.

- (1) Select the Alarm number
E01 : Defined Alarm number / 01 : Undefined Alarm number


Move :  JOYSTICK Select : 

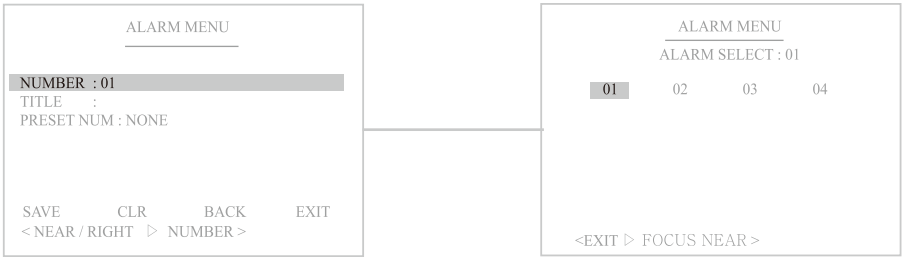

- (2) Set the Alarm TITLE

Move :  JOYSTICK Select :  or  JOYSTICK Delete :  or  JOYSTICK

It's available to set the desired TITLE, displayed on the executing screen of Alarm.

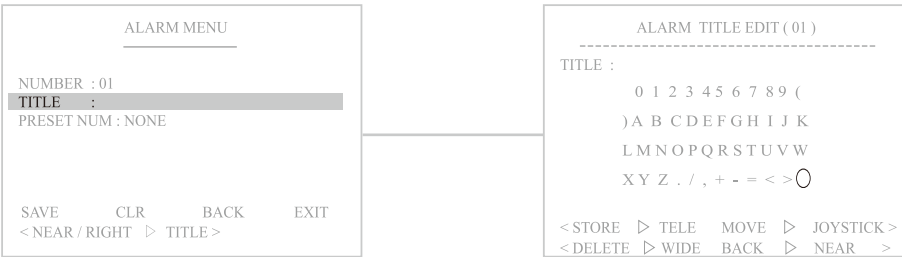

After the TITLE is set, push the NEAR button to exit.

(3) Define the Preset position with Alarm trigger

- ① Select the “Preset Num”
- ② Move and set the position
- ③ Set & Back



ALARM MENU

NUMBER : 01

TITLE :

PRESET NUM : NONE

SAVE CLR BACK EXIT

< NEAR / RIGHT > > JOYSTICK >

ALARM MENU

PRESET SELECT : 001

P001	P002	P003	P004	P005
006	007	008	009	010
011	012	013	014	015
016	017	018	019	020
021	022	023	024	025
026	027	028	029	030
031	032	033	034	035
036	037	038	039	040
041	042	043	044	045

<EXIT >FOCUS NEAR >

<SEL >NEAR /MOVE > JOYSTICK>

(4) “Save” above setting Alarm data to the memory.

(5) “CLR” means above setting Alarm data will not be saved and be cleared.

(6) “BACK” means it goes back to the previous menu :Motion.

(7) “EXIT” means it goes out of MENU

ALARM MENU

NUMBER : 01


TITLE :

PRESET NUM : NONE

SAVE CLR BACK EXIT

< NEAR > > DATA SAVE >

4. 2. 8 Privacy Zone Masking

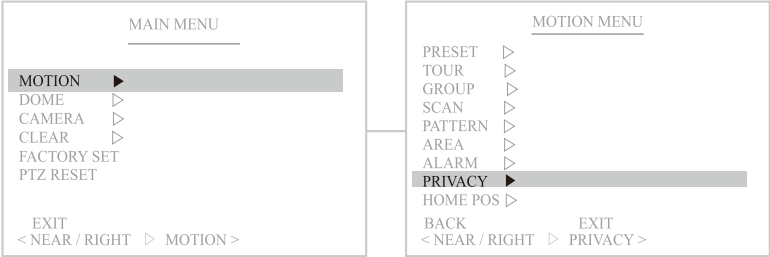


The Privacy Zone Masking function means that it sets the blocking territories to prevent camera functions for the privacy of personal reasons. Maximum of 8 Privacy Zone Masking functions are toured in order.

- (1) Select the Privacy Zone number
R01 : Defined Alarm number / 01 : Undefined Alarm number

Move :  JOYSTICK Select : 



- (2) Color Setting
Select BLACK/WHITE

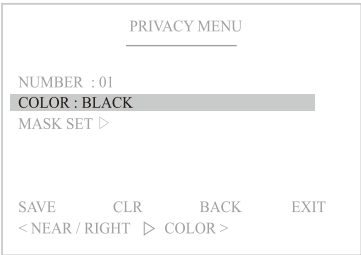

You can change the color of the privacy mask.
Choose the color you want from the menu.
※ Default color: WHITE

(3) Mask set

Move :  JOYSTICK Select :  or  JOYSTICK Delete :  or  JOYSTICK

It's available to set the desired position and size of the blocking territories freely.




After the Privacy Zone is set, push the NEAR button to go out.

(4) “Save” above settings of Privacy Zone data to the memory.


(5) “CLR” means above setting of Privacy Zone data will not be saved and be cleared.

(6) “BACK” means it goes back to the previous menu :Motion.

(7) “EXIT” means it goes out of MENU.

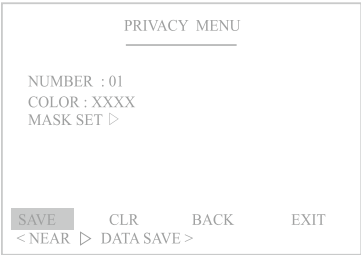

4. 2. 9 Home Position

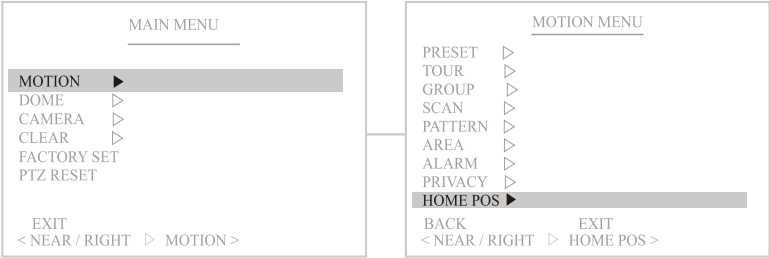

Home Position : Move to selected home position.(255+PRESET)

(1) Home Position ON/OFF setting

Move :  JOYSTICK Select : 



(2) Home Position SET

Move :  JOYSTICK Select : 



4.3 Dome Setting




Pan, Tilt, Zoom motion is adjustable in the “Dome Setting” Menu.

4.3.1 Set the Dome camera title

Move :  Select :  or  Delete :  or 

It's available to set the desired camera title.

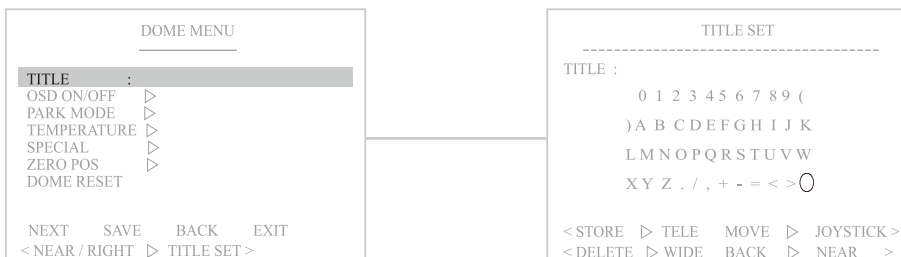


After the TITLE is set, push NEAR button to exit.

4.3.2 OSD ON/OFF Set

You can select the OSD ON to shown on the screen or clear by selecting OFF in this function.

Select :  or  Set ON :  Set OFF : 

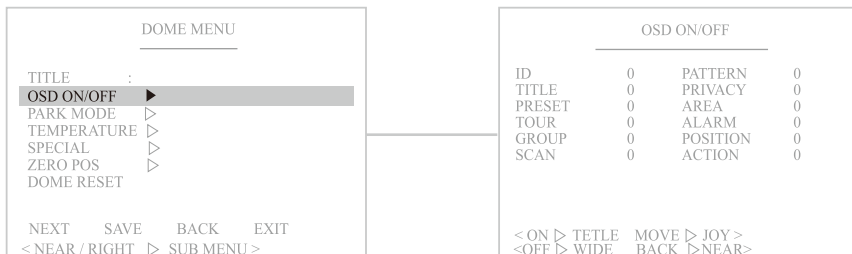

4. 3. 3 PARK MODE

This function enables to locate the camera to specific position automatically if operator doesn't operate the controller for a while.





- ON/OFF : Select ON/OFF
- TIME : Select 10 sec~1 HOUR
- MOTION : Set PRESET / TOUR / GROUP / SCAN / PATTERN / HOMEPOS
- NUMBER
PRESET : 1~255
TOUR : 1~8
GROUP : 1~6
SCAN : 1~8
PATTERN : 1~4



4. 3. 4 TEMP MODE

It shows you the current temperature and you can also set the value manually. The compulsory Fan & Heater operation is a useful function to remove humidity.

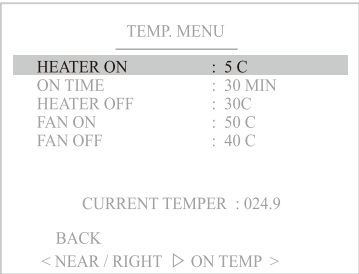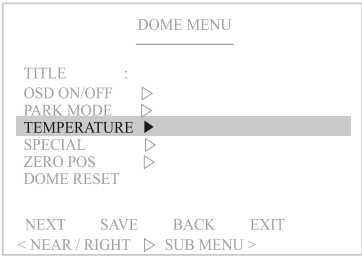


(1) HEATER ON

Set the operating temperature of the heater.(0~70℃)

Select :  or  Set ON : 

Set OFF : 

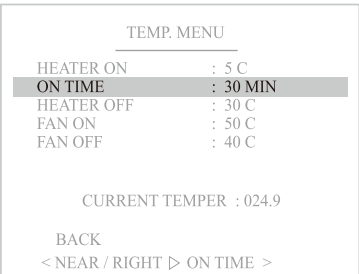


(2) ON TIME

Set the operating time of the heater.
- By 10min. (10~60 min.)

Select :  or  Set ON : 

Set OFF : 

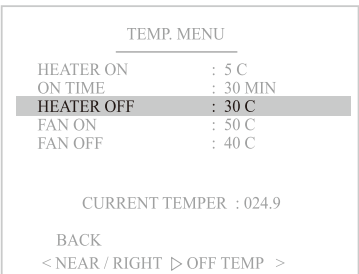

(3) HEATER OFF

Set the temperature of heater OFF. (0~70℃)

Select :  or  Set ON : 

Set OFF : 

TEMP. MENU	
HEATER ON	: 5 C
ON TIME	: 30 MIN
HEATER OFF	: 30 C
FAN ON	: 50 C
FAN OFF	: 40 C
CURRENT TEMPER : 024.9	
BACK	
< NEAR / RIGHT ▷ FAN ON >	

(4) FAN ON

Set the operating temperature of the Fan. (0~70℃)

Select :  or  Set ON :  JOYSTICK

Set OFF : 

TEMP. MENU	
HEATER ON	: 5 C
ON TIME	: 30 MIN
HEATER OFF	: 30 C
FAN ON	: 50 C
FAN OFF	: 40 C
CURRENT TEMPER : 024.9	
BACK	
< NEAR / RIGHT ▷ FAN OFF >	





(5) FAN OFF

Set the temperature of Fan OFF. (0~70℃)

Select :  or  Set ON :  JOYSTICK

Set OFF : 

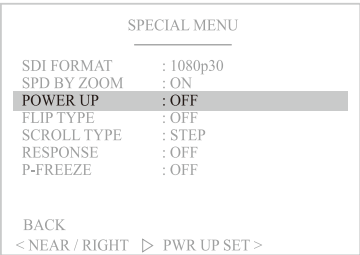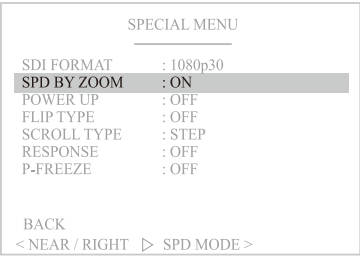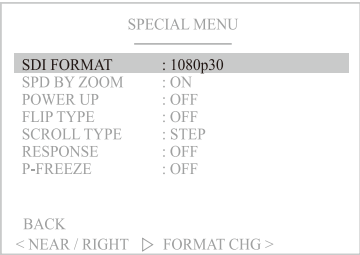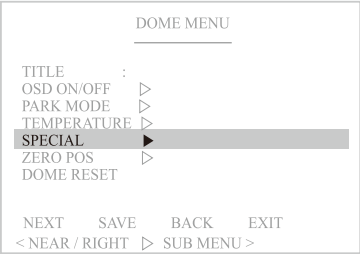


4.3.5 Special




(1) SDI FORMAT

- 1080p/30(25)fps / 1080p/60(50)fps /
720p/30(25)fps / 720p/60(50)fps




- * Video format setting depends upon the models.
- * Video format is not applied for analogue models.


Select :  or  Set ON : 

Set OFF : 

(2) Speed by Zoom




Adjust PAN/Tilt Speed by Zoom ration.
(Available to check with max zoom rate.)


Select :  or  Set ON : 


Set OFF : 

(3) POWER UP

When this function is ON, the camera memorizes the latest action and restores, it from sudden power failure.

Select :  or  Set ON : 

Set OFF : 

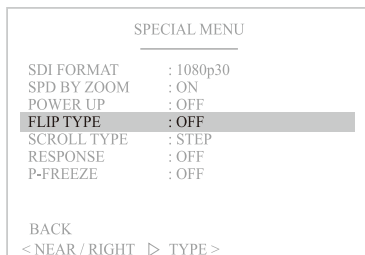


(4) FLIP TYPE

- OFF: TILT movement ranges from 0 ~ 90°
- FILP : When TILT move to 90°, PAN 180° automatically reversed moved
- DFLIP : TILT movement ranges from 0 ~ 180°
(Reversal of Image with 90° degree angle.)




Select :  or  Set ON : 

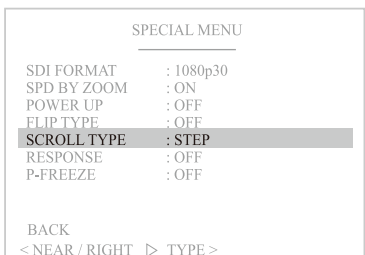Set OFF : 




(5) SCROLL TYPE

Set the cursor progress
STEP : by 1 STEP
AUTO : Continuous scroll

Select :  or  Set ON : 

Set OFF : 

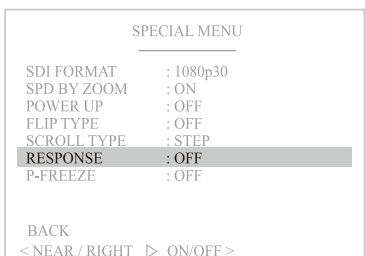

(6) RESPONSE TXD

Tx communication line to transfer the unique value of protocol response.
(Use this function when the protocol is pelco-D 5.0 EZ.)

Select :  or  Set ON : 

Set OFF : 





(7) P-FREEZE

The screen is stopped while the camera is operating presetfunction.





Select :  or  Set ON : 

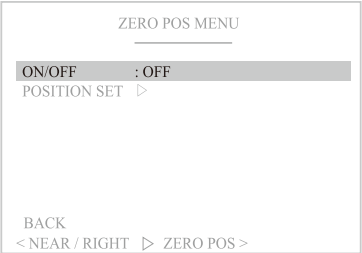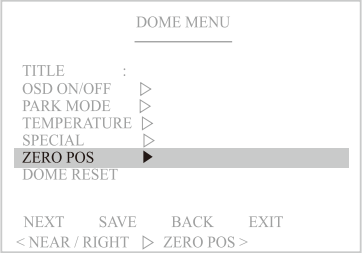Set OFF : 


4. 3. 6 ZERO POS





When select ON, the zero position is changeable.
POSITION change 000.0 / 000.0 value.

Select :  or  Set ON : 
Set OFF : 


4. 3. 7 DOME RESET

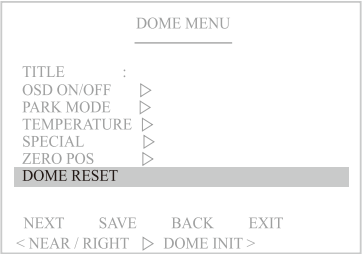


DOME MENU initialization function.

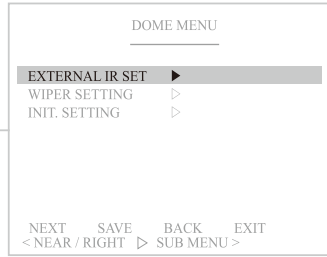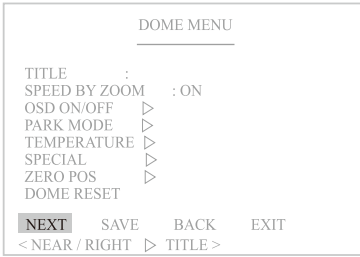

4. 3. 8 EXTERNAL IR SET

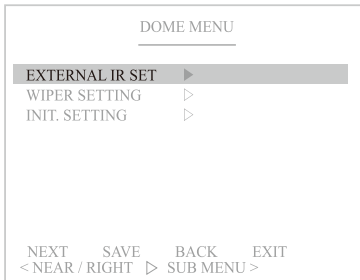

Set the IR function.

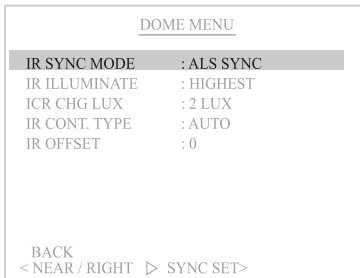

(1) IR SYNC MODE

ALS SYNC : Synchronized in visible light.

ALL ON : IR always on.


ALL OFF : IR always off.

ICR SYNC : Operate External IR connected Camera ICR

※ Factory default is ALS SYNC .

Select :  or  Set ON : 

Set OFF : 

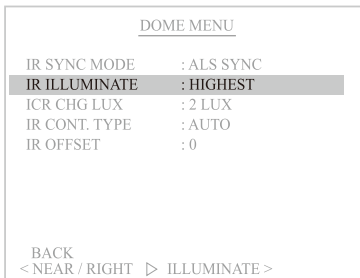

(2) IR ILLUMINATE

HIGHEST : Output the Max.IR light

HIGH : Output the hight level of IR light

LOWEST : Out put the Min. IR light

LOW : Output the low level of IR light

※ Factory default is HIGHEST.

Select :  or  Set ON : 

Set OFF : 


DOME MENU	
IR SYNC MODE	: ALS SYNC
IR ILLUMINATE	: HIGHEST
ICR CHG LUX	: 2 LUX
IR CONT. TYPE	: AUTO
IR OFFSET	: 0
BACK < NEAR / RIGHT > ICR LUX >	

(3) ICR CHG LUX

Set the Day / Night ICR illumination. (0.5 ~ 20)

※ Factory default is 2 LUX.

Select :  or  Set ON : 

Set OFF : 


DOME MENU	
IR SYNC MODE	: ALS SYNC
IR ILLUMINATE	: HIGHEST
ICR CHG LUX	: 2 LUX
IR CONT. TYPE	: AUTO
IR OFFSET	: 0
BACK < NEAR / RIGHT > IR CONT. TYPE>	

(4) IR CONT. TYPE

Select AUTO or USER mode in IR Zoom function.

※ factory default is AUTO.

Select :  or  Set ON : 

Set OFF : 


DOME MENU	
IR SYNC MODE	: ALS SYNC
IR ILLUMINATE	: HIGHEST
ICR CHG LUX	: 2 LUX
IR CONT. TYPE	: AUTO
IR OFFSET	: 0
BACK < NEAR / RIGHT > IR OFFSET>	

(5) IR OFFSET

Set the IR sensitivity. (-4~4)

※ Factory default is 0

Select :  or  Set ON : 

Set OFF : 

4. 3. 9 WIPER SETTING

DOME MENU	
EXTERNAL IR SET	>
WIPER SETTING	▶
INIT. SETTING	>
< NEAR / RIGHT > SUB MENU > NEXT SAVE BACK EXIT	

Set the wiper function.


WIPER SETTING	
WIPER MODE	: OFF MODE
WIPER POSITION	: BOTTOM
WIPER INT. TIME	: XXXXX
WIPER ON TIME	: XXXXX
BACK < NEAR / RIGHT > MODE >	

(1) WIPER MODE

Select ON MODE / OFF MODE / TIME SET to use the wiper function.
(Default : OFF MODE)

TIME SET : Wiper operates once at regular interval which is set in this menu.

Select :  or  Set ON : 

Set OFF : 

WIPER SETTING	
WIPER MODE	: OFF MODE
WIPER POSITION	: BOTTOM
WIPER INT. TIME	: XXXXX
WIPER ON TIME	: XXXXX
BACK < NEAR / RIGHT > WIPER POS>	

(2) WIPER POS.

Set wiper position function.(RIGHT, BOTTOM)

Select :  or  Set ON : 

Set OFF : 

WIPER SETTING	
WIPER MODE	: OFF MODE
WIPER POSITION	: BOTTOM
WIPER INT. TIME	: XXXXX
WIPER ON TIME	: XXXXX
BACK < NEAR / RIGHT > WIPER TIME>	

(3) WIPER INTERVAL TIME

10SEC / 20SEC / 30SEC / 1MIN / 2MIN / 4MIN / 6MIN / 8MIN /
10MIN / 20MIN / 30MIN / 1HOUR / 2HOUR / 4HOUR

The wiper will be operated on as the time set on the interval.

* The wiper will be operated during the time set on the Wiper On Time.

Select :  or  Set ON : 

Set OFF : 

WIPER SETTING	
WIPER MODE	: OFF MODE
WIPER POSITION	: BOTTOM
WIPER INT. TIME	: XXXXX
WIPER ON TIME	: XXXXX
BACK < NEAR / RIGHT > WIPER TIME>	

(4) WIPER ON TIME

1MIN / 10MIN / 30MIN / 1HOUR / 2HOUR / 4HOUR / 6HOUR /
8HOUR / ALWAYS

The wiper will be operated during the time set on the Wiper On Time.


Select :  or  Set ON : 

Set OFF : 

4. 3. 10 INIT. SETTING



This function performs re-energization of the product and the initialization operation continuously after the specified time has elapsed.

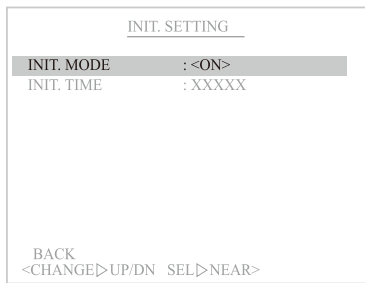

INIT. MODE : OFF, ON


(1) INIT. Setting

Set whether to use the initialization operation function when the specified time has elapsed.

※ Factory default value is OFF

Select :  or  Set ON : 

Set OFF : 

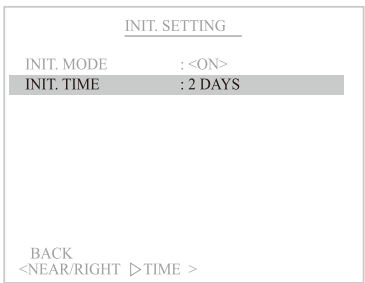

(2) INIT. TIME

Set the cycle to perform the initial operation. After the product is turned off, initialization is performed at each startup time.

12 hours / 1 day / 2 days / 3 days / 5 days


It can be selected when INIT.MODE is ON.

Select :  or  Set ON : 


Set OFF : 

4. 4 Clear Setting

Clears the PTZ position and function value. Select :  or  Set ON :  Set OFF : 

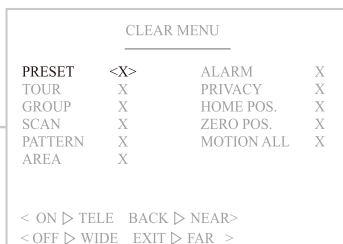

4. 5 Factory set

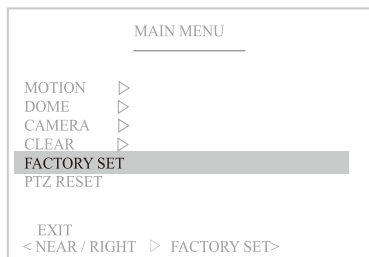


Clear the DOME, CAMERA and MOTION setting value.



Restore setting values to the factory default.
All existing setting value will be erased.

4. 6 PTZ Reset

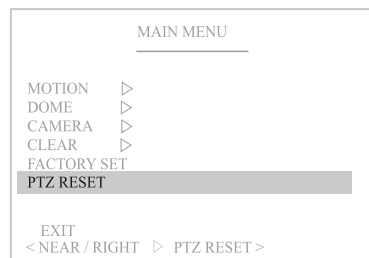

It is a reset function.

4. 7 Other Quick Operating Guide

ICR AUTO (ON) = 240 + F1 Long Preset
ICR DAY (ON) = 241 + F1 Long Preset
ICR NIGHT (ON) = 242 + F1 Long Preset
WIPER (ON / OFF) = 244 + F1 Long Preset
HEATER (ON / OFF) = 245 + F1 Long Preset
IR ZOOM (AUTO / MANUAL) = 248 + F1 Long Preset
LIGHT (ON / OFF) = 252 + F1 Long Preset
INFO (ON / OFF) = 255 + F1 Long Preset

* The keyboard shortcut of IR ZOOM
(DOME SUB MENU ->
1) IR CONT. TYPE->MANUAL
2) ICR NIGHT->ON)

Select :



5. SPECIFICATION

5.1 Mechanism Specification

5.1.1 MECHANICAL

- Pan : 360° Continuous Pan, 0.1° to 120°/sec.
- Pan Preset Speed : 360°/sec, $\pm 0.1^\circ$ Accuracy
- Tilt : -8°(352°) to 188° movement, 0.1°~80°/sec (proportional to zoom)
- Tilt Preset Speed : 250°/sec, $\pm 0.05^\circ$ Accuracy
- Weight : 4.18Kg
- Dimensions Set : 180 (Ø) x 322(mm)

5.1.2 ENVIRONMENTAL

- Construction : Aluminum
- Ingress Protection : IP66 (Outdoor Housing)
- Operating Temp : Outdoor -40°C to 60°C (-40° F to 140° F)/ with 5W Heater
- Humidity : 0% to 90% (non-condensing)
- Fan operate : 50°C on , 40°C off
- Heater operate : 5°C on , 30°C off

5.1.3 FUNCTIONS

- Preset : 255 points, less than 0.1° accuracy
- Tour : 8 programmable
- Pattern : 4 patterns for 60 second.
- Group : 6 group(Max.6 Tours are programmable in each Group)
- Scan : 8 (programmable speed and diagonal scan)
- Privacy Zone : 8 block with title (Mask)
- ID Address : Up to 255 selectable ID (Rotary switch)
- Data Communication Control : RS-485/RS-422/UCC(Only PELCO D / Baud 9600)
- Protocol : Multiple Protocol(PELCO D/P, WTX, EZP)
- Baud rate : 2400, 4800, 9600, 19200, 38400, 57600, 115200 bps selectable
- Alarm : 4 alarm
- Display : 16 Area title
- Auto Flip : OFF / AUTO / DIGITAL

5.1.4 ELECTRICAL


- Power : AC21~26V 60Hz / 50Hz(Power adaptor not included)
- Power Consumption : 2A Operation / MAX 3A
- Camera Power Consumption : 18.0W
- Heater Power Consumption : 5W
- RS-422, 485 : Dip Switch setting



5.1.5 USER CONNECTIONS




- Data communication connection : RS-422, 485 + / - Optional Control Data
- SDI connection : BNC
- Alarm Inputs : 4 Programmable
- Relay : 2 Dry Contact Output Rating: 2A @30VAC

6. DIMENSION

6. 1 DIMENSION

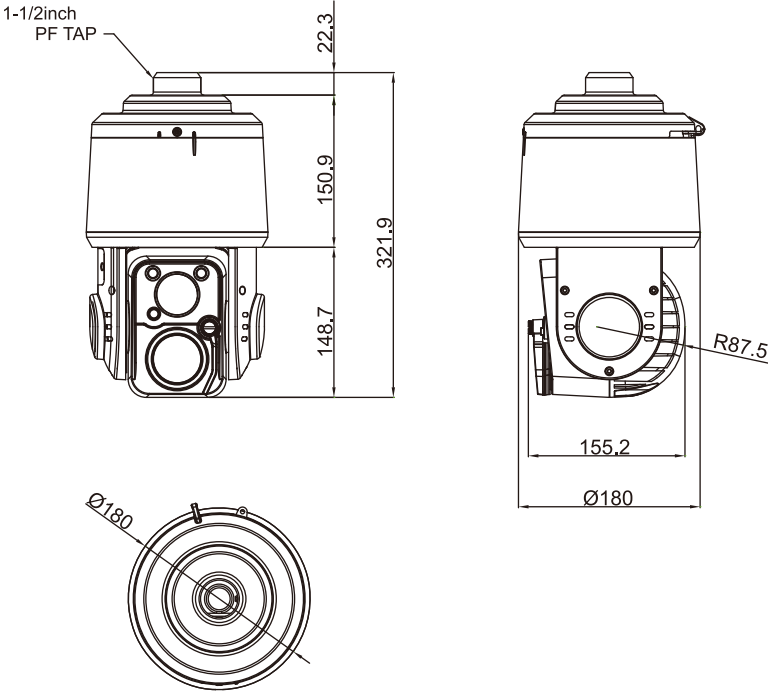

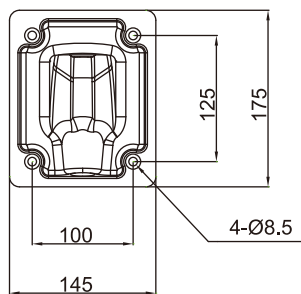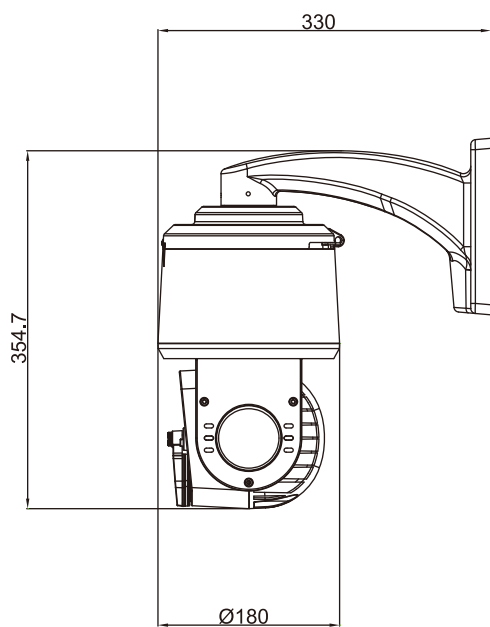

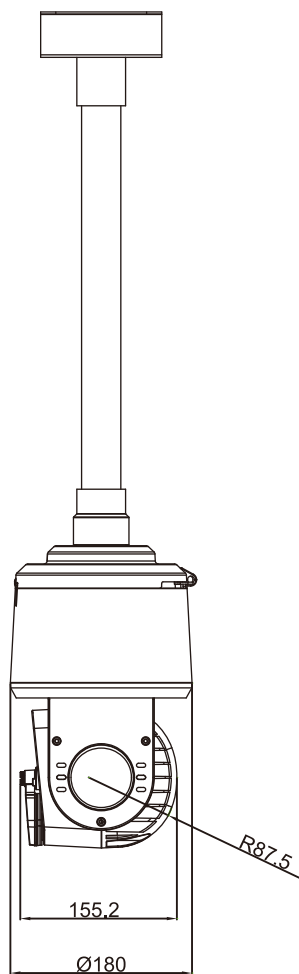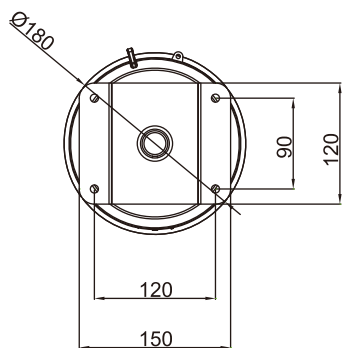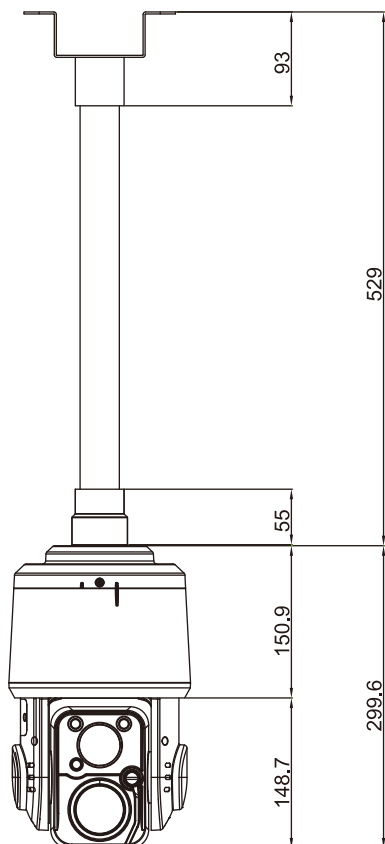

7. CONFIGURATION

7.1 Connecting to Keyboard with DVR

