


: How to set dynamic password

LSIS QUICK GUIDE

XP-Builder

How to set dynamic password

1. Please open [Project Property]-[Security Settings]
2. Check [Password device mode]
3. Fill in a [Password Device] and [Password input interval]

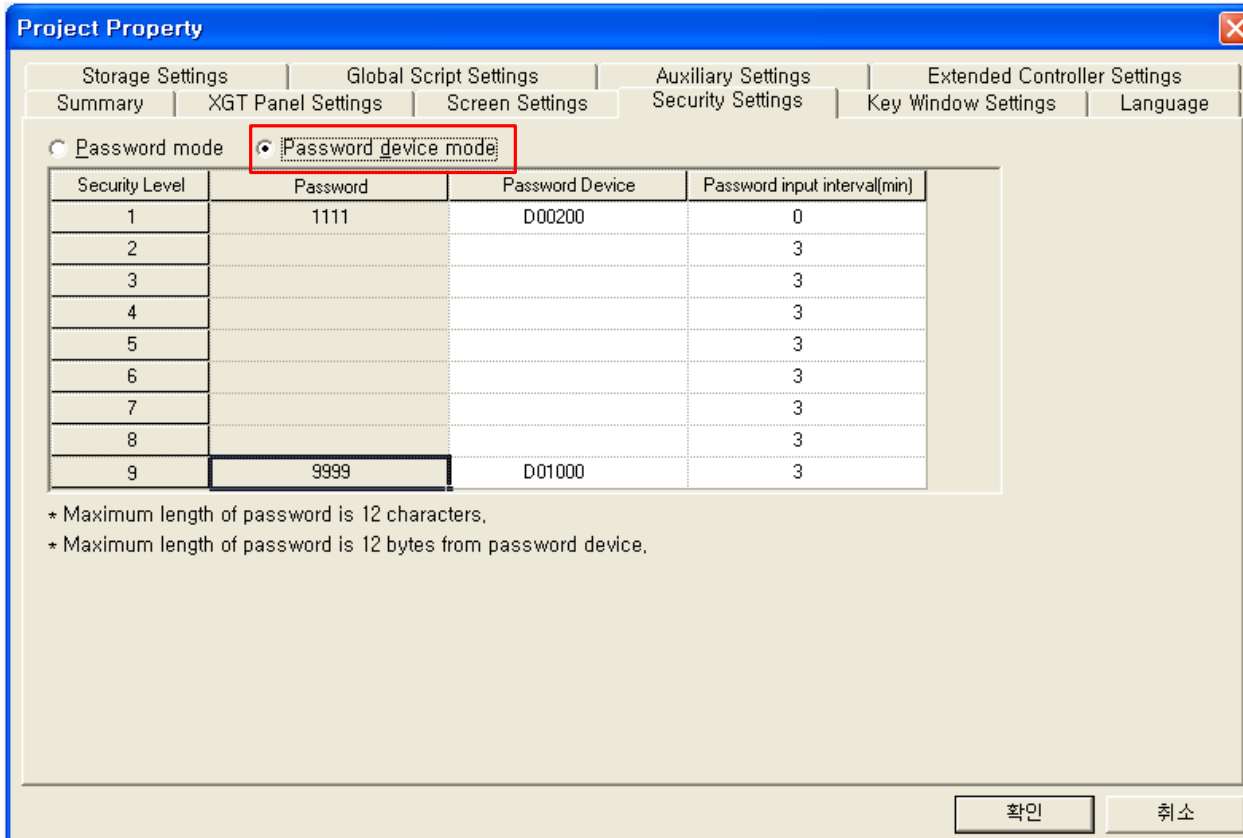

Project Property

Storage Settings | Global Script Settings | Auxiliary Settings | Extended Controller Settings
Summary | XGT Panel Settings | Screen Settings | Security Settings | Key Window Settings | Language

☐ Password mode ☒ Password device mode

Security Level	Password	Password Device	Password input interval(min)
1	1111	D00200	0
2			3
3			3
4			3
5			3
6			3
7			3
8			3
9	9999	D01000	3

* Maximum length of password is 12 characters.
* Maximum length of password is 12 bytes from password device.

확인 취소

- If you use [password device], password should change as device value.

- If you setting [password input interval] value '0', you can see Keypad when you click the button at all times.