

Orifice plate

- Only plate
- Orifice plate with ring
- Orifice flange assembly

F100 & F200 & F500





CONTENT

1. General	2
1.1 Introduction	2
1.2 Information regarding the user manual	2
1.3 Warranty	2
2. Warnings	3
3. Pre-installation inspections	4
4. Installing and operating the product	4
4-1. General	4
4-2. Minimum straight pipe section requirement	5
4-3. Direction of installation	6
4-4. Inspection	10
5. Maintenance	10
6. Disassembly and reassembly of the product	11
6-1. Disassembly of the product	11
6-1. Reassembly of the product	12
7. Transport, packaging and storage of the product	12



1. General

1.1 Introduction

The orifice plate manufactured by WISE Control Inc. is installed in the middle of a pipe where a fluid flows. The area of the orifice plate is smaller than the pipe, and the pressure differential between the front and rear of the orifice plate is used to measure flow rate.

Orifice plates are manufactured according to customer specifications.

1.2 Information regarding the user manual

- 1) The user manual contains important information for proper handling of the device. Please read this user manual carefully before installation and commissioning.
- 2) Please adhere to the safety and handling guidelines provided in this user manual. Compliance must be maintained with the applicable accident prevention and safety regulations, as well as national installation standards and accepted codes of conduct.
- 3) This user manual is part of the product, and must be made available for viewing by workers nearby the installation location at all times.
- 4) WISE Control Inc. reserves the right to modify technical elements of the product without prior notice

1.3 Warranty

The orifice plate manufactured by WISE Control Inc. has been manufactured according to individual customer requirements. The product must be stored under appropriate conditions, and the requirements in various documentation, test reports and user manuals must be observed to maintain optimal use condition.

C-QIM-2731-F01_EN_Rev.3 2



2. Warnings

Handling manual for safe use

To ensure safe and proper use of the product, please thoroughly read this handling manual before use. Improper handling may cause equipment malfunction, as well as accidents such as injury.



- 1) For safety, installation must be carried out by workers with professional expertise in instruments and electrical works.
- 2) Install the product in the use environment prescribed in the specifications
- 3) Use within the given temperature range.
- 4) Protect from excessive load, vibration or impact.
- 5) Do not move or lift the orifice plate using the name plate.

 (The name plate is intended for identification only, and transport or lifting of the product using the name plate may result in damage.)




3. Pre-installation inspections

- 1) Check the tag number of the product and confirm that the product is intended for the installation location.
- 2) Check for any welding beads or projections. Prior to installation, check the surface of the orifice plate for any denting or scratching. (If an orifice ring and orifice flange has been supplied together with the orifice plate, check the surface of the parts of the ring or flange coming in contact with the gasket for denting or scratching.)
- 3) If orifice flanges have been provided, confirm the installation locations of the upstream and downstream flanges according to the direction of the pressure taps of the orifice flange.
- 4) The inside of the pipe must be smooth and clean, and free of any foreign matter.

4. Installing and operating the product

4-1. General

Differential pressure generated by the orifice plate is discharged through connections to the upstream and downstream pressure taps. (If an orifice ring and orifice flange have been provided together, discharge occurs through the connection between the ring and the pressure taps of the flange.) The connections are designated as upstream and downstream taps based on the direction of flow of the fluid. The direction of flow of the fluid is indicated on the front of the name plate of the orifice plate. (See <Figure 1>)

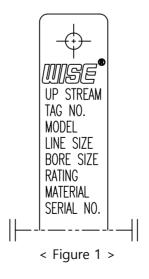

C-QIM-2731-F01_EN_Rev.3 4



4-2. Minimum straight pipe section requirement

The minimum upstream and downstream straight pipe section requirements in ISO 5167 apply.

Table 3 — Required straight lengths between orifice plates and fittings without flow conditioners

Values expressed as multiples of internal diameter, D

		Upstream (inlet) side of orifice plate															Down- stream (outlet) side of the orifice plate									
Diameter ratio	Single 90° bend Two 90° bends in any plane (S > 30D) a		Two 90° bends in the same plane: S-configuration $(30D \ge S > 10D)^a$		Two 90° bends in the same plane: S -configuration $(10D \ge S)^a$		Two 90° bends in perpendicular planes (30D > S > 5D) a		Two 90° bends in perpendicular planes (5/) > S) a, b		Single 90° tee with or without an extension Mitre 90° bend		Single 45° bend Two 45° bends in the same plane: S-configuration $(S \ge 2D)^a$		Concentric reducer 2D to D over a length of 1,5D to 3D		expander 0,5D to D over a length of		Full bore ball valve or gate valve fully open		Abrupt symmetrical reduction		Ther- mometer pocket or well ^c of diameter ≤ 0,03 <i>D</i> ^d		Fittings (columns 2 to 11) and the densi- tometer pocket	
1	:	2	3		4		5		6		7		8		9		1	10	1	1	12		13		14	
_	A e	Вf	A e	Вf	A e	Вf	A e	Вf	A e	Вf	A e	Bf	A e	Вf	Αe	Вf	A e	Вf	A e	Bf	A e	Вf	A e	Bf	A e	Вf
≤ 0,20	6	3	10	g	10	g	19	18	34	17	3	9	7	g	5	g	6	g	12	6	30	15	5	3	4	2
0,40	16	3	10	g	10	9	44	18	50	25	9	3	30	9	5	9	12	8	12	6	30	15	5	3	6	3
0,50	22	9	18	10	22	10	44	18	75	34	19	9	30	18	8	5	20	9	12	6	30	15	5	3	6	3
0,60	42	13	30	18	42	18	44	18	65 ^h	25	29	18	30	18	9	5	26	11	14	7	30	15	5	3	7	3,5
0,67	44	20	44	18	44	20	44	20	60	18	36	18	44	18	12	6	28	14	18	9	30	15	5	3	7	3,5
0,75	44	20	44	18	44	22	44	20	75	18	44	18	44	18	13	8	36	18	24	12	30	15	-5	3	8	4

NOTE 1 The minimum straight lengths required are the lengths between various fittings located upstream or downstream of the orifice plate and the orifice plate itself. Straight lengths shall be measured from the downstream end of the curved portion of the nearest (or only) bend or of the tee or the downstream end of the curved or conical portion of the reducer or the expander.

NOTE 2 Most of the bends on which the lengths in this table are based had a radius of curvature equal to 1,5D.

(ISO-5167-2 Excerpt)

S is the separation between the two bends measured from the downstream end of the curved portion of the upstream bend to the upstream end of the curved portion of the downstream bend.

b This is not a good upstream installation; a flow conditioner should be used where possible.

The installation of thermometer pockets or wells will not alter the required minimum upstream straight lengths for the other fittings.

d A thermometer pocket or well of diameter between 0,03/) and 0,13/) may be installed provided that the values in Columns A and B are increased to 20 and 10 respectively. Such an installation is not, however, recommended.

e Column A for each fitting gives lengths corresponding to "zero additional uncertainty" values (see 6.2.3).

f Column B for each fitting gives lengths corresponding to "0,5 % additional uncertainty" values (see 6.2.4).

⁹ The straight length in Column A gives zero additional uncertainty; data are not available for shorter straight lengths which could be used to give the required straight lengths for Column B.


⁹⁵D is required for $Re_D > 2 \times 10^6$ if S < 2D.




4-3. Direction of installation

The orifice plate must be installed according to the direction of flow. The installation directions in the figure below are recommended depending on the type of fluid.

- 1) Installation on gas & vapor lines
 - Installation in horizontal pipes

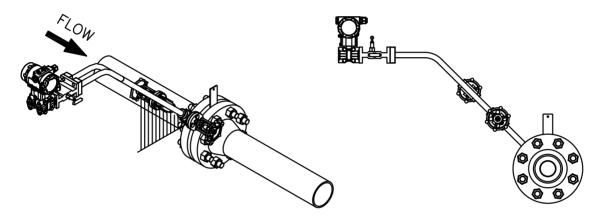


Installation in vertical pipes

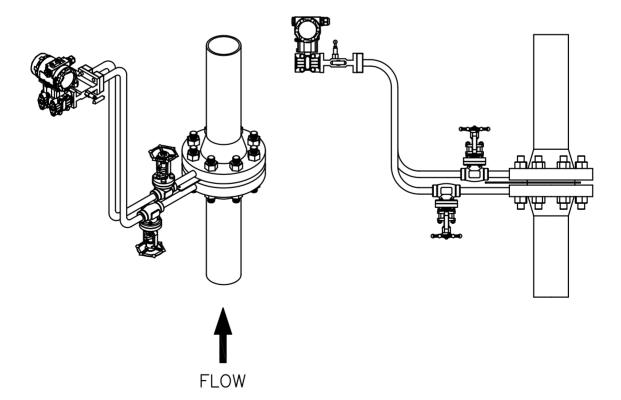

C-QIM-2731-F01_EN_Rev.3 6





- 2) Installation on liquid line
- Horizontal pipe and bottom tap

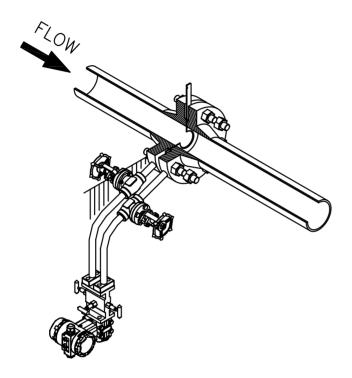

Horizontal pipe and top tap


Installation of condensate pot at the same height is recommended

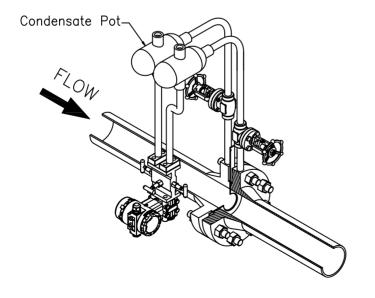

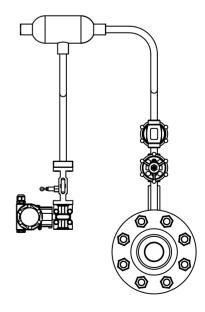




• Installation in vertical pipes

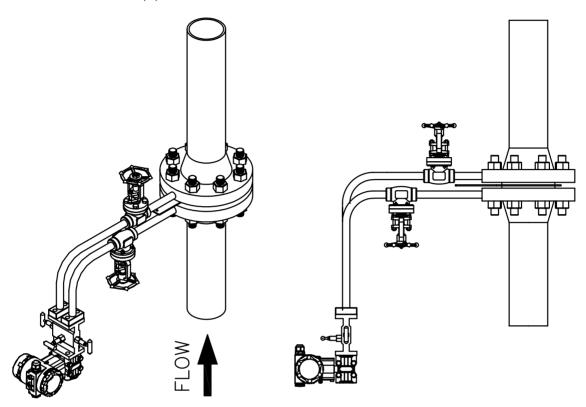


C-QIM-2731-F01_EN_Rev.3 8



- 3) Installation on steam line
- Installation in horizontal pipes

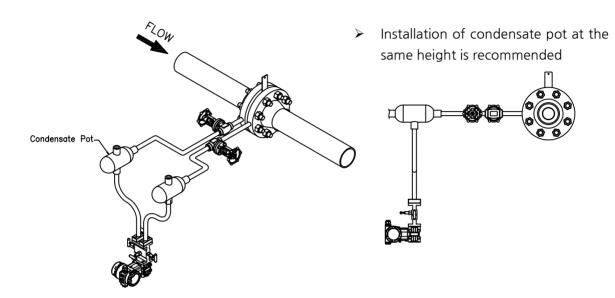

Installation in vertical pipes

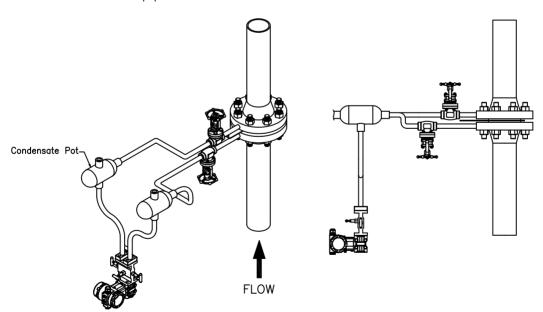

Installation of condensate pot at the same height is recommended



4-4. Inspection

- 1) Check the installation location of the orifice plate, and the direction of flow.
- 2) Check that the inner surface of the pipe is smooth and cleaned. For welded pipes, confirm that the joints have been welded in accordance with the welding procedure.
- 3) Confirm that the orifice flange forms a concentric circle with the inside of the pipeline, and that the pressure tap points have been aligned in accordance with the drawings.
- 4) All weld beads must be uniform. Ensure that projections into the inside of the pipe are kept to a minimum
- 5) Ensure that the taps and related pipes are clean prior to use. Inspect the tap holes and related pipes for welds and other obstructions. Remove obstructions as necessary.

 Observe all cleaning specifications (e.g., oxygen/pharmaceutical services).

5. Maintenance


- 1) Depending on process conditions, regularly inspect for signs of obstruction, erosion or corrosion.
- 2) Prior to beginning work, confirm that pipes have been purged of pressure and drained.
- 3) Observe power plant safety regulations at all times.
- 4) When reassembling the product after disassembly, new gaskets must be used.

C-QIM-2731-F01_EN_Rev.3




6. Disassembly and reassembly of the product

6-1. Disassembly of the product

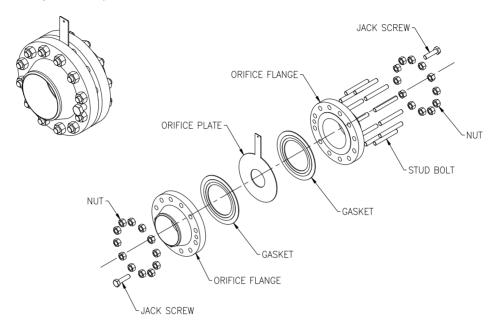

Orifice Plate & Flange Assembly

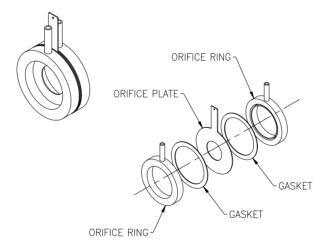

Orifice Plate & Ring

- 1) Loosen and remove the stud bolts and nuts from the flange.
- 2) For orifice flanges, lock the jack screw to separate the orifice flange from the plate.

(Does not apply to orifice rings.)

(Jack screws are not used with orifice plates of size 1 1/2" (40A) or less.)

3) Remove the orifice plate and gasket.



6-1. Reassembly of the product

- 1) Reassemble in reverse order of disassembly.
- 2) When reassembling, use new gaskets in accordance with 5.4).
- 3) When installing the orifice plate, be mindful of the upstream and downstream direction.

7. Transport, packaging and storage of the product

- 1) The product must not be exposed to humidity, dust or other contaminants.
- 2) The product must not be subjected to impact during storage.
- 3) When returning the product for repairs, safely package the product in its original packaging, and return the related documentation as well.
- 4) The product should be protected from exposure to humidity, dust and other contaminants during transport.
- 5) The product should be packaged to protect against impact during transport.
- 6) Any damage to the product during transport should be recorded in the documentation. Claims for compensation for delays in installation may be made against the transporting company.

C-QIM-2731-F01_EN_Rev.3 12



The content of this document has been painstakingly produced, but please understand that there may be typos or corrections to be made. The specifications and appearance of this product are subject to change without notice for quality improvement, and WISE reserves the right to change this. The illustrations used in this instruction manual are for illustrative purposes only and may differ from the actual product.

Yongin Factory

2022 Deogyeong-daero, Giheunggu, Yongin-si, Gyeonggi-do (Sanggaldong)

www.wisecontrol.com



A/S related Inquiries

2022 Deogyeong-daero, Giheunggu, Yongin-si, Gyeonggi-do (Sanggaldong)

webmaster@wisecontrol.com
Home page: Service
center>Technology/Quote Inquiry



WISE CONTROL INC.

#181, Gasan digital 1-ro, Geumcheongu, Seoul, (Gasan-dong, Gasan W CENTER) F19

T. 02-300-2300 F. 02-300-2400



Orifice plate

- Only plate
- Orifice plate with ring
- Orifice flange assembly

F100 & F200 & F500





목차

1. 일반사항	2
1.1 소개	
1.2 사용설명서 관련 정보	
1.3 보증	
2. 경고	
3. 제품 설치 전 점검 사항	4
4. 제품 설치 및 조작 방법	4
4-1. 기본 사항	4
4-2. 필요 최소 직선 파이프 길이	5
4-3. 설치 방향	6
4-4. 점검	10
5. 유지보수	10
6. 제품의 분해 및 재 조립	11
6-1. 제품의 분해	
6-1. 제품의 재 조립	12
7. 제품의 운송 및 포장, 보관	12



1. 일반사항

1.1 소개

㈜와이즈에서 제작하는 오리피스 플레이트(Orifice plate)는 유체가 흐르는 관로 중간에 플레이트를 설치하여, 유체의 배관 구경보다 면적을 좁게 하여 발생되는 전,후 압력 차를 통해 유량을 측정하는 유량계입니다. 오리피스 플레이트(Orifice plate)는 고객의 사양에 따라 제조되는 제품 입니다.

1.2 사용설명서 관련 정보

- 1) 본 사용설명서에는 장치의 올바른 취급에 관한 중요한 정보가 들어 있으므로 설치 및 시험 운전을 하기 전 이 사용 설명서를 주의 깊게 읽어주십시오.
- 2) 본 사용설명서에 명시된 안전 및 취급 지침을 따라주십시오. 적용 가능한 사고예방 규정과 안전 규정뿐만 아니라 국가 설치 표준 및 인정된 행동 규범을 준수해야 합니다.
- 3) 본 사용설명서는 제품 일부로써 제품 설치 장소 근처에 항상 작업자가 확인할 수 있도록 비치 되어야합니다.
- 4) ㈜와이즈는 제품의 기술적인 요소를 예고 없이 변경할 권리가 있습니다

1.3 보증

㈜와이즈에서 제작한 '오리피스 플레이트(Orifice plate)'는 각 고객의 사양에 맞추어 제작한 제품입니다. 본 제품은 적절한 장소에 보관이 이루어져야 하며, 사용하는 기간 동안 최적의 상태를 유지하려면 각종 문서와 성적서, 취급 설명서 등의 필요 조건을 반드시 준수해 주십시오.

C-QIM-2731-F01_KR_Rev.3



2. 경고

안전한 사용을 위한 취급 설명서

이 제품을 바르고 안전하게 사용하기 위하여 사용 전에 이 취급설명서를 잘 읽어주시기 바랍니다. 취급 시의 오류는 기기 고장의 원인이 되며, 상해나 사고 등의 재해가 발생할 수 있습니다.

- 1) 안전을 위해 설치는 계장, 전기공사등의 전문기술을 보유한 작업자가 실시하여야 합니다.
- 2) 본 제품은 사양서에 명시되어 있는 사용환경에 설치하십시오.
- 3) 사용 가능한 온도 범위 내에서 사용하십시오.
- 4) 무리한 하중, 진동, 충격을 가하지 마십시오.
- 5) 오리피스 플레이트의 명판을 이용하여 제품을 운반하거나 인양하지 마십시오. (명판은 식별을 위한 부분이며, 명판을 이용한 제품 운반 및 인양 시, 파손이 일어날 수 있습니다.)



3. 제품 설치 전 점검 사항

- 1) 제품의 태그 번호 및 설치될 위치의 제품인지 확인하십시오.
- 2) 용접 윤곽선, 돌출 부분 등이 없어야 하며, 설치 전에 오리피스 플레이트 표면에 찌그러짐이나 긁힘이 있는지 확인해 주십시오.

(오리피스 플레이트 외 오리피스 링 및 오리피스 플랜지가 함께 공급된 경우에는 링 또는 플랜지의 가스켓 접촉부 표면에 긁힘이나 찍힘 등이 없는지 확인하여 주십시오.)

- 3) 오리피스 플랜지가 함께 공급된 경우에는 오리피스 플랜지의 압력 탭 방향에 따라 전/후단 플랜지의 설치 위치를 확인하십시오.
- 4) 배관 내부는 부드럽고 깨끗해야 하며, 이물질이 없는지 확인해 주십시오.


4. 제품 설치 및 조작 방법

4-1. 기본 사항

오리피스 플레이트(Orifice plate)에 의해 생성된 차압은 전,후단 압력 탭의 연결로 배출 됩니다.

(오리피스 링 및 오리피스 플랜지가 함께 공급된 경우에는 링 및 플랜지의 압력 탭의 연결로 배출 됩니다.) 연결 부분은 유체 흐름 방향 기준으로 전단 탭, 후단 탭으로 구분됩니다.

유체 흐름 방향은 플레이트의 명판 전단부에 표시 됩니다.(<Figure 1> 참조)

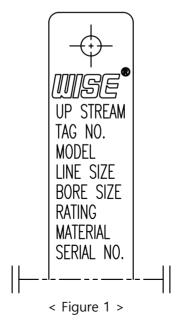

C-QIM-2731-F01_KR_Rev.3 4



4-2. 필요 최소 직선 파이프 길이

ISO 5167에 따라 필요한 전단 부 및 후단 부 직선 길이가 적용 됩니다.

Table 3 — Required straight lengths between orifice plates and fittings without flow conditioners

Values expressed as multiples of internal diameter, D

		Upstream (inlet) side of orifice plate																Down- stream (outlet) side of the orifice plate								
Diameter ratio β	Single 90° bend Two 90° bends in any plane (S > 30/)) a		Two 90° bends in the same plane: S-configuration $(30D \geqslant S > 10D)^a$		Two 90° bends in the same plane: S -configuration $(10D \ge S)^a$		Two 90° bends in perpendicular planes (30 $D \geqslant S \geqslant 5D$) a		Two 90° bends in perpendicular planes (5//) > S) a, b		Single 90° tee with or without an extension Mitre 90° bend		Single 45° bend Two 45° bends in the same plane: S-configuration $(S \ge 2D)^a$		Concentric reducer 2D to D over a length of 1,5D to 3D		Concentric expander 0,5D to D over a length of D to 2D		Full bore ball valve or gate valve fully open		Abrupt symmetrical reduction		Ther- mometer pocket or well ^c of diameter ≤ 0,03/) ^d		Fittings (columns 2 to 11) and the densi- tometer pocket	
1	:	2	3		04	4		5		6		7		8		9		0	1	1	1	2	13		14	
_	A e	Вf	A e	Вf	A e	Вf	A e	Вf	A e	Bf	Αe	Bf	A e	Вf	Αe	Вf	A e	Вf	A e	Bf	Αe	Вf	Αe	Bf	A e	Вf
≤ 0,20	6	3	10	g	10	g	19	18	34	17	3	9	7	g	5	g	6	g	12	6	30	15	5	3	4	2
0,40	16	3	10	9	10	g	44	18	50	25	9	3	30	9	5	g	12	8	12	6	30	15	5	3	6	3
0,50	22	9	18	10	22	10	44	18	75	34	19	9	30	18	8	5	20	9	12	6	30	15	5	3	6	3
0,60	42	13	30	18	42	18	44	18	65 ^h	25	29	18	30	18	9	5	26	11 🛦	14	7	30	15	5	3	7	3,5
0,67	44	20	44	18	44	20	44	20	60	18	36	18	44	18	12	6	28	14	18	9	30	15	5	3	7	3,5
0,75	44	20	44	18	44	22	44	20	75	18	44	18	44	18	13	8	36	18	24	12	30	15	:5	3	8	4

NOTE 1 The minimum straight lengths required are the lengths between various fittings located upstream or downstream of the orifice plate and the orifice plate itself. Straight lengths shall be measured from the downstream end of the curved portion of the nearest (or only) bend or of the tee or the downstream end of the curved or conical portion of the reducer or the expander.

NOTE 2 Most of the bends on which the lengths in this table are based had a radius of curvature equal to 1,5D.

- S is the separation between the two bends measured from the downstream end of the curved portion of the upstream bend to the upstream end of the curved portion of the downstream bend.
- b This is not a good upstream installation; a flow conditioner should be used where possible.
- The installation of thermometer pockets or wells will not alter the required minimum upstream straight lengths for the other fittings.
- d A thermometer pocket or well of diameter between 0,03/) and 0,13/) may be installed provided that the values in Columns A and B are increased to 20 and 10 respectively. Such an installation is not, however, recommended.
- e Column A for each fitting gives lengths corresponding to "zero additional uncertainty" values (see 6.2.3).
- f Column B for each fitting gives lengths corresponding to "0,5 % additional uncertainty" values (see 6.2.4).
- 9 The straight length in Column A gives zero additional uncertainty; data are not available for shorter straight lengths which could be used to give the required straight lengths for Column B.
- 95D is required for $Re_{\bar{D}} > 2 \times 10^6$ if S < 2D.


(ISO-5167-2 발췌)




4-3. 설치 방향

오리피스 플레이트(Orifice plate)는 유체 흐름 방향에 따라 설치 되어야 하며, 설치 방향은 유체의 종류에 따라 아래 그림과 같이 설치하는 것을 권장 합니다.

- 1) GAS & Vapor Line에 설치하는 경우
 - 수평 배관 적용 시

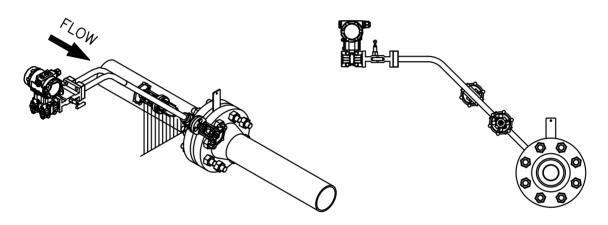


● 수직 배관 적용 시

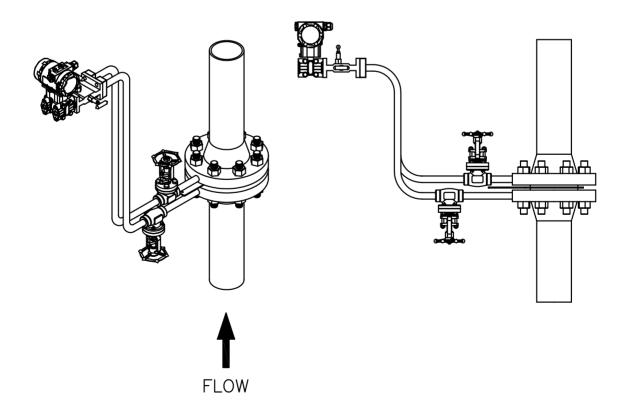


C-QIM-2731-F01_KR_Rev.3 6



- 2) Liquid Line에 설치하는 경우
 - 수평 배관 & 하단 Tap 적용 시

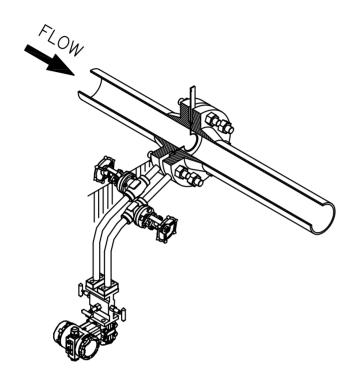


● 수평 배관 & 상단 Tap 적용 시

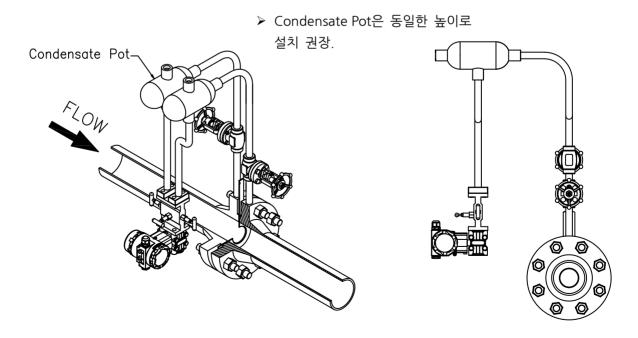




● 수직 배관 적용 시

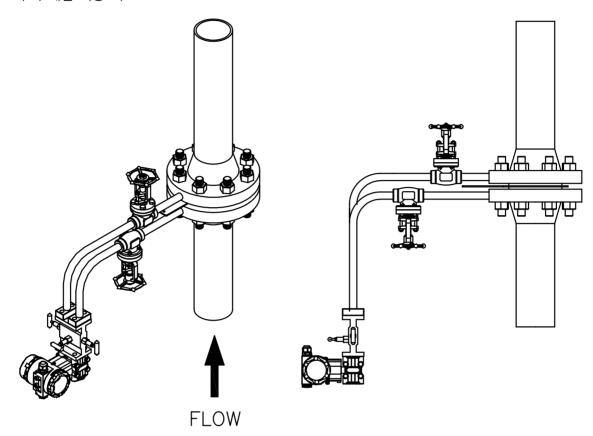


C-QIM-2731-F01_KR_Rev.3 8



- 3) Steam Line에 설치하는 경우
 - 수평 배관 적용 시

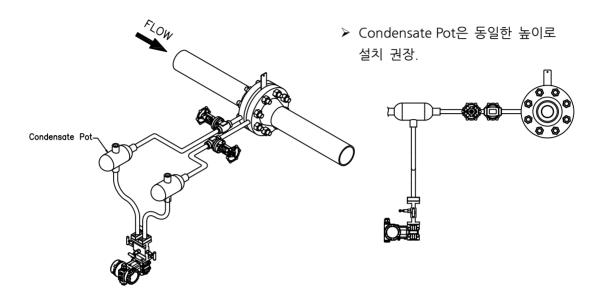

● 수직 배관 적용 시

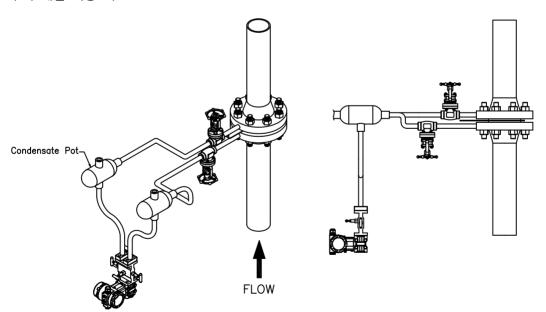

➤ Condensate Pot은 동일한 높이로 설치 권장.



4-4. 점검

- 1) 오리피스 플레이트의 설치할 위치를 확인한 후 유체 방향을 확인하십시오.
- 2) 파이프 내부 표면이 매끄럽고 깨끗한지 확인해야하며, 용접 타입의 경우, 연결부가 용접 절차에 따라 이루어졌는지 확인하십시오.
- 3) 오리피스 플랜지가 파이프라인의 내부와 동심원을 이루며 압력 탭 지점이 도면에 따라 정렬되었는지 확인합니다.
- 4) 모든 용접 윤곽은 균일 해야 합니다. 파이프 내부의 돌출 부분이 최소로 유지되도록 주의하십시오.
- 5) 탭 및 관련 배관은 사용 전 깨끗한지 확인해야 합니다. 탭 구멍 및 관련 파이프에 용접 지점 또는 기타 막힘이 없는지 점검하십시오. 필요한 경우 막힘을 제거할 수 있습니다. 모든 세척 사양(예: 산소/제약 서비스)을 준수하십시오.

5. 유지보수


- 1) 공정 조건에 따라 막힘, 침식 또는 부식의 징후가 있는지 주기적으로 확인하십시오.
- 2) 작업을 시작하기 전에 파이프 내부 압력을 제거하고 배수되었는지 확인하여야 합니다.
- 3) 항상 발전소 안전 규정을 준수하십시오.
- 4) 제품 분해 후 재 조립할 때 반드시 새 가스켓을 사용해야 합니다.

C-QIM-2731-F01_KR_Rev.3




6. 제품의 분해 및 재 조립

6-1. 제품의 분해

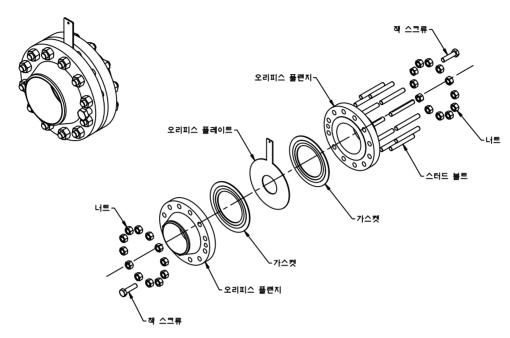

오리피스 플레이트 및 플랜지 (Orifice Plate & Flange Assembly)

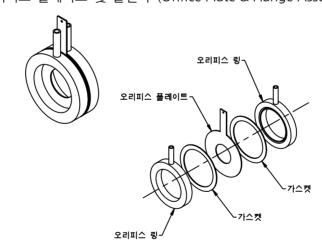

오리피스 플레이트 및 링 (Orifice Plate & Ring)

- 1) 플랜지에서 스터드 볼트와 너트를 풀어 제거합니다.
- 2) 오리피스 플랜지의 경우 잭 스크류를 잠가 오리피스 플랜지와 플레이트 사이를 이격시킵니다. (오리피스 링 의 경우에는 해당사항 없습니다.)

(잭 스크류는 1 1/2"(40A) 이하 사이즈의 오리피스 플랜지에는 적용되지 않습니다.)

3) 오리피스 플레이트와 가스켓을 제거합니다.

11



6-1. 제품의 재 조립

- 1) 재 조립할 때, 분해의 역순으로 조립합니다.
- 2) 재 조립할 때, 5. 4) 에 따라 새 가스켓을 사용해야 합니다.
- 3) 오리피스 플레이트의 전단부 와 후단부 방향에 주의하여 설치해야 합니다.

7. 제품의 운송 및 포장, 보관

- 1) 제품은 습기, 먼지 및 기타 오염 물질에 노출되지 않아야 합니다.
- 2) 제품은 충격에 노출되지 않도록 보관되어야 합니다.
- 3) 수리를 위한 반품의 경우 원래의 포장 상태로 안전하게 포장하고 관련 서류도 함께 반환해야 합니다.
- 4) 운송 도중 제품이 습기나 먼지, 기타 오염원에 노출되지 않도록 해야 합니다.
- 5) 운송 도중 제품이 충격에 노출되지 않도록 포장하여야 합니다.
- 6) 운송 중에 손상된 제품은 문서에 기록되어야 합니다. 그리고 설치 지연에 따른 모든 보상은 운송 회사에 청구할 수 있습니다.

C-QIM-2731-F01_KR_Rev.3 12



본 설명서의 내용은 심혈을 기울여 제작되었지만, 오탈자 또는 수정해야 할 내용이 있을 수 있으니 이점 양해하여 주시기 바랍니다. 본 제품의 규격 및 외관은 품질 향상을 위해 사전 통보 없이 변경될 수 있으며, ㈜와이즈는 이에 대한 변경 권리를 가집니다. 본 사용설명서에서 사용하는 그림은 예시를 위한 것으로 실제와 다를 수 있습니다.

용인공장

경기도 용인시 기흥구 덕영대로 2022 (상갈동)

www.wisecontrol.com



A/S 관련문의

경기도 용인시 기흥구 덕영대로 2022 (상갈동)

webmaster@wisecontrol.com 홈페이지: 고객센터〉기술/견적문의

㈜와이즈 서울사무소

서울특별시 금천구 가산디지털1로 181 (가산동, 가산 W CENTER) 19층 T. 02-300-2300 F. 02-300-2400

