# tissin

# TS700 Series Instruction Manual





# **Table of Contents**

1	Intr	oduction4
	1.1	General information for the user 4
	1.2	Limited warranty and disclaimer 4
	1.3	Requirement for safety 5
	1.4	Basic safety instructions for use in Ex area 6
		1.4.1 Conditions to maintain intrinsically safety (Ex i) 6
		1.4.2 Intrinsically safety (Ex i) Certificate 6
2	Pro	duct Description7
	2.1	Function 7
	2.2	Features 7
	2.3	Options 7
	2.4	Applications 7
	2.5	Label 8
	2.6	Product Code 9
	2.7	Specification 10
	2.8	Structure 11
		2.8.1 External structure 11
		2.8.2 Internal structure 12
	2.9	System configuration 13
	2.10	Principle of operation 13
	2.11	Product Dimension 14
		2.11.1 TS700 standard type 14
		2.11.2 TS700 with limit switch type 14
		2.11.3 TS700 feedback shaft connection 14
3	Ins	tallation 15
	3.1	Before installation 15
	3.2	TS700L installation 15
		3.2.1 Notes on installation 15
		3.2.2 Effective rotation angle range of feedback lever 16
		3.2.3 Lever type and dimension 16
		3.2.4 Bracket Installation 17
		3.2.5 Dimension after installation 17
	3.3	TS700R installation 18
		3.3.1 TS700R installation examples 18
		3.3.2 TS700R bracket installation components 18
		3.3.3 TS700R installation steps 19
	3.4	TS720 Remote type installation 21
	3.5	Option module Installation 22

		3.5.1	Position transmitter module(PTM) Installation	22
		3.5.2	HART communication module Installation	22
		3.5.3	Limit switch module Installation	23
		3.5.4	How to adjust limit switch cam	24
	3.6	How to	replace Air Filter	25
	3.7	Orifice	installation	26
4	Pne	eumat	tic connection	27
	4.1	Air pre	essure condition	27
	4.2	Pneun	natic port Description	27
	4.3	Air cor	nnection	28
		4.3.1	TS700L air connection	28
		4.3.2	TS700R air connection	28
5	Ele	ctrica	Il connection	29
	5.1	Termir	nal description	29
	5.2	Wiring	diagrams	30
		5.2.1	Power and Feedback signal connection	30
		5.2.2	Mechanical Limit switch connection	30
		5.2.3	Proximity Limit switch connection	30
6	Cal	ibrati	on	31
	6.1	LCD d	escription	31
	6.2	Button	description	32
	6.3	How to	quickly perform Auto calibration	33
		6.3.1	Auto calibration Steps	33
	6.4	Softwa	are map	34
	6.5	Main n	nenu Description	35
	6.6	Main p	parameter menu Description	36
	6.7	Subme	enu Description	37
		6.7.1	TUNNING	37
		6.7.2	PARAMETR	39
		6.7.3	DEVICE P	41
		6.7.4	INFOMATN	44
		6.7.5	DIAGNOST	45
		6.7.6	EMERGNCy	48
7	Err	or co	de and Troubleshooting	49
	7.1	Error o	code during Auto calibration	49
	7.2	Error o	code during operation	51

### 1 Introduction

### 1.1 General information for the user

This instruction includes installation, operation, maintenance, and parts information for Tissin TS700 Valve Positioner. Keep these instructions in a location which is easily accessible to every user and make these instructions available to every new owner of the device.

- Installation, commissioning and maintenance of the product can only be performed by trained specialist personnel who have been authorized by the plant operator to do so.
- Before installing or commissioning, be sure to read and thoroughly understand the product manual and operate the product properly.
- Operators must strictly observe the applicable national regulations with regards to installation, function tests, repairs, and maintenance of electrical products.
- Warnings and Cautions must be observed to prevent operator injury or damage to valve parts.

The manual can be altered or revised due to hardware of software upgrades without any prior notice. Please visit our website ( www.tissin.co.kr ) and check the latest documentation.

### 1.2 Limited warranty and disclaimer

- This product has been fully inspected and shipped through a thorough quality inspection procedure. The manufacturer warranty period of the product is 18 months after the product is shipped from Tissin in Korea.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Using the device in a manner that does not fall within the scope of its intended use, disregarding this manual, using under unqualified personnel, or making unauthorized alterations releases the manufacturer from liability for any resulting damage. This renders the manufacturer's warranty null and void.

### 1.3 Requirement for safety

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. These safety instructions are intended to prevent hazardous situations and/or equipment damage. For the safety, it is important to follow the instructions in the manual.

# **↑** WARNING

Failure to observe the warning may result in serious injuries or death.

# **A** CAUTION

Failure to observe this warning may result in damage to the device or personal injury.

# **⚠** NOTICE

Failure to observe the warning may result in damage to the device or may degrade performance.

# **CAUTION**

- Only trained and authorized person should operate the machinery and the equipment.
- Do not use this positioner out of the range of its specifications as this can cause failure.
- Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
- Before loosening the pneumatic lines and valves, turn off the pressure and vent the pneumatic lines.
- Observe applicable accident prevention and the safety regulations for electrical equipment.
- Before handling the device or equipment, turn off the power supply and secure it from re-activation.

### 1.4 Basic safety instructions for use in Ex area

To prevent the risk of explosion, observe not only the basic safety instructions in the respective operating instructions for operation in the Ex area, but also the following.

# 

- Observe the applicable safety regulations (also national safety regulations) as well as the general rules of technology for construction and operation.
- Make sure that the device is suitable for the area of use.
- Check the positioner's certified and permitted explosion proof range.
- Close all unnecessary Cable Gland with the locking screws approved by the explosion site.

### 1.4.1 Conditions to maintain intrinsically safety (Ex i)

# **MARNING**

- Make sure to connect "Intrinsic safety" type protection device to intrinsically safe circuit only.
- Observe the specifications for the electrical data on the certificate and in technical data.
- In order to maintain intrinsically safe protection, be sure to use a barrier that meets the following specifications.

Barrier specifications	Ui	li	Pi	Ci	Li
Main power	28V	101mA	707mW	0.6nF	6uH
Position transmitter, Alarm1, Alarm2, Limit Switch(Dry contact type)	28V	101mA	707mW	0.6nF	6uH
Limit Switch (Proximity type)	16V	26mA	34mW	30nF	50uH

Note: Please refer to the relevant certificate for details.

### 1.4.2 Intrinsically safety (Ex i) Certificate

Evaluation for the certificate is in progress now.

# **2** Product Description

### 2.1 Function

Smart valve positioner TS700 series controls the valve stroke in response to an input signal of 4~20mA DC from the control panel, DCS or calibrator.

### 2.2 Features

- Fail freeze function
- Zero air consumption when standby signal
- Prevents circuit board corrosion by external air exhaust design
- Built in air filter (5 micron) for protect PIEZO valve
- LCD and 4 button local control
- · Quick and easy calibration
- PST and alarm function
- Built-in self-diagnostic function
- Strong vibration resistance and impact resistance

# 2.2 Options

Optional functions can be added simply by installing modules.

- Position transmitter (4~20mA DC Feedback signal)
- HART communication (Ver. HART 7)
- Limit switch (Mechanical or Proximity type)
- Remote control type (TS720)

### 2.4 Applications

TS700 is mounted on a pneumatic control valves and is used for fluid control of industrial parts.

- · Oil and gas
- Chemicals
- Power plant
- Paper
- Water treatment
- Pharmaceutical
- Printing and dyeing processing
- Food and beverage
- Etc.

# 2.5 Label

SMART POSITIONER				
MODEL No.	TS700LSn00000	C€		
SERIAL No.	2201200	6		
OPERATING TEMP.	-25°C ~ +80°C			
EXPLOSION PROOF	Non-Explosion Proof			
WEATHER PROOF	IP66			
INPUT SIGNAL	4~20mA DC			
SUPPLY PRESSURE	0.14 ~ 0.7MPa (1.4 ~ 7 bar)			
#397, Seokcheon-ro, Ojeong-gu, Bucheon-si, Gyeonggi-do, Korea  Made in Korea  tissin				

Item	Description
MODEL No.	Indicate the model number.
SERIAL No.	Indicate the serial number.
OPERATING TEMP.	Indicate the allowable operating temperature.
EXPLOSION PROOF	Indicate the certified explosion proof grade.
EXPLOSION PROOF TEMP.	Indicate the ambient temperature range for the explosion proof. This temperature range must be observed when using in explosion-proof areas.
WEATHER PROOF	Indicate the enclosure grade.
INPUT SIGNAL	Indicates input current signal range.
SUPPLY PRESSURE	Indicate the allowable input supply pressure range.
Ui, Ii, Pi, Ci, Li	Indicate required barrier specification for intrinsically safety circuit configuration.  Please refer to the certificate for the detailed specifications.

# 2.6 Product Code

Model	TS700									
Standard type	TS700									
Remote type	TS720									
Stainless steel 316	TS705									
Motion type	Linear	L								
	Rotary	R	]							
Acting type	Single		S							
Franksian mass	Double		D							
Explosion proof type	Non-explosion pr	roof		Ν						
•	ATEX & IECEX			A						
	CCC & NEPSI KCs			C K						
Connection type	Conduit entry	Air co	nnect		J					
connection type	G(PF)1/2	PT1		LIOII	1					
	G(PF)1/2		, . Γ1/4		2					
	NPT1/2		· 1, 1 Γ1/4		3					
	M20 <sup>′</sup>		Γ1/4		4					
	M20	G1/	4		5					
Lever (Linear type)	10~80mm					1				
	70~150mm					2				
	Adapter type (30)					3				
	Adapter type (70)					4				
<b>Lever</b> (Rotary type)	M6 x 39L (Fork le	ever typ	e)			1				
	NAMUR type					5				
Ambient Temp.	-25~80℃						S			
	-40~80°C						L			
Communication	None							0		
	4-20mA Position	transmi	tter					1		
	HART							2		
	HART with 4-20m	nA Posit	ion tr	ansm	itter			3		
Limit switch	None								0	
(For TS700	Mechanical type				М					
& TS705)	Proximity type				Р					
	With dome cover	(withou	ut Lim	nit sw	itch)				D	
Cable length	5m				1					
(For TS720)	10m			2						
	User define (Less	than 20	)m)						Χ	]
Fail Position	Fail Freeze type									F
	Fail Safe type									S

# 2.7 Specification

Model		TS700	TS705		
Input sign	al	4~20mA DC			
Impedano	ce	500Ω (20mA DC)			
Supply pr	essure	0.15~(	D.8MPa		
Stroke		10~150mm(Linear typ	pe), 0~90°(Rotary type)		
Air conne	ction	PT1/4, NP	PT1/4, G1/4		
Gauge co	nnection	PT1/8,	NPT1/8		
Conduit		G1/2, NP	T1/2, M20		
Explosion	proof type	In progr	ress now		
Enclosure	)	IP	266		
	Acting Temp.	-25°C ~+80°C (Standard type),			
A 1. ' 1		-40 $^{\circ}$ C $^{\sim}$ +80 $^{\circ}$ C (Low temp type)			
Ambient Temp.	Explosion proof Temp.	In progr	ress now		
	LCD operating Temp.	-30℃ ~+85℃			
Linearity		±0.5% F.S.			
Sensitivity	У	±0.29	% F.S		
Hysteresi	S	±0.5% F.S			
Repeatab	oility	±0.3°	% F.S		
Air consu	mption	Below 0.01 LPM (Sup.=0.15MPa)			
Required	air quality	Class 4 (ISO8573-1)			
Flow capa	acity	Over 75 LPM (Sup.=0.15MPa)			
Material		Aluminum die cast	Stainless steel 316		
Weight		1.6 kg	4.0 kg		


# Option specification

Option	Item	Specification
HART	HART version	HART 7
Position transmitter	Wire connection type	2 Wires
Position transmitter	Supply voltage	10~30V DC
Limit switch	Mechanical type	OMRON D2F-LA AC125V, 3A, DC30V, 2A
LITHI SWIICH	Proximity type	P+F NJ1,5-F-N DC8.2V 8.2A

**Note**: Please contact our sales department for other specifications.

### 2.8 Structure


### 2.8.1 External structure

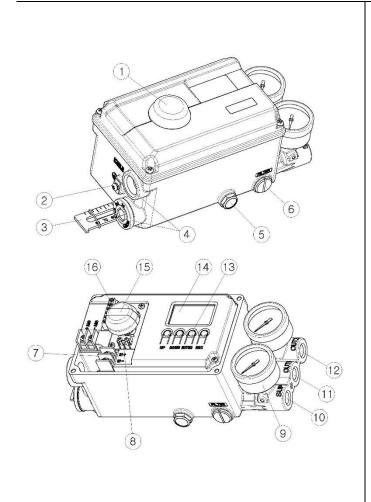

- ① Dome cover
- 2 External ground bolt
- ③ Feedback lever
- 4 Conduit
- 5 Vent filter
- 6 Air supply filter
- ⑦ Power terminal block
- 8 Limit switch
- 9 Pressure gauge
- ⑤ Supply port
- ① OUT1 port
- ② OUT2 port
- (13) Button
- 14 LCD
- Dome indicator
- 6 Limit switch terminal block

**Note:** ⑤ Dome indicator is only mounted on the product with limit switch option.

### 2.8.2 Internal structure

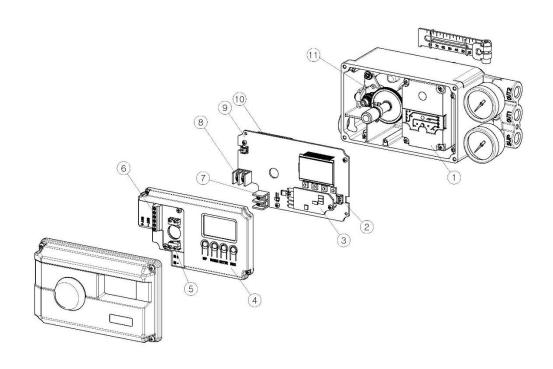


- ① PIEZO valve
- ② Button
- ③ Position transmitter module (Option)
- 4 PCB cover
- 5 Limit switch (Option)
- 6 Limit switch terminal block
- ⑦ Power terminal block

- 8 Feedback terminal block (Option)
- 9 Main PCB
- ① HART module (option)
- 11 Potentiometer


### 2.9 System configuration

Basically, the control valve system consists of a positioner for controlling the pneumatic pressure of the actuator, an actuator for controlling the opening of the valve, and a valve for controlling the flow of the fluid.

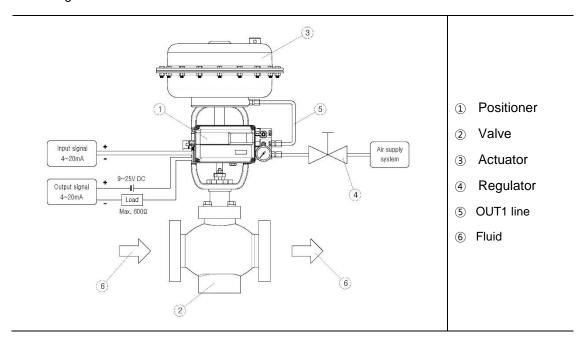


### 2.10 Principle of operation

TS700 receives 4-20mA input signal of the control room, micro-processor (CPU) compares input signal with position feedback through potentiometer and sends control signal to I/P conversion module torque motor, torque motor converts it to a pneumatic signal to controls PIEZO valve to controls the opening of the control valve by converting output pressure of OUT1 and OUT2.

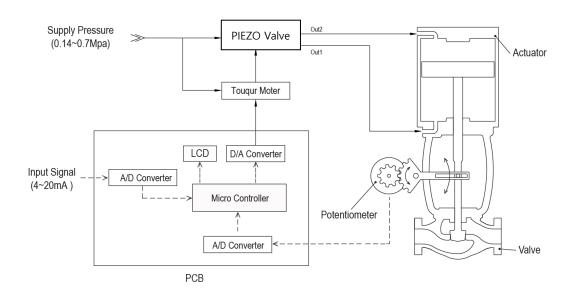


# 2.11 Product Dimension


### 2.11.1 TS700 standard type

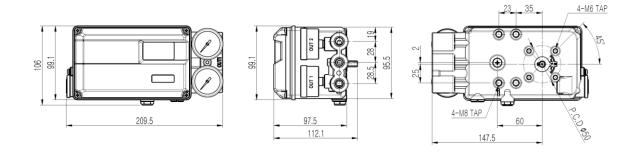

# 2.11.2 TS700 with limit switch type

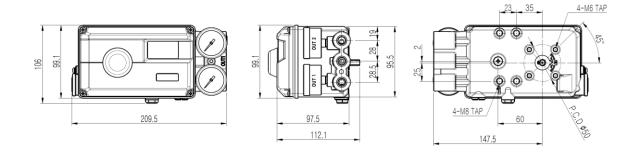

### 2.11.3 TS700 feedback shaft

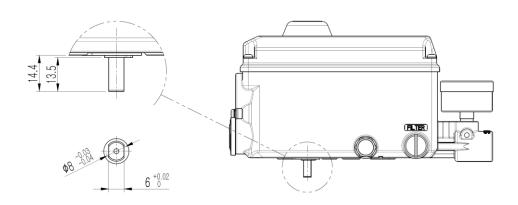

# 3 Installation

### 3.1 Before installation

### **MARING**

- Make sure if TS700 is appropriate to the valve and actuator installation conditions and the site requirements specifications before installation.
- If the installation state is not correct, TS700 control characteristics may be degraded.

### 3.2 TS700L installation


### 3.2.1 Notes on installation

When make the mounting bracket and connecting the lever to the stem connection pin, be sure to observe the following two points.

If failure to observe the followings, it will affect the product performance such as linearity.

# ∧ NOTICE

- ① When the valve stroke is 50%, the feedback lever should be horizontal.
- ② When the valve stroke is 50%, the stem connection pin must be located at the numeric position marked on the feedback lever that is corresponding to the valve stroke.

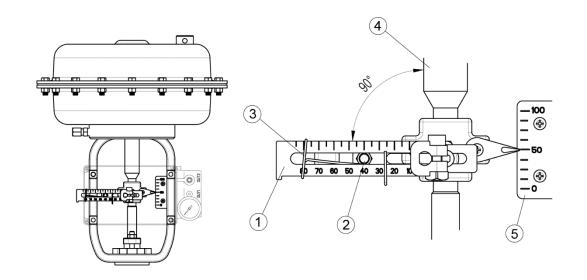

- 1 Feedback lever
- 2 Stem connection pin
- 3 Pin fixing spring

- 4 Actuator stem
- 5 Valve opening indicator


### 3.2.2 Effective rotation angle range of feedback lever

The effective rotation angle of TS700L lever is respectively 30° upward and downward that is based on horizon.

Follow 3.2.1 notes, effective rotation angle can be maintained to achieve the best performance.

### ♠ NOTICE

- If the rotation angle range is too small during operation, the performance of products such as linearity may be degradation.
- If the rotation angle range is too big during operation, may damage the product or cause malfunctions.

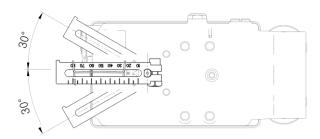


### 3.2.3 Lever type and dimension

The numeric positions marked on the feedback lever correspond to the valve stroke, and the stem connection pin must be connected to the corresponding marked location.


Lever No.	Valve stroke	Dimensions
No.1	10~80mm	73.61
No.2	70~150mm	02 08 06 001 011 021 021 01 01 0S1 138.56
No.3	10~30mm (For the tube less type actuator)	35
No.4	10~70mm (For the tube less type actuator)	01 07 05 09 04 09 04 75

### 3.2.4 Bracket Installation

Refer to the TS700L drawing (refer to 2.11.1) and actuator drawing, please make appropriate bracket and install the positioner on the actuator.

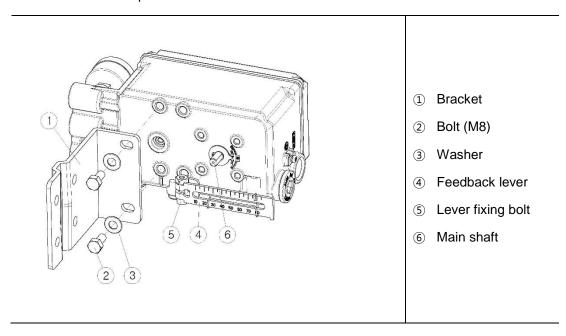

### 3.2.5 Dimension after installation

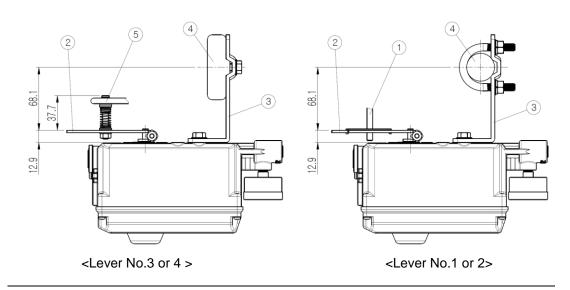


- ① Stem connection pin
- ② Feedback lever
- ③ Bracket

- 4 Actuator york
- 5 Lever adapter

### 3.3 TS700R installation


### 3.3.1 Rotary type installation examples

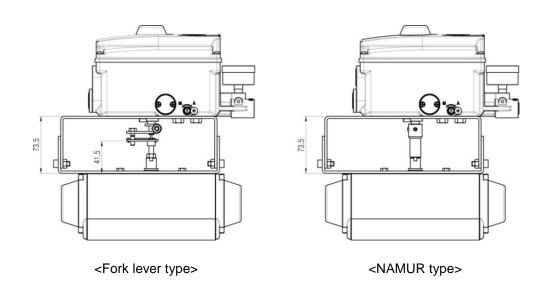

### 3.3.2 Rotary type bracket installation components

Components No.1~9 are provided with the brackets.

The brackets support the NAMUR mounting standard (VDI/VDE3835, IEC60534-6-2).

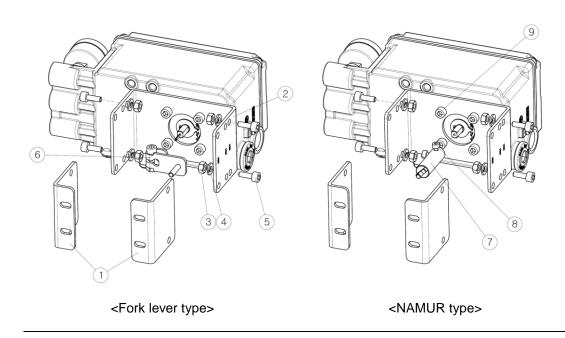

- ① Lower bracket(2)
- ② Upper bracket(1)
- ③ M6 nut(4)
- 4 Spring washer (4)
- ⑤ M6\*15 bolt (4)

- 6 Fork lever type shaft lever(1)
- ⑦ NAMUR shaft adapter (1)
- M4 bolt(2)
- 9 M6\*15 bolt(4)

# 3.3.3 TS700R installation steps

1	Install Lower bracket Attach two Lower brackets to the actuator and secure it with the bolts.	
	Install Fork lever Install Fork lever to actuator's stem and tighten with the fixing bolt.	
2	Decide the start point of Fork lever according to actuator stem's rotation direction.	
3	Tighten Upper and Lower brackets Combine Upper bracket and Lower bracket. Fasten with bolt, nut and spring washer.	
3	Tighten the bolts to the corresponding holes(H20, H30, H50) depending on the actuator stem height.	HEO GH20 HSO HSO HSO


### **№** NOTICE

- ②Main shaft and ①Indicator can be rotated 360°. When operating the product,
   ①Indicator must point ③Effective angle range.
- The product may not operate normally if ①Indicator points the opposite direction, so please consider the direction of ①Indicator when installing ④Shaft lever to ②Main shaft.

### **Install Shaft lever**


### Fork lever type

Install 4 Shaft lever to 2 Main shaft and tighten with 5 Bolt.

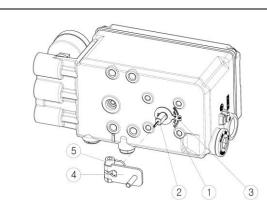


### **NAMUR** type

Install ④NAMUR shaft adapter to ②Main shaft and fix it with two ⑤fixing bolts.

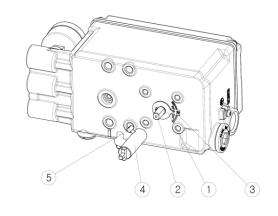

# Install the product to Upper bracket and fix it with bolts.

At the moment, put the lever pin(the bottom of Shaft lever) to the hole of Fork lever, and align the center.

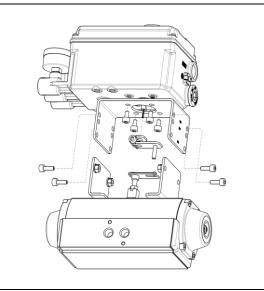

### 3.4 TS720 Remote type installation


TS720 is designed cable to the sensor part and the main body, it is designed to transmit the change of the stem position of the valve to the body through the potentiometer built in the sensor.

### **Application site**

- Where the valve is located at high or inaccessible location.
- High temperature environment where is over than 85°C. (Non-explosion proof type only)
   (Maximume ambient temperature of the sensor part is 100°C)
- Large vibrating lines.

### Installation

- ① Install Sensor part on the valve, and install Body part on the accessible place.
- 2 Please follow the installation instructions of TS700L or TS700R for Sensor part's installation.
- Sensor part and Body part are connected by the cable. (the length of cable must not over than 20m)
- 4 OUT port of Body part should connect to the actuator using Pneumatic pipe.

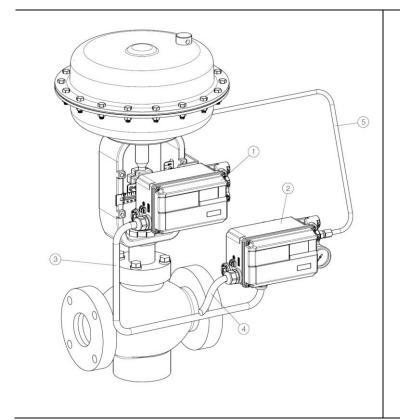

- Sensor part
- ② Body part
- 3 Cable
- 4 Power cable
- ⑤ OUT1 piping

### 3.5 Option module Installation


According to the site requirements, the following modules can be purchased separately and installed.

### NOTICE

- Please shut off the power supply and install the modules.
- Please connect ⑤ Jumper when you install PTM.
- Please disconnect ⑤Jumper when you install HART module or install HART and PTM both.

### 3.5.1 Position transmitter module(PTM) Installation


- ① Open the body cover and PCB cover, and install PTM to Main PCB as figure below.
- ② Please set feedback zero point settings and end point settings again after installed PTM. Please refer to page38 <OUT ZERO> and <OUT END> setting method.

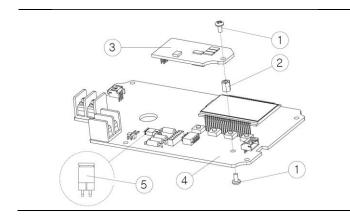

- Fixing bolt
- ② Module Bracket
- ③ PTM
- (4) Main PCB
- ⑤ Jumper

### 3.5.2 HART communication module Installation


Open the body cover and PCB cover, and install HART module to Main PCB as figure below.

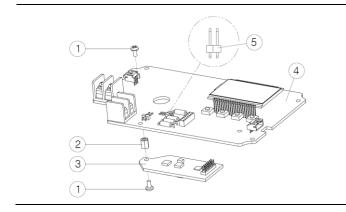


- Fixing bolt
- ② Module bracket
- ③ HART module
- (4) Main PCB
- 5 Jumper

### 3.5.3 Limit switch module Installation

There are two types of limit switch module, mechanical and proximity type.

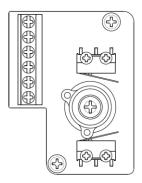


<Mechanical type module>

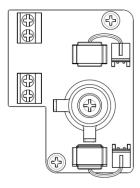

<Proximity type module>

### Installation steps

- ① Open the cover.
- ② Install the limit switch module to PCB protective cover groove and fix it with fixing bolts.
- 3 Turn the camshaft and install it to the main shaft.
- 4 Fix the camshaft with fixing bolts.
- (5) Install the dome indicator to the camshaft.

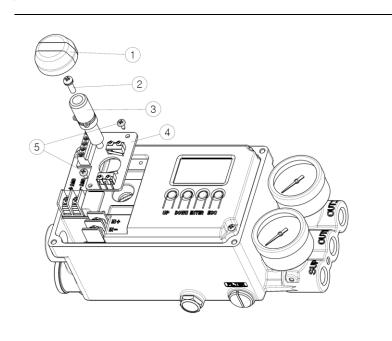


- Dome indicator
- 2 Bolt
- 3 Camshaft
- 4) Limit switch module
- ⑤ Module fixing bolts

### Note

Standard product does not have a dome indicator window, so the cover also be replaced when you add limit switch module to the product.

### 3.5.4 How to adjust limit switch cam

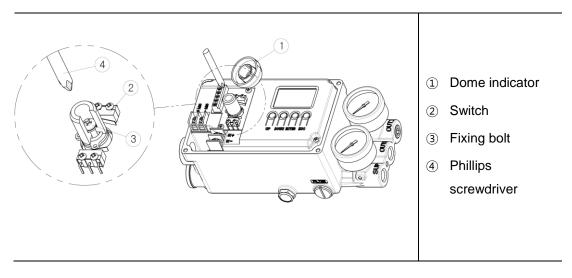

The cam position is set at the factory. If you want to change the cam position, please follow the steps below.


- ① Open the cover and disassemble the dome indicator by referring to the above figure.
- 2 Loosen the fixing bolt slightly with a Phillips screwdriver, but do not disassemble it.
- 3 Adjust cam 3 and 4 by referring to the figure below, and adjust the angle so that the switch operates at the position you want.
- 4 After adjusting the angle, fasten the fixing bolt tightly.

Mechanical switch	Proximity switch				
<ol> <li>Micro switch 1</li> <li>Micro switch 2</li> <li>Operating cam 1</li> <li>Operating cam 2</li> <li>Fixing bolt</li> </ol>	<ol> <li>Proximity switch 1</li> <li>Proximity switch 2</li> <li>Operating cam1</li> <li>Operating cam 2</li> <li>Fixing bolt</li> </ol>				

### How to replace Air filter 3.6


# **⚠** CAUTION

- Be careful when replacing the air filter as the valve may move. Please shut off the air pressure supplied to the positioner and replace the filter.

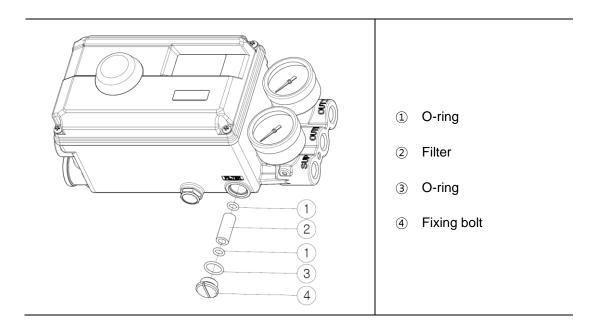

Purpose	It protects internal PIEZO valve by removing foreign substances contained in the air supplied to the positioner.
How to replace	<ol> <li>Loosen the fixing bolt with a flat-blade driver.</li> <li>Take out the inner filter, replace it, and fix it again with fixing bolt.</li> <li>When replacing the filter, please install O-ring well as shown in the picture above.</li> </ol>
Note	<ul> <li>Please check the filter periodically depending on the situation and replace it if necessary.</li> <li>If foreign matter adheres to the filter due to long-term use, it may affect the control performance of the product.</li> <li>Air filters can be reused by cleaning, but please replace the filter in case of oil contamination.</li> </ul>

### 3.7 Orifice installation

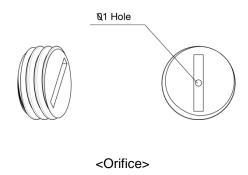


### **Purpose**

A normal action product does not need to install the orifice, but if the hunting phenomenon occurs after installation on a small actuator, it can be solved by installing an orifice to reduce the output flow of air pressure transmitted to the actuator from the positioner. The hole size of the orifice is 1mm.

### How to install

As figure below, Install the orifice into OUT1 port, and fix it by turning it all the way with a flatbladed screwdriver.

- When using for single type actuator, please install orifice to OUT1 port only.
- When using for double type actuator, please install orifice to both OUT1 and OUT2 ports.

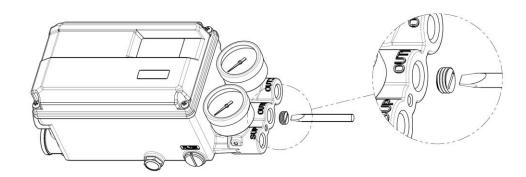

Note: Please contact us, if you need the above parts.


# 4 Pneumatic connection

# 4.1 Air pressure condition

### **⚠** NOTICE

- Use only dehumidified and dust-extracted compressed clean air.
- The air pressure input must be equipped with a regulator to supply constant air pressure.

# 4.2 Pneumatic port Description

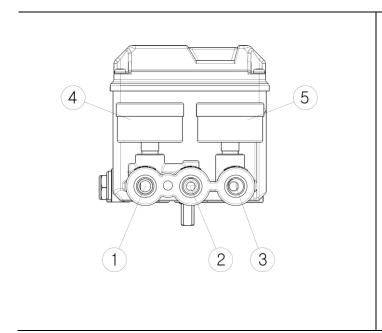


- ① Supply port
- ② OUT1 port
- 3 OUT2 port
- ④ OUT1 gauge
- ⑤ OUT2 gauge

### 4.3 Air connection


# NOTICE

• This product is designed to increase the air pressure of OUT1 as 4 ~ 20mA current input signal increases.

### 4.3.1 TS700L air connection

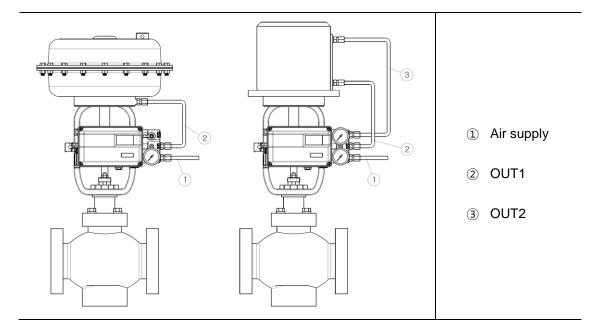

### 4.3.2 TS700R air connection

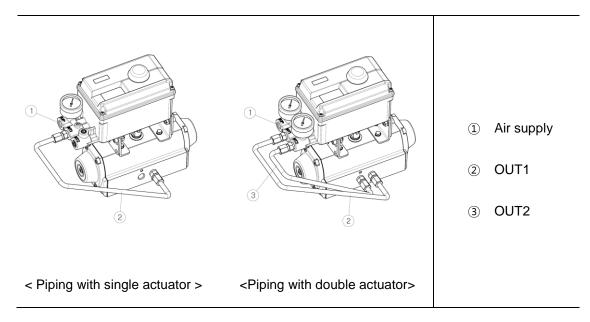



# 5 Electrical connection

# **MARNING**

- Check that the input current is within the product specification range. Exceeding the rating might cause a malfunction to circuit boards or burn out electrical components.
- Check polarity of + and exactly and connect wires.
- Separate the input current cable and the feedback signal cable correctly. Connecting the feedback signal cable to Power terminal for a long time may damage the main board.

### 5.1 Terminal description

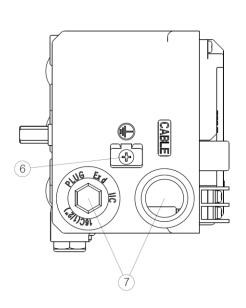

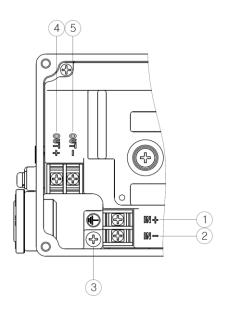


- ① Input signal (+)
- ② Input signal (-)
- ③ Internal ground
- 4 Feedback signal (+)
- 5 Feedback signal (-)


- 6 External ground bolt
- ⑦ Conduit

# 5.2 Wiring diagram


### 5.2.1 Power and feedback signal connection

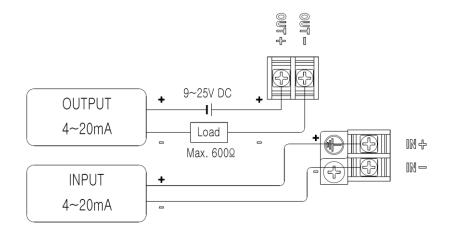

### 5.2.2 Mechanical Limit switch connection

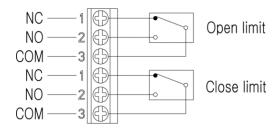


### 5.2.3 Proximity Limit switch connection

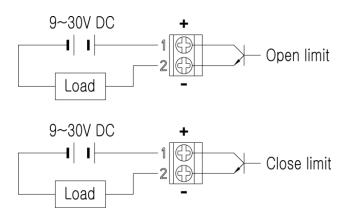


# 6 Calibration

# 6.1 LCD description

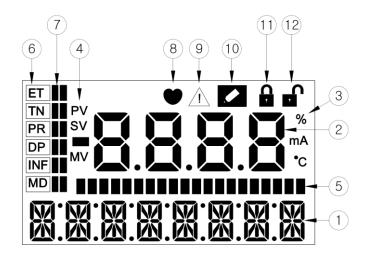

No.	Displayed contents	Description		
1	Menu information	Displays the running menu. (Main menu, Main parameter, Sub parameter)		
2	Menu value	Displays the present menu or parameter value.		
3	Menu value unit	Displays the present menu's value unit.		
		PV	Progress value	
4	Menu value symbol	sv	Signal value	
		MV	Motor control value	
(5)	Progress bar	Displays the progress of the processor in bar form.		
6	Main parameter	Displays the currently selected main parameter.		
7	Parameter bar	Displays the position of the selected main parameter.		
8	HART communication	The icon is displayed when HART communication is in progress.		
9	Error code	The icon is displayed if there is an error during calibration or operation.		
10	Save	The icon is displayed when changing the internal setting values such as parameter modification.		
11)	LOCK	The icon is displayed when the program is locked.		
12	UNLOCK	The icon is displayed when the program is unlocked.		

# 6.2 Button description

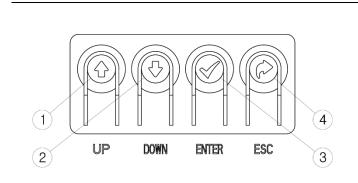

- ① UP button
- ② DOWN button
- ③ ENTER button
- 4 ESC button

Button	Function	Description		
ENTER	confirm	<ul> <li>Execute the functions of the selected menu.</li> <li>Save the modified parameter values.</li> </ul>		
ESC	cancel	<ul> <li>Move from the current menu to the upper level menu.</li> <li>Cancel the current command.</li> </ul>		
UP	move up	<ul> <li>Move between menus of the same level such as main menu, main parameter, sub parameter.</li> <li>Change the set value of the selected parameter to a larger value</li> </ul>		
DOWN	move down	<ul> <li>Move between menus of the same level such as menu, main parameter, sub parameter.</li> <li>Change the set value of the selected parameter to a smaller</li> </ul>		

### 6.3 How to quickly perform Auto calibration

Open the cover of product and follow below steps to perform Auto calibration quickly.

- ① Please input current signal **18mA**, then press **<UP>** button for 3 seconds.
- 2 The positioner automatically performs Auto calibration.
- 3 Auto Calibration is performed sequentially from STEP 1 to 7 on LCD, and may take 2-5 minutes depending on the valve size.

# ⚠ NOTICE

 If an error occurs during Auto calibration, please refer to Error codes on page 49 to 50.

### 6.3.1 Auto calibration Steps

When you progress auto calibration, it automatically proceed in the following steps below.

Steps	Description
STEP0	Check ZERO point of the valve speed. Check the reference point of valve stop.
STEP1	Find ZERO point of the valve stroke. The valve position after all the pneumatic pressure of actuator chamber connected to OUT1 port is exhausted is recognized as ZERO point.
STEP2	Find END point of the valve stroke.  The valve position after the regulator setting pressure is supplied to actuator chamber connected to OUT1 port is recognized as END point.
STEP3	Check the valve fully close time.  Measure the time of the valve takes from full open to full close.
STEP4	Check the valve fully open time.  Measure the time of the valve takes from full close to full open.
STEP5	Check the minimum valve movement Measure the motor signal reference value, when the position of valve at 25%.
STEP6	Check the minimum valve movement Measure the motor signal reference value, when the position of valve at 50%.
STEP7	Check the minimum valve movement Measure the motor signal reference value, when the position of valve at 75%.

### 6.4 Software map

- To enter Main Parameter menu : Please input 4-20mA current signal and press **<ENTER>** button for 3 seconds after booting up.
- To enter Submenu : Press **<UP>** or **<DOWN>** button to select Main Parameter menu and press **<ENTER>** button.
- To select Submenu : Press **<UP>** or **<DOWN>** button.

Main parameter menu	TUNNING	PARAMETR	DEVICE P	INFOMATN	DIAGNOST	EMERGNCy
	AUTO RUN	DEAD bND	ACTU SNG	FIRM VER	ERR CODE	PASSWORD
	AM FULL	MIMLO LO	ACTU LIN	DEVI REV	AUTO CHK	EMGY NON
	ACT NORM	MINHI OP	FORCE OP	HART VER	PST RUN	FULL OP
	VAL OPCL	MINHI CL	FORCE CL	dEid	PST CFG	FULL CL
	VAL ZERO	CONST OP	DAMP	POLL ADD	PST REDy	STOP
C. h	VAL END	CONST CL	SPLT ZER	TRAVEL K		UNLOCK
Submenu	OUT ZERO	CHAR LIN	SPLT END	OP TIME		
	OUT END	USER DEF	COMPENSA	CL TIME		
	IN ZERO		ACT NORM		•	
	IN END		OUT NORM			
	OUTP ZER		HT NORM			
	OUTP END		DSP NORM			

### 6.5 Main menu description

After the product is booted, **<MAIN LIN>** is displayed, which shows the current opening of the valve. Press **<UP>** or **<DOWN>** button to move to the following menu and check the corresponding information.

In Main menu, information such as the valve opening and the magnitude of the input current signal can be checked and the execution of the command or the modification of the parameter value cannot be performed.

Main menu	Description		
	Display the percentage of current valve opening value.  Depending on the set value of the flow characteristics, one of the following values is displayed.		
	LCD display value	Flow characteristics	
MAIN LIN	MAIN LIN	Linear	
	MAIN EQ1	EQ1 (1/25)	
	MAIN EQ2	EQ2 (1/50)	
	MAIN QO	Quick Open	
	MAIN USR	User defined 17 points	
MAIN IN %	<ul> <li>Display the magnitude of input signal that the positioner recognizes as percentage.</li> <li>If the size of the input signal recognized by the positioner differs from output signal of the DCS or calibrator, check the voltage of the power supply.</li> <li>If the supply current is normal, please reset <in zero=""> and <in end=""> settings in <tuning> of main parameter.</tuning></in></in></li> </ul>		
MAIN IN mA	<ul> <li>Display the magnitude of input signal that the positioner recognizes as mA.</li> <li>If the size of the input signal recognized by the positioner differs from output signal of the DCS or calibrator, check the voltage of the power supply.</li> <li>If the supply current is normal, please reset <in zero=""> and <in end=""> settings in <tunning> of main parameter.</tunning></in></in></li> </ul>		
MAIN VEL	Display currently operating speed of the valve as numbers.  • As the value, between -2047 to +2048, negative numbers indicate speed at close, and positive numbers indicate speed at open.  • 0 means stop and the larger the absolute value, the faster the speed.		
MAIN DEV %	Display the percentage of error between the current input signal and valve opening value.  • The larger the error, the lower the control characteristic.		
MAIN TEM	Display the current a	mbient temperature.	
MAIN KPR	Display the pressure level of the pneumatic pressure output to OUT1 port. It is displayed only on product equipped with an optional pressure sensor.		

# 6.6 Main parameter menu Description

Main parameter menu corresponds to main menu in which various parameters are classified by function.

- After the product is booted, press <ENTER> button for 3 seconds to enter Main Parameter menu.
- Main parameter menu is classified as below and can be moved by pressing **<UP>** or **<DOWN>** button.
- Press **<ENTER>** button in the corresponding menu to enter Submenu.

Main parameter menu	Main function
TUNNING	<ul> <li>Run Auto calibration.</li> <li>Change Zero and Span of the valve manually.</li> <li>Change Zero and Span of feedback signal manually.</li> </ul>
PARAMETR	<ul> <li>Set Dead band.</li> <li>Change PID values.</li> <li>Change flow characteristics.</li> </ul>
DEVICE P	<ul> <li>Set Single/Double according to actuator type.</li> <li>Set Linear/Rotary according to actuator type.</li> <li>Set signal point of Force Open/Close.</li> <li>Set acting type. (Direct Action / Reverse Action)</li> <li>Set the valve acting speed. (DAMP)</li> </ul>
INFOMATN	<ul> <li>Display the product model.</li> <li>Display the device and HART version.</li> <li>Display Full Open/Close time.</li> <li>Display the current ambient temperature, the recorded maximum ambient temperature, and the recorded minimum ambient temperature.</li> </ul>
DIAGNOST	<ul> <li>Display the error code.</li> <li>Auto check function.</li> <li>Set PST function.</li> </ul>
EMERGNCy	<ul> <li>Set Password.</li> <li>In case of emergency, set function to forcibly open the valve, or close valve, or maintain current position.</li> <li>Set Lock and Unlock function.</li> </ul>

#### **Submenu Description** 6.7

The following is a detailed description of Main parameter menu's Submenu.

- Press **<ENTER>** button in Main parameter menu to enter Submenu. Use **<UP>** and **<DOWN>** button to move between Submenu.

#### 6.7.1 **TUNNING**

Submenu		Description	
AUTO RUN	Run Auto calibration.  • Executable from any input signal between 4 and 20 mA.  • It takes 1~3 minutes, depending on the valve size.		
	Select Auto calibrat	ion mode.	
	Mode	Description	
	AM FULL	Set all parameter values again.	
АМ	AM WDTH	Reset MIMLO OP and MINHI CL values(which are PIEZO control characteristic parameters).	
	AM OPCL	Reset CONST OP and CONST CL values(which are PIEZO control characteristic parameters).	
	AM ZEb R	Only reset End point and Zero point of the valve, but the other parameter values are not modified.	
	Factory setting	AM FULL	
		f product. an be changed when hunting occurs due to a valve stem or a small actuator size.	
	Mode	Description	
ACT NORM	ACT NORM	Normal setting	
	ACT LAGR	Select when actuator size is too big	
	ACT FRIC	Select when the valve friction is too big	
	Factory setting	ACT NORM	
VAL OPCL		current signal, it performs the function of opening ve with <b><up></up></b> or <b><down></down></b> button manually.	
VAL ZERO	Reset ZERO point of the valve manually. Input 4mA current, press < <b>UP</b> > and < <b>DOWN</b> > button to change the valve position, and press < <b>ENTER</b> >button to save the current valve position, then the positioner recognizes the current position as valve ZERO point.		
VAL END	Reset END point of the valve manually. Input 20mA current, press < <b>UP</b> > and < <b>DOWN</b> > button to change the valve position, and press < <b>ENTER</b> >button to save the current valve position, then the positioner recognizes the current position as valve END point.		

OUT ZERO	Reset ZERO point of the feedback signal manually. Input 4mA current signal, valve reaches Zero position, after press <up> or <down> button to adjust the value, until the 4mA feedback signal is output, and then press <enter>button to save.  NOTICE  Please reset OUT ZERO setting after installing feedback module.</enter></down></up>
OUT END	Reset END point of the feedback signal manually. Input 20mA current signal, valve reaches end position, after press <up> or <down> button to adjust the value, until the 20mA feedback signal is output, and then press <enter> button to save.  NOTICE  Please reset OUT END setting after installing feedback module.</enter></down></up>
IN ZERO	Reset ZERO value of input signal manually.  If <main in%=""> and <main ma=""> displayed at Main menu differ from the actual input signal, conduct the commands of this menu.  Input 4mA current at this menu and press <enter> button twice to save.</enter></main></main>
	After replacing the main board or conduct program initialization, please reset IN ZERO setting.
IN END	Reset END value of input signal manually. If <main in%=""> and <main ma=""> displayed in Main menu differ from the actual input signal, conduct the commands of this menu. Input 20mA current at this menu and press <enter> button twice to save.</enter></main></main>
	NOTICE
	After replacing the main board or conduct program initialization, please reset <b>IN END</b> setting.
OUTP ZER	Reset ZERO value of the pressure sensor manually. At Zero point of the valve, press <b><up></up></b> or <b><down></down></b> button to adjust the output pressure value, and press <b><enter></enter></b> button to save.
OURP END	Reset END value of the pressure sensor manually. At END point of the valve, press <b><up></up></b> or <b><down></down></b> button to adjust the output pressure value, and press <b><enter></enter></b> button to save.

#### 6.7.2 PARAMETR

Submenu		Description		
DEAD bND	<ul> <li>Dead band range, the range of allowable control error.</li> <li>If hunting or oscillation occurs due to high packing friction of the valve, the problem can be solved by increasing the value within the range allowed by the field.</li> <li>If the value is set too high, the accuracy may be reduced.</li> </ul>			
	Range	0~10%		
	Factory setting	0.3%		
MIMLO LO	positioner finds the target	olve hunting or oscillation problem but point slowly. itioner finds the target point quickly but it is		
	Range	1~500		
MINHI OP	Display ON time of PIEZO valve output current when the valve open.  If increase the time, the positioner finds the target point quickly but it is more likely to happen hunting or oscillation.  If reduce the time, can solve hunting or oscillation problem but positione finds the target point slowly.			
	Range	1~500		
MINHI CL	Display ON time of PIEZO valve output current when the valve close.  If increase the time, the positioner finds the target point quickly but it is more likely to happen hunting or oscillation.  If reduce the time, can solve hunting or oscillation problem but positioner finds the target point slowly.			
	Range	1~500		
CONST OP	Display the proportional constant value of PIEZO valve output current to reach the target point when the valve open.  If increase the value, can solve hunting or oscillation problem but positioner finds the target point slowly.  If reduce the value, the positioner finds the target point quickly but it is more likely to happen hunting or oscillation.			
	Range	0.1~5.0		
CONST CL	Display the proportional constant value of PIEZO valve output current to reach the target point when the valve close.  If increase the value, can solve hunting or oscillation problem but positioner finds the target point slowly.  If reduce the value, the positioner finds the target point quickly but it is more likely to happen hunting or oscillation.  Range  0.1~5.0			

	Set the characteristics of the valve control.							
	100		Input (mA)	Linear (%)	EQ1 (%)	EQ2 (%)	QO (%)	USER (%)
			4	0	0	0	0	0
	80 Quick Open Ret D		5	6.25	2.55	1.31	29.13	4
	a dopen		6	12.5	3.26	2.81	46.84	8
	Onig Deal	7/	7	18.75	4.16	4.54	57.21	12
		ined /	8	25	5.32	6.55	64.56	18
	40	Ed Riss	9	31.25	6.79	8.92	70.27	30
		Ed Eigh	10	37.5	8.67	11.73	74.93	40
	20	//4	11	43.75	11.07	14.76	78.87	50
			12	50	14.14	18.26	82.28	59
	0 4 8 12	2 16 20	13	56.25	18.06	22.58	85.29	65
	Inp	ut (mA)	14	62.5	23.06	27.93	87.99	70
CHAR LIN			15	68.75	29.45	34.55	90.42	75
CHAR LIN			16	75	37.61	42.73	92.65	80
			17	81.25	48.02	52.85	94.69	85
			18	87.5	61.32	65.37	96.59	90
			19	93.75	78.31	80.85	98.35	95
			20	100	100	100	100	100
	CHAR LIN		Linea	ır				
		CHAR EQ1 Equal percentage (1/25)						
	Mode	CHAR EQ2 Equal percentage (1/50)						
		CHAR QUI Quick Open						
		CHAR USR	User	defined	l 17 po	ints		
	Factory setting	CHAR LIN						
	Run the special flow curve by user-defined 17 points.  In addition to the above Linear, Equal percentage, Quick open ar typical flow characteristics, the user can set the 4~20mA corresp valve stroke position to achieve special flow curve control.  To run this function, <char usr=""> must be set at <char> men</char></char>			orrespo	onding			
	Steps	Description						
USER DEF	*USR P0	Set the valve po	sition	when th	e inpu	t signal	is 4 m	Α.
	*USE P1	Set the valve po	sition	when th	e inpu	t signal	is 5 m	Α.
	*USR P2	Set the valve po						
	*USR P3~16	Follow above st input signal is 7			the va	lve pos	sition w	hen the
				sition when the input signal is 20 mA.				

## **6.7.3 DEVICE P**

Submenu		Description	on
	Depending on the actuator type, it should be set to Single or Double manually.		
	⚠ NOTICE		
ACTU SNG	If the setting differs f be degraded.	rom the actuator typ	e, the control characteristic may
		ACTU SNG	Single type
	Mode	ACTU DbL	Double type
	Footomicoattina	TS700L	ACTU SNG
	Factory setting	TS700R	ACTU DbL
	Depending on the acmanually.	ctuator type, it should	d be set to Linear or Rotary
		⚠ NOTIC	E
ACTU LIN	If the setting differs f be degraded.	rom the actuator typ	e, the control characteristic may
	Mada	ACTU LIN	Linear type
	Mode	ACTU ROT	Rotary type
	Footonyoutting	TS700L	ACTU LIN
	Factory setting	TS700R	ACTU ROT
		er is used to move th	set value, the valve is forced to e valve into its seat with the
	Valve Str	oke %	
	100		
FORCE OP			
	0 0	Force close set po	Input Signal %
	Range	0~100%	
	Factory setting	TS700L TS700R	100% 99.7%
	Note		value set to 100%, this function

	<ul> <li>When the input current signal is lower than the set value, the valve is forced to close.</li> <li>When the valve is closed, residual pressure in the actuator char can be completely released.</li> </ul>				
FORCE CL	Range	0~100%			
	Factory setting	0.3%			
	Note	When the value set to 0%, this function is not applied.			
DAMB	This function controls the operating speed of the valve.  The higher the set value, the slower the operating speed of the valve.  With this function, hunting problem in small actuator can be solved.				
DAMP	Range	0~500			
	Factory setting	0			
	Note	When the value set to 0, this function is not applied.			
SPLIT ZER	Set Zero point of the signal value during the split range control.  For example, if the set value is 50%, 12mA corresponds to 0% of the valve opening as shown on the right figure .				
	Range	0~100.0%			
	Factory setting	0.0%			
SPLIT END	Set End point of the signal value during the split range control.  For example, if the set value is 50%, 12mA corresponds to 100% of the valve opening as shown on the right figure .				
	Range	0~100.0%			
	Factory setting	100.0%			

	This parameter corrects the error between LCD value and actual valve opening.				
	<b>∴</b> NOTICE				
COMPENSA	This function should only be used with Linear type products and Rotary products must be set to 0%.				
	Range -50.0~50.		0%		
	Factoriosition	TS700L(L	inear type)	3.0%	
	Factory setting	TS700R(Rotary type)		0.0%	
	Change the action mode	of the valve.			
	Reverse Actio	n	Dir	ect Action	
	Valve Stroke%		Valve Stroke%		
ACT NORM	0 4mA 20m/	Input Signal mA A	0 20mA	Input Signal mA	
	Mode ACT NORM		Reverse Action		
			Direct Action		
	Factory setting	ACT NORM	1		
	Change the output mode the valve stroke, or the op-			ame percentage as	
	Normal			Reverse	
OUT NORM	Valve Stroke (%)  O  AmA	20mA	Valve Stroke (%)	4mA	
	Output Signal (mA	OUT NORM	1	Output Signal (mA)  Normal action	
	Mode	OUT REVE		everse action	
Factory setting		OUT NORM			
	Change the display mode HART communication.			smitted through	
HT NORMR		HT NORME	R Dire	ect action	
	Mode	HT REVER	Rev	Reverse action	
		HT NORMR			
	Factory setting	HT NORME	<u> </u>		

	Change the displa	ange the display mode of the valve opening on LCD.		
	Mode Description			
	DSP NORM	Displayed 0% on LCD when the valve is 0%, and		
DSP NORM	DSP NORW	displayed 100% on LCD when the valve is 100%.		
	DCD DEVE	Displayed 100% on LCD when the valve is 0%, and		
	DSP REVE	displayed 0% on LCD when the valve is 100%.		
	Factory setting	DSP NORM		

## 6.7.4 INFOMATN

You can find the following information through Submenu.

Submenu	Description
FIRM VER	Display firmware version of the product.
DEVI REV	Display the version of device.
HART VER	Display the version of HART communication.
dEid	Display HART Device ID number
POLL ADD	Display Polling address of the device in HART communication.
TRAVEL K	Display the accumulated total travel distance of the valve after the positioner has been used. (Unit: K%)  One full travel distance from full close to full open means 100% = 0.001K% For example, if the travel value is 1K%, this means that the valve has moved 1000 stroke percentages.
OP TIME	Display the time that takes from the valve fully close to fully open during Auto calibration. Unit: Second
CL TIME	Display the time that takes from the valve fully open to fully close during Auto calibration. Unit: Second

## 6.7.5 DIAGNOST

Submenu		Description		
ERR CODE	Display error code You can check the For details, please	e error code to resolve the problem.		
	_	ction checks the installation status of the product, internal ube connection, etc.		
	Error code	Description		
	PNEUMATIC	No pneumatic output to OUT port.		
	POTENMTR	Main shaft gear and Potentiometer gear are dislocated due to external shocks, etc.		
AUTO CHK	SIZE ANGLE	Display rotation angle of the lever of the product. Installation problems do not occur frequently for Rotary product. However, for linear product, the angle of the product may be bigger or less than the effective angle(60°) depending on bracket and the position of lever connection. If displayed number is less than 40°, please refer to page 15-17 to correctly install the product again.		
	COMPENSATE	Display the optimal compensation value based on the current rotation angle.		
	Run PST function	according to the following PST CFG configuration.		
PST RUN	What is PST?	Partial stroke testing (or PST), within the range of not affecting to the flow process, PST prevents the valve stem from sticking by moving the valve finely according to the set value and the period. In case of emergency, it can make the valve operate normally.		
PST CFG	Set necessary iter Submenu of PST  VALVE STROKE PST TIME  POINT1  POINT2	LATENCY LIMIT TIME TIME ERRO OCCUR		

	Submenu	Description			
	0P POINT	Valve initial pos	Set the initial valve position for PST to start.  Valve initial position must be within ±1% from "0S POINT". If not, wait until this condition is satisfied.		
	0	Default value	100%		
		Range	0~100%		
		Set 1st target po	osition of PST.		
	1S POINT	Default value	90%		
		Range	0~100%		
		Set 2nd target p	position of PST.		
	2N POINT	Default value	80%		
		Range	0~100%		
		_	time after the first PST is end and nd PST start.		
	INTERVAL	Default value	20 (Seconds)		
		Range	1~100 (Seconds)		
	LATENCY	Set the waiting time from "1S POINT" to "2N POINT" start.  After reaching the first target point "1S POINT", return to the initial position, wait for "LATENCY" time specified by the user, and then move to the second "2S POINT" target point again.			
		Default value	10 (Seconds)		
		Range	1~100 (Seconds)		
		Set the time allowed to reach the target point. If the time to reach the target value during the PST execution exceeds "LMT TIME" time or there is no movement, PST is considered to have failed and PST is immediately interrupted.			
	LMT TIME	execution exceed movement, PST	eds "LMT TIME" time or there is no is considered to have failed and PST		
	LMT TIME	execution exceed movement, PST	eds "LMT TIME" time or there is no is considered to have failed and PST		
	LMT TIME	execution exceed movement, PST is immediately in	eds "LMT TIME" time or there is no is considered to have failed and PST interrupted.		
		execution exceed movement, PST is immediately in Default value Range In PST process,	eds "LMT TIME" time or there is no is considered to have failed and PST interrupted.  50 (Seconds)		
	LMT TIME	execution exceed movement, PST is immediately in Default value Range In PST process,	eds "LMT TIME" time or there is no is considered to have failed and PST interrupted.  50 (Seconds)  1~100 (Seconds)  if the valve position exceeds		
		execution exceed movement, PST is immediately in Default value Range In PST process, "EMERGNCY" s	eds "LMT TIME" time or there is no is considered to have failed and PST interrupted.  50 (Seconds)  1~100 (Seconds)  if the valve position exceeds set value, PST function is stopped.		
PST REDy	EMERGNCY  Check PST function of the following information of the following	execution exceed movement, PST is immediately in Default value Range In PST process, "EMERGNCY" is Default value Range on execution resumation is displayeresults. See the timestern is displayeresults.	seds "LMT TIME" time or there is not is considered to have failed and PST interrupted.  50 (Seconds) 1~100 (Seconds)  if the valve position exceeds set value, PST function is stopped.  15% 0~100%		
PST REDy	EMERGNCY  Check PST function of the following information and the execution	execution exceed movement, PST is immediately in Default value Range In PST process, "EMERGNCY" is Default value Range On execution resumation is displayer results. See the termovement of the second	eds "LMT TIME" time or there is no is considered to have failed and PST interrupted.  50 (Seconds) 1~100 (Seconds) if the valve position exceeds set value, PST function is stopped.  15% 0~100% It value. ed on LCD based on the set values		

	PST TOUT	"LMT TIME" failed to reach the target value within the set time value range.
	PST FIXD	Valve has no action.
	PST DOUT	Exceed the target value more than 1%.
	PST EMRG	When allowable range of valve movement, i.e. "EMERGENCY" value is exceeded.

## 6.7.6 EMERGNCy

Submenu	Description			
PASSWORD	Must put a password to enter this menu. The password is set at the factory and cannot be changed by the user.			
	Factory setting	Press <b>UP &gt; ENTER &gt; DOWN &gt; UP</b> button sequentially. (1321 on LCD)		
	Set the position of the valve to be moved when an abnormality of the positioner is detected. (If priority value of error code is "0") (refer to page 51)			
	Mode	EMGy NON	Do not take any action.	
EMGY NON		EMGy OP	Open the valve fully.	
		EMGy CL	Close the valve fully.	
		EMGy STP	Stop the valve operation.	
	Factory setting	etting EMGy NON		
FULL OP	Open the valve fully by manual regardless of the input signal.			
FULL CL	Close the valve fully by manual regardless of the input signal.			
STOP	Maintain the present valve position regardless of the input signal.			
UNLOCK	It locks to prevent changing all parameter values. When set to "LOCK", all commands such as Auto calibration, PID changes, and parameter values settings cannot be changed.			
	Mode	LOCK	Lock the program	
		UNLOCK	Unlock the program	
	Factory setting	UNLOCK		

# 7 Error code and Troubleshooting

# 7.1 Error code during Auto calibration

- Error code as below is displayed on LCD if an error occurs during Auto calibration.
- Check the error code and refer to the table below to solve the problem.

No	Error Code	Cause	Solution
1	STEP0 V0	Displayed when the valve does not stop after a long period of time when the data is measured to detect the first stop of the valve during auto calibration.  And it is mainly caused by damage to Main board.	Replace Main PCB.
2	STEP1 PZ	Displayed when Zero point is lower than allowable range.	<ul> <li>Check the status of the positioner installation or reinstall the positioner.</li> <li>Set initial angle (Zero point) of the lever higher than the current status.</li> </ul>
3	STEP2 PE	Displayed when End point is higher than allowable range.	<ul> <li>Check the installation status of the positioner or reinstall the positioner.</li> <li>Set final angle (End point) of the lever lower than the current status.</li> </ul>
4	ACT TYPE	Displayed when Zero point and End point of the lever are too close or equal.	<ul> <li>Check the status of supply air.</li> <li>Unplug the potentiometer cable in the positioner and reconnect it to Main board.</li> <li>Check the status of feedback lever installation. And set the operation angle that between initial angle(Zero point) and final angle(End point) over 40 degree.</li> <li>Replace Main PCB.</li> </ul>
5	STEP3 CT	Displayed when Close time is too long during auto calibration.	<ul> <li>Check the status of feedback lever installation.</li> <li>If Zero point of the valve changes, please conduct auto calibration 2~3 times.</li> <li>If the actuator size is too big, please set ACT mode as ACT LAGR and conduct auto calibration again. (Refer to page37)</li> </ul>

6	STEP4 OT	Displayed when Open time is too long during auto calibration.	<ul> <li>Check the status of feedback lever installation.</li> <li>If the actuator size is too big, please set ACT value as ACT LAGR and conduct auto calibration again. (Refer to page37)</li> </ul>
7	STEP5 WD	Displayed when the positioner can't find the accurate position within the allowed time.	<ul> <li>Check the status of feedback lever installation.</li> <li>If the actuator size is too big, please set ACT value as ACT LAGR and conduct auto calibration again. (Refer to page37)</li> </ul>
8	DEAD ZNE	Displayed when the feedback value of potentiometer is out of allowed range.	<ul> <li>Check if the potentiometer is out of zero adjustment with the gear (vibration or external shock is the cause).</li> <li>Potentiometer is damaged. (please replace the potentiometer)</li> </ul>
9	ERR	Displayed when auto calibration failed due to other unknown reasons.	Replace the positioner.

# 7.2 Error code during operation

- If there is a problem during the operation, please enter "ERR CODE" which is Submenu of "DIAGNOST" to check the error code.
- Check the error code and refer to the table below to solve the problem.

No	Code	priority	Cause	Solution
1	L	1	Valve End point is set too high	<ul> <li>Check whether the positioner is installed too high or low.</li> <li>Check whether the positioner is installed too far from the actuator. (Check the angle of use)</li> <li>Check the potentiometer gear and main gear are out of position. (The cause of the problem is strong vibration or external shock).</li> </ul>
2	К	1	Valve Zero point is set too low	<ul> <li>Check whether the positioner is installed too high or low.</li> <li>Check whether the positioner is installed too far from the actuator. (Check the angle of use)</li> <li>Check the potentiometer gear and main gear are out of position. (The cause of the problem is strong vibration or external shock).</li> </ul>
3	J	1	Valve End and Zero points are set too close. (Use angle is too small)	Increase the angle of use by repositioning the positioner closer to the actuator.
4	I	1	Input current is below 3.8mA	Check input current signal
5	Н	1	Input current is over 22mA	Check input current signal
6	G	1	BIAS value exceeds limit	Run Auto-Calibration again (Accuracy is significantly reduced when used without auto-calibration)
7	F	1	Ambient temperature is too high	Check ambient temperature
8	E	1	Ambient temperature is too low	Check ambient temperature
9	D	1	Used over 100,000 cycles	Check positioner regularly
10	С	0	Used over 500,000 cycles	Check positioner regularly
11	В	0	Used over 1 million cycles	Replace positioner
12	Α	0	EEPROM is damaged	Replace PCB



# Tissin Co.,Ltd.

201-1105, No 397, Seokcheon-ro, Ojeong-gu, Bucheon-si, Gyeonggi-do, Korea 14449

Tel: +82-32-624-4573, Fax: +82-32-624-4574 www.tissin.co.kr