

INSTALLATION / OPERATING MANUAL

IR PTZ Camera

- Before attempting to connect or operate this product, please read these instructions carefully and save this manual for future use.
- The design and specifications are subject to be changed without prior notice to improve product's quality.

TABLE OF CONTENTS

1. PRECAUTIONS

1. 1 Important Safety Instruction	3p.
-----------------------------------------	-----

2. GETTING STARTED

2. 1 Unpacking	4p.
2. 2 Part name	4p.
2. 3 DIP Switch Setting	5p.
2. 4 Cable Connection	6p.

3. INSTALLATION

3. 1 Installation	7p.
-------------------------	-----

4. ON-SCREEN DISPLAY PROGRAM MENU

4. 1 Initialize	10p.
4. 2 Motion Setting	10p.
4. 3 Dome Setting	31p.
4. 4 Clear Setting	42p.
4. 5 PTZ Reset	42p.
4. 6 Other Quick Operating Guide	42p.

5. SPECIFICATION

5. 1 Mechanism Specification	43p.
------------------------------------	------

6. DIMENSION

6. 1 DIMENSION	44p.
----------------------	------

1. PRECAUTIONS



1.1 Important Safety Instruction


- Read these instructions.
- Pay attention on all the warnings.
- Follow all instructions.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not disassemble or insert foreign objects.
- Do not install near any heat sources such as radiation, heat registers, stoves, or other apparatus. (Including amplifiers) that produce heat.
- Do not aim the camera at the sun or any other strong light source.
- Do not install the camera in intermittent lighting environments.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Installation should be done only by qualified personnel and conform to all local codes.
- Installation should be done in a place strong enough to hold it.
- Use only installation methods and materials capable of supporting four times the maximum specified load.
- It is designed for indoor use only and it must not be installed where exposed to rain and moisture without additional outdoor housing and bracket.
- To prevent damage from water leakage when installing a mount outdoors on a roof or wall, apply sealant around the bolt holes between the mount and mounting surface.
- These instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Only use replacement parts recommended by manufacturer and these instructions.
- Please contact the manufacturer when there is a problem with a lithium battery that is built into the product. In the case of a lithium battery, which is built there is a danger of explosion when leaving the product at high temperatures.

2. GETTING STARTED


2.1 Unpacking

The following parts are supplied with the outdoor speed PTZ system.

<Figure 1. package Components>

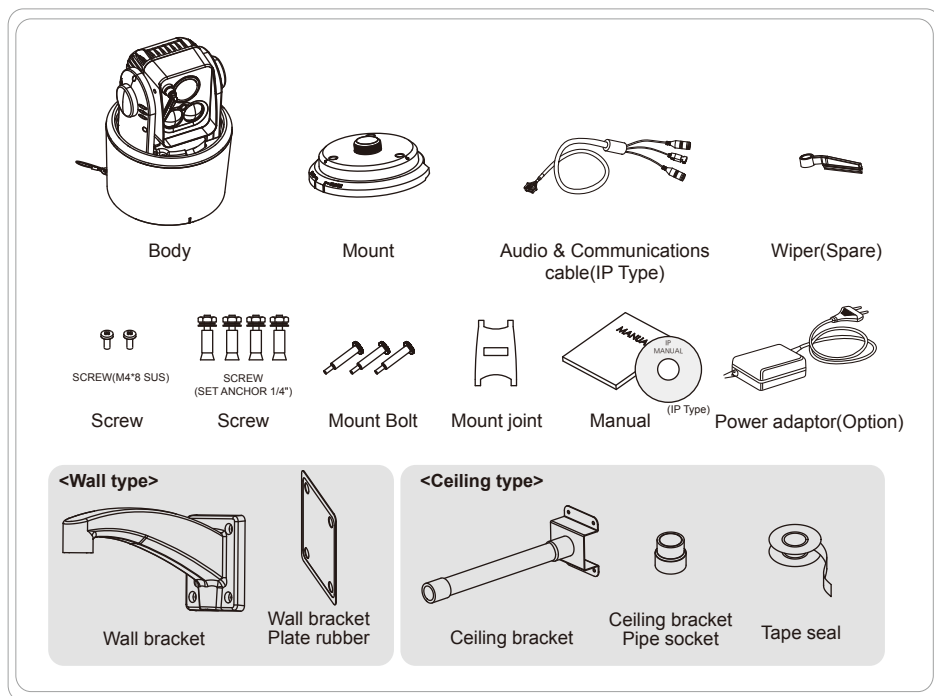

2.2 Part name

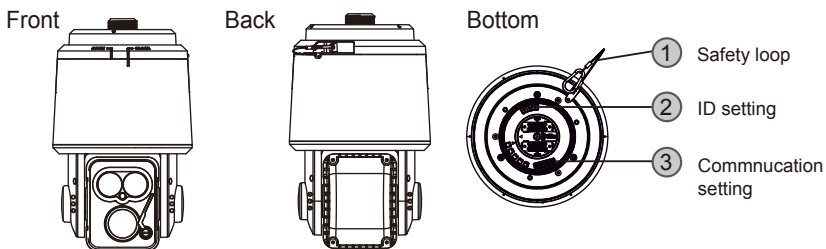

2. 3 DIP Switch Setting

Before start up the camera, set the protocol and camera address and termination set with dip-switches and click-switches as shown in the below diagram.

 
1.Set the camera address (ID)

Open the top cover of the product to set camera address.



Address switch

* ID setting is 1~255 available

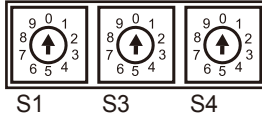

S1

S3

S4

S1 : 1-digit number of address

S3 : 10-digit number of address

S4 : 100-digit number of address


Ex) S4 = 1

S3 = 2

S1 = 8

The ID number is 128.

2. Protocol, Baudrate, Camera setting

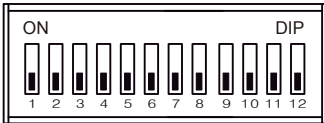

1	2	3	PROTOCOL
OFF	OFF	OFF	PELCO-D
OFF	OFF	ON	PELCO-P
OFF	ON	OFF	WTX
OFF	ON	ON	EZP
ON	OFF	OFF	NC
ON	OFF	ON	NC
ON	ON	OFF	NC
ON	ON	ON	NC

4	5	6	BAUDRATE
OFF	OFF	OFF	2400
OFF	OFF	ON	4800
OFF	ON	OFF	9600
OFF	ON	ON	19200
ON	OFF	OFF	38400
ON	OFF	ON	57600
ON	ON	OFF	115200
ON	ON	ON	NC

7	RS TYPE	8	NTSC/PAL
OFF	RS-422	OFF	NTSC
ON	RS-485	ON	PAL

11	IP Module	12	UCC
OFF	OFF	OFF	OFF
ON	ON	ON	ON

9	LOOP	10	SDI
OFF	ON	OFF	HD-SDI
ON	OFF	ON	EX-SDI

3.Set the termination On/Off




ON : Terminated
OFF : Not terminated

The device which is connected at the end of the line must have the cable communication terminated. Without proper termination, there is potential for control signal errors.

The product have the cable communication terminated by setting the appropriate dip switch.

2.4 Cable connection

2.4.1 Power/Data communication cable connection

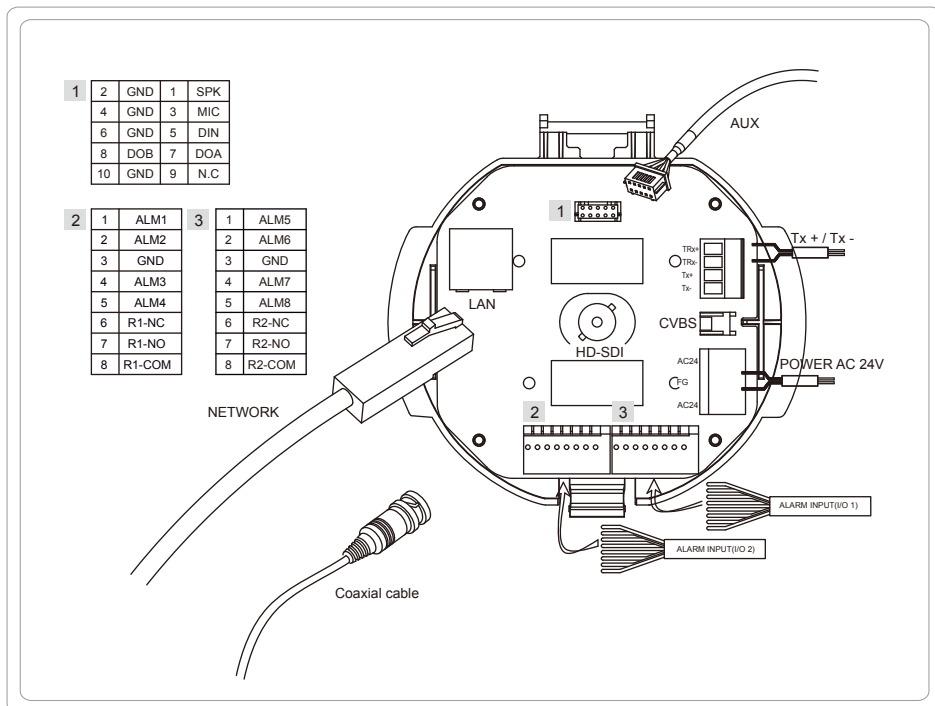

2.4.2 RS-485/RS-422 Connection

RS-422/485 connection

The PTZ can be remotely controlled by an external device or control system, such as a control keyboard or DVR, using RS-485 half-duplex, RS-422 duplex or simplex serial communication signals. Connect marked TRx+, TRx- to Tx+ and Tx- of the RS-485 control system.

If control system is RS-422, connect Tx+, Tx- of controller to Rx+ and Rx- of the PTZ Camera series. And also connect the Tx+, Tx- to Rx+, Rx- of the control device respectively. Total length of the cable for communication should not exceed 1.2Km.

2.4.3 SDI Output connection

Connect the SDI out (BNC) connector to the monitor or video input of DVR. Video cable and RS-485/422 communication cable are not provided in this product's package.

2.4.4 Network Lan connection(IP Type)

Used to connect the LAN cable.




Do not connect the AC24V power terminal to the communication terminal.

- Power Terminal: 2PIN
- Com Terminal: 4PIN


3.Installation

- The following steps of installation and connection work should be done by qualified service personnel or system installers and should conform to all local codes.
- Be sure to switch the camera off before installation is completed.
- Do not install the camera near the air outlet of an air conditioner.
- Before installation, set the system with Dip switch on the back side of the mechanism part, and assemble the mechanism and housing according to the below instruction


3.1 Installation

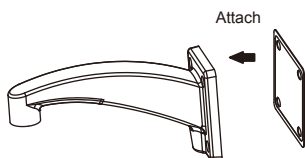

Attach the provided wall bracket rubber to a wall bracket as shown in the below picture.

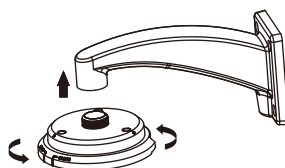


Set the mount to the wall bracket by turn it to clockwise.


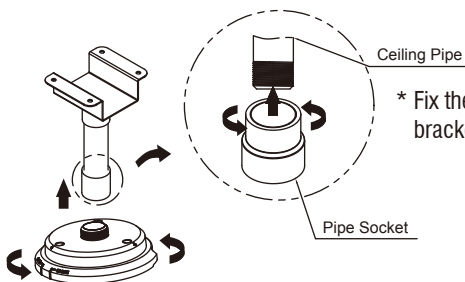


* Fix the socket into the ceiling pipe when install the ceiling bracket. The socket is included in the accessory package.



Set the mount to the ceiling bracket by turn it to clockwise.

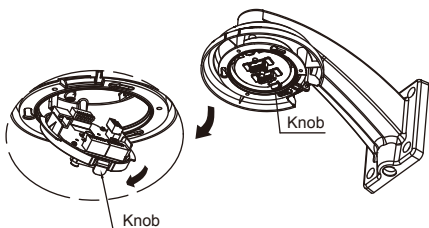


Push the knob of mount and pull down.
Connect the cable. (See the page6)

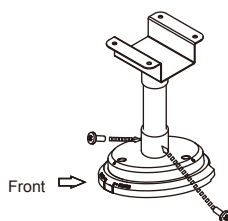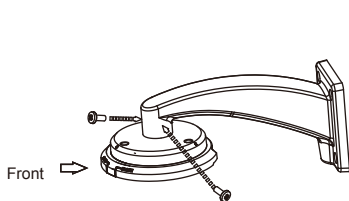

After connecting the cable, set the mount in the proper position and fix the 2 screws (M4*8)

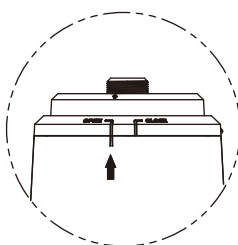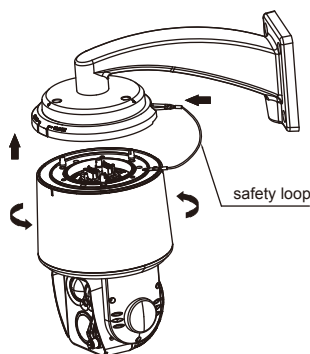


OPEN

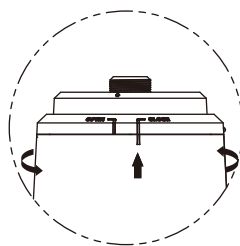


CLOSE

(Turn the body to clockwise)

1. Connect the safety loop on the body and mount back side.
 2. Align the arrow mark in the body and mount.
 3. Fix the body by turn it to clockwise.
- * Please check the direction of connector in the camera body and mount.

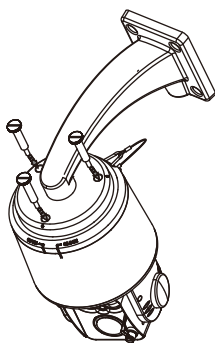


Fix the provided mount screws to the PTZ camera tightly.

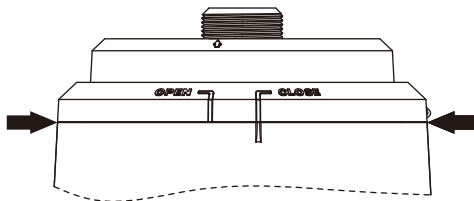


※ Fix the bolt tighten not to make a room between combinatorial parts to avoid any water-leakage from outside.

SD CARD Insert/Remove


* IP Model only

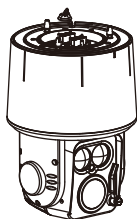


Prepare the body with the mount removed.

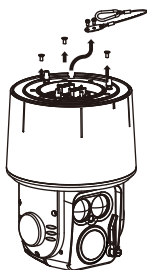


Loosen the bolts and safety hooks fastened to the housing cover.

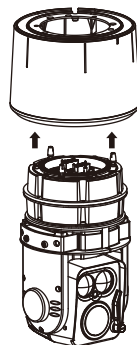


Lift the housing cover up and detach from the body.

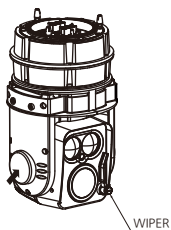


The opposite cover of the wiper position must be removed.

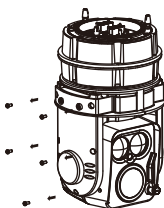


Loosen the bolt on the left side cover.

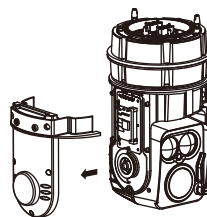

Remove the left side cover from the body that released the bolt.

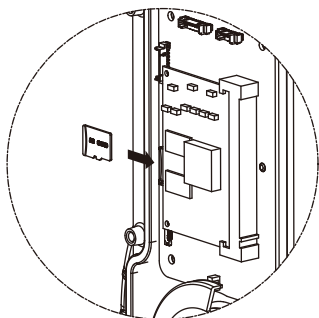

Slide the SD CARD in the direction of the arrow to insert/remove it.
(Product SD-CARD MEMORY always included)

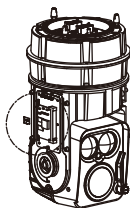

***The assembly proceeds in reverse order of this description.**

※Precautions※

1. Work in a place away from moisture and water.
2. To prevent static electricity, wear gloves or work after grounding.
3. When reassembling, check that the waterproof rubber of the housing is in place before assembling.

4. MAIN SETUP MENU

4.1 Initialize

When the device is powered on, you can check the address, version, protocol and video setting values.

INITIALIZE	
PTZ ID	: 001
VERSION	: X. XX
D-OUTPUT	: 1080p30/NTSC
IP INFO	: IP PROTOCOL 2400 (CU)
RS INFO	: PELCO D 2400, N, 1/422
CAMERA	: XX XXX. OK VER: XX, XX
▷ PAN INIT OK
▷ TILT INIT OK
▷ NORMAL SETTING WAIT	..

IP

INITIALIZE	
PTZ ID	: 001
VERSION	: X. XX
D-OUTPUT	: 1080p30/NTSC
UCC INFO	: UCC PROT. (9600)
RS INFO	: PELCO D 2400, N, 1/422
CAMERA	: XX XXX. OK VER: XX, XX
▷ PAN INIT OK
▷ TILT INIT OK
▷ NORMAL SETTING WAIT	..

UCC

4.2 Motion Setting

4.2.1 Preset

MAIN MENU	
MOTION	▶
DOME	▷
CAMERA	▷
CLEAR	▷
FACTORY SET	
PTZ RESET	
EXIT	
< NEAR / RIGHT ▷ MOTION >	

MOTION MENU	
PRESET	▶
TOUR	▷
GROUP	▷
SCAN	▷
PATTERN	▷
AREA	▷
ALARM	▷
PRIVACY	▷
HOME POS	▷
BACK	
EXIT	
< NEAR / RIGHT ▷ PRESET >	

Preset function enables to move the specific zoom position that saved by user.

Preset will be able to define 255 as maximum.

(1) Select the Preset number

P001 : Defined Preset number / 001 : Undefined Preset number

Move :  Select : 

PRESET MENU	
NUMBER	: 001
TITLE	: NONE
FOCUS	: DISABLE
POSITION SET	▶
EXIT TIME	: DISABLE
MOVE SPEED	: DISABLE
SAVE	
CLR	
BACK	
EXIT	
< NEAR / RIGHT ▷ NUMBER >	

PRESET MENU	
PRESET SELECT : 001	
P001	P002 P003 P004 P005
006	007 008 009 010
011	012 013 014 015
016	017 018 019 020
021	022 023 024 025
026	027 028 029 030
031	032 033 034 035
036	037 038 039 040
041	042 043 044 045
<EXIT ▷ FOCUS NEAR>	

(2) Set the Preset TITLE

Move :  or  Select :  or  Delete :  or 

It's available to set the desired TITLE, displayed on the executing screen of Preset.

PRESET MENU

NUMBER : 001 SET
TITLE :
 FOCUS : ONESHT
 POSITION SET : 000 000
 EXIT TIME : 10 SEC
 MOVE SPEED : 64

SAVE CLR BACK EXIT
 < CHANGE ▷ UP/DN SEL ▷ NEAR >

PRESET TITLE EDIT (01)

TITLE :

 
0 1 2 3 4 5 6 7 8 9 () A B C D E F G H I J K
 L M N O P Q R S T U V W
 X Y Z . / , + - = < > ○

< STORE ▷ TELE MOVE ▷ JOYSTICK >
 < DELETE ▷ WIDE BACK ▷ NEAR >

After the TITLE is set, push the NEAR button to exit.

(3) Select the focus mode for Preset

① Select the Focus menu

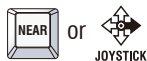

② Move and set the Focus Menu



PRESET MENU

NUMBER : 001
 TITLE :
FOCUS : AUTO
 POSITION SET ▶
 EXIT TIME : OFF
 MOVE SPEED : OFF

 
SAVE CLR BACK EXIT
 < NEAR / RIGHT ▷ PRESET FOCUS >

On focus menu, there are 3 modes
 : AUTO, MANUAL, ONESHT.

* Focus will be adjusted once after preset moving.

(4) Define the Preset position

① Select the Position menu

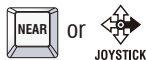

② Move and set the position



③ Set & Back



PRESET MENU

NUMBER : 001
 TITLE :
 FOCUS : AUTO
POSITION SET ▶
 EXIT TIME : OFF
 MOVE SPEED : OFF

SAVE CLR BACK EXIT
 < NEAR / RIGHT ▷ PRESET POSITION >

PRESET POSITION

< EXIT ▷ FOCUS NEAR >
 SET POSITION P: 000 T: 000 Z: x01

(5) EXIT TIME

PRESET MENU


NUMBER : 001
TITLE :
FOCUS : AUTO
POSITION SET ▶
EXIT TIME : OFF
MOVE SPEED : OFF

SAVE CLR BACK EXIT
< NEAR / RIGHT > EXIT TIME >

Setting the dwell time to exit Preset mode after completing Preset working.

(OFF ~ 30MIN) ※ Default : 10SEC

Select :  or  Set ON : 

Set OFF : 

PRESET MENU

NUMBER : 001
TITLE :
FOCUS :
POSITION SET ▶
EXIT TIME : OFF
MOVE SPEED : 64

SAVE CLR BACK EXIT
< NEAR / RIGHT > EXIT TIME >

(6) MOVE SPEED

: Set the move speed(1~64)

PRESET MENU

NUMBER : 001
TITLE :
FOCUS :
POSITION SET ▶
EXIT TIME : OFF
MOVE SPEED : OFF

SAVE CLR BACK EXIT
< NEAR > DATA SAVE >

(7) “Save” above setting Pattern data to the memory.

(8) “CLR” means above setting Pattern data will not be saved and be cleared.

(9) “BACK” means it goes back to the previous menu :Motion.

(10) “EXIT” means it goes out of MENU.


4. 2. 2 Tour



The Tour function consists of several presets run by turn. It is also adjusts the moving speed (1~64 step) and dwell time (1~99secs). Maximum of 8 Tour functions are toured in order.
(※ 1 Tour can be set for 15 presets.)

- (1) Select the Tour number
T01 : Defined Tour number / 01 : Undefined Tour number


Move :  Select : 

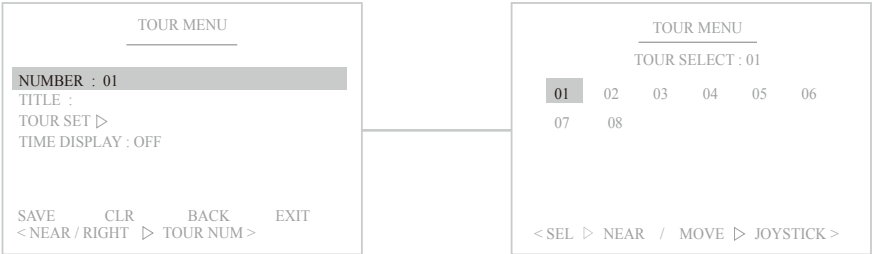

- (2) Set the Tour TITLE

Move :  Select :  or  Delete :  or 

It's available to set the desired TITLE, displayed on the executing screen of Tour.

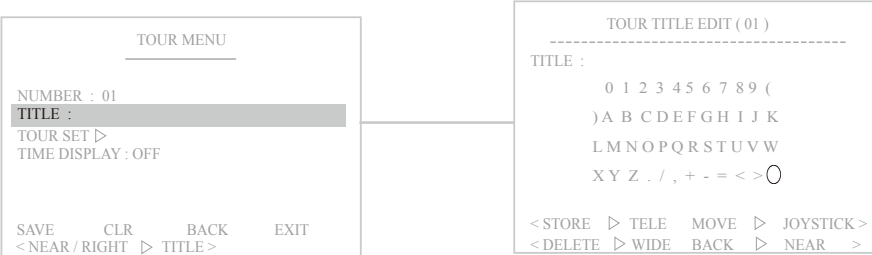

After the TITLE is set, push the NEAR button to exit.

(3) Define the Preset position

① Move to the set-up window



② Move and set the position



③ Set & Back



TOUR MENU

NUMBER : 01
TITLE :
TOUR SET ▶
TIME DISPLAY : OFF

SAVE CLR BACK EXIT
< NEAR / RIGHT > TOUR SET >

TOUR EDIT (01)

NO	PRESET	SPEED	DWELL
01	◀ 01	63	01
02	< 02	63	01
03	XX	XX	XX
04	XX	XX	XX
05	XX	XX	XX
06	XX	XX	XX
07	XX	XX	XX
08	XX	XX	XX
< SEL & NEAR		PRESET & LEFT >	
< SEL & NEAR		DELETE WIDE >	

TOUR MENU

PRESET SELECT : 001

P001	P002	P003	P004	P005
006	007	008	009	010
011	012	013	014	015
016	017	018	019	020
021	022	023	024	025
026	027	028	029	030
031	032	033	034	035
036	037	038	039	040
041	042	043	044	045

<EXIT > FOCUS NEAR >

(4) Time Display

TOUR MENU

NUMBER : 01
TITLE :
TOUR SET ▶
TIME DISPLAY : OFF

SAVE CLR BACK EXIT
< NEAR / RIGHT > TIME DISPLAY >

Display the remain time of each Preset dwell time during Tour operation.(OFF / ON) ※ Default : OFF

Select : or

Set ON :

Set OFF :

TOUR MENU

NUMBER : 01
TITLE :
TOUR SET ▶
TIME DISPLAY : OFF

SAVE CLR BACK EXIT
< NEAR > DATA SAVE >


(5) "Save" above setting Pattern data to the memory.

(6) "CLR" means above setting Pattern data will not be saved and be cleared.

(7) "BACK" means it goes back to the previous menu :Motion.

(8) "EXIT" means it goes out of MENU.

4. 2. 3 Group

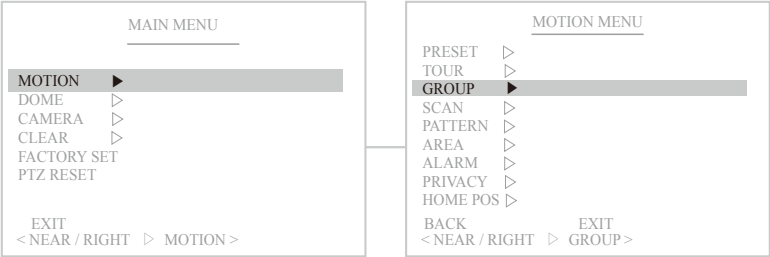


GROUP : You can make Max. 6 groups and call the saved tour by turn.

(1) Select the Group number

G01 : Defined Group number / 01 : Undefined Group number
Set from 1to 6 groups.


Move :  Select : 

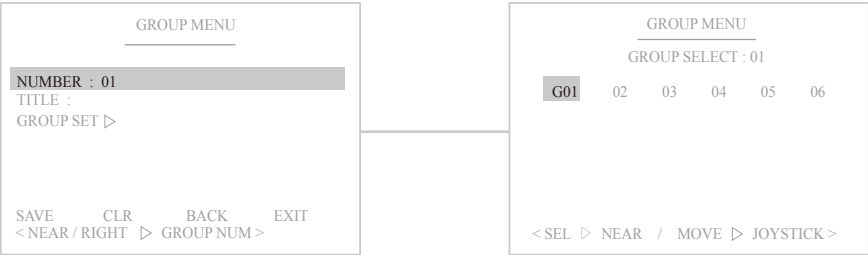

(2) Set the Group TITLE

Move :  Select :  or  Delete :  or 

It's available to set the desired TITLE, displayed on the executing screen of Group.

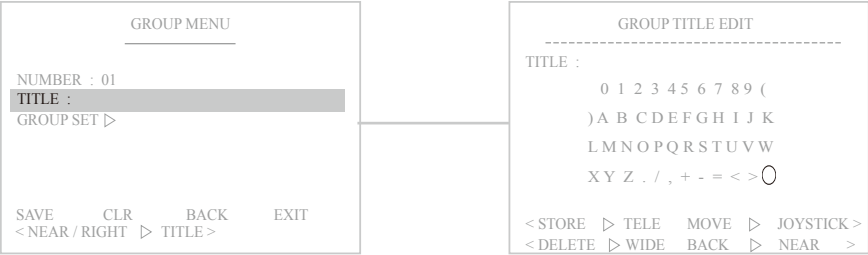

After the TITLE is set, push the NEAR button to exit.

(3) GROUP SET

① Move to the set-up window



② Move and set the position



③ Set & Back



GROUP MENU

NUMBER : 01
TITLE :
GROUP SET ▶

SAVE CLR BACK EXIT
< NEAR / RIGHT ▷ GROUP SET >

GROUP EDIT (01)

NO	TOUR
01	<001>
02	002
03	XXX
04	XXX
05	XXX
06	XXX

< SEL & NEAR PRESET & LEFT >
< SEL & NEAR DELETE WIDE >

- GROUP EDIT : Set the tour from 1 to 6 of group.

GROUP MENU

NUMBER : 01
TITLE :
GROUP SET ▶

SAVE CLR BACK EXIT

< NEAR ▷ DATA SAVE >

(4) "Save" above setting Pattern data to the memory.

(5) "CLR" means above setting Pattern data will not be saved and be cleared.

(6) "BACK" means it goes back to the previous menu :Motion.

(7) "EXIT" means it goes out of MENU.

4. 2. 4 Scan




The Scan function means that the camera keeps panning between two programmed pan positions. It also adjusts the moving speed(1~64 step). Maximum 8 Scan functions are toured in order.

(1) Select the Scan number

S01 : Defined Scan number / 01 : Undefined Scan number


Move :  Select : 

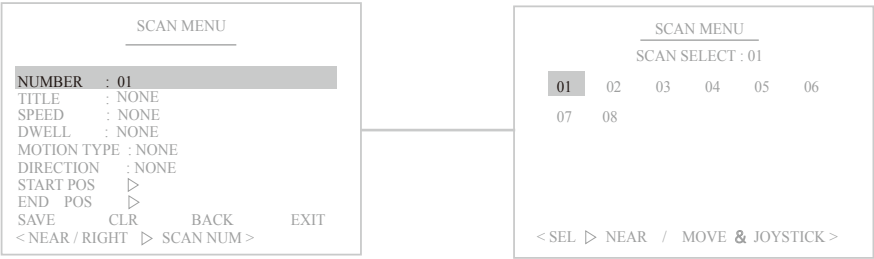

(2) Set the Scan TITLE

Move :  Select :  or  Delete :  or 

It's available to set the desired TITLE, displayed on the executing screen of Scan.

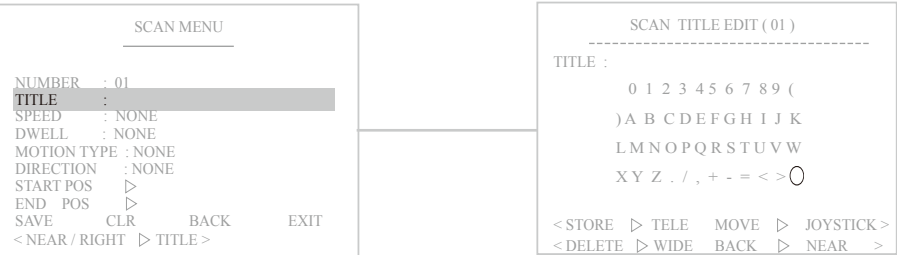


After the TITLE is set, push NEAR button to go out.

(3) Set the Scan speed

Increase :  or  JOYSTICK

Decrease :  or  JOYSTICK

It adjusts the moving speed from 1~64 steps.

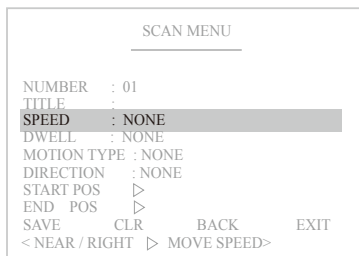


(4) Set the Dwell Time

Increase :  or  JOYSTICK

Decrease :  or  JOYSTICK

Dwell time means the time that the camera stay at the start & end pan positions.

It's adjustable from 00~59 seconds.

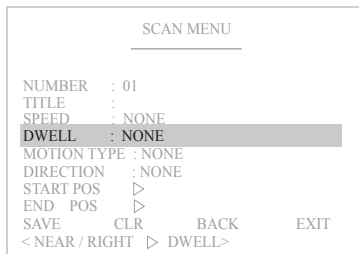

(5) Set the Motion Type


Set PAN/TILT direction

When PAN is set, PAN SCAN is proceeded with the specified coordinate value.

When TILT is set, TILT SCAN is proceeded with the specified coordinate value.

Select :  JOYSTICK or  Set ON :  JOYSTICK

Set OFF : 

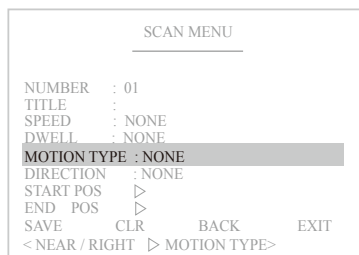

(6) Set the Direction

PAN : Select Clock Wise or C_Clock Wise direction

When select C_Clock WISE, counterclockwise progression

When select Clock WISE, clockwise progression

TILT : Set the UP & DOWN.

Select :  or  Set ON : 

Set OFF : 

SCAN MENU	
NUMBER	: 01
TITLE	:
SPEED	: NONE
DWELL	: NONE
MOTION TYPE	: NONE
DIRECTION	: NONE
START POS	▷
END POS	▷
SAVE	CLR BACK EXIT
< NEAR / RIGHT ▷ DIRECTION >	

(7) Define the Start position

① Select Start Pos menu

 or 

② Move and set the position



③ Go back





SCAN MENU	
NUMBER	: 01
TITLE	:
SPEED	: NONE
DWELL	: NONE
MOTION TYPE	: NONE
DIRECTION	: NONE
START POS	▷
END POS	▷
SAVE	CLR BACK EXIT
< NEAR / RIGHT ▷ START POS >	

STRAT POSITION	
< EXIT ▷ FOCUS NEAR >	
SET POSITION P : 000 T : 000 Z : x01	

(8) Define the End position

① Select End Pos menu

 or 

② Move and set the position



③ Go back



SCAN MENU	
NUMBER	: 01
TITLE	:
SPEED	: NONE
DWELL	: NONE
MOTION TYPE	: NONE
DIRECTION	: NONE
START POS	▷
END POS	▷
SAVE	CLR BACK EXIT
< NEAR / RIGHT ▷ END POS >	

SCAN END POSITION	
< EXIT ▷ FOCUS NEAR >	
SET POSITION P : 000 T : 000 Z : x01	

- When Motion type is PAN, Pan is available.
- When Motion type is TILT, TILT is available.

- (9) “Save” above setting Pattern data to the memory.
- (10) “CLR” means above setting Pattern data will not be saved and be cleared.
- (11) “BACK” means it goes back to the previous menu :Motion.
- (12) “EXIT” means it goes out of MENU.

SCAN MENU

NUMBER : 01

TITLE : NONE

SPEED : NONE

DWELL : NONE

MOTION TYPE : NONE

DIRECTION : NONE

START POS ▶

END POS ▶

SAVE

CLR


BACK

EXIT

<NEAR ▶

DATA SAVE >

4.2.5 Pattern

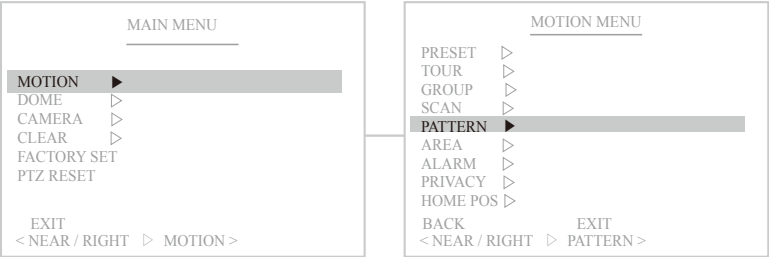


The Pattern function memorizes User's random moving path and zoom ratio. Total recording time limit is 65secs and maximum 4 Pattern functions are toured in order.

(1) Select the Pattern number

PAT01 : Defined Pattern number / 01 : Undefined Pattern number


Move :  Select : 

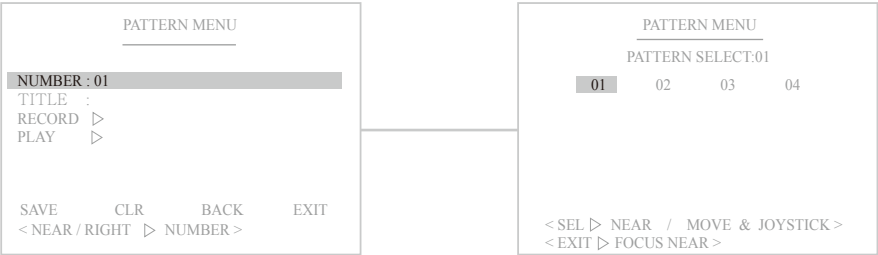

(2) Set the Pattern TITLE

Move :  Select :  or  Delete :  or 

It's available to set the desired TITLE, displayed on the executing screen of Pattern.

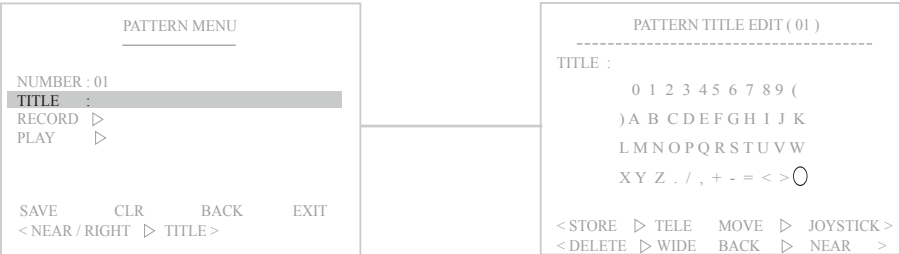

After the TITLE set, push NEAR button to go out.

(3) Record and Save the User's random Pattern data

① Select the "Record" Menu



Or



JOYSTICK

② Move and record the pattern



JOYSTICK

③ NEAR -> EXIT

FAR -> RECORD ON

PATTERN MENU

NUMBER : 01
TITLE :
RECORD ▶
PLAY ▶

SAVE CLR BACK EXIT
< NEAR / RIGHT ▶ RECORD >

PATTERN RECORD

<NEAR ▶ EXIT>
<FAR ▶ ON >
SET POSITION P : 000 T : 000 Z : x0

(4) Play back the recorded Pattern data

PATTERN MENU

NUMBER : 01
TITLE :
RECORD ▶<08SEC>
PLAY ▶

SAVE CLR BACK EXIT
< NEAR / RIGHT ▶ PLAY >

(5) "Save" above setting Pattern data to the memory.

(6) "CLR" means above setting Pattern data will not be saved and be cleared.

(7) "BACK" means it goes back to the previous menu :Motion.

(8) "EXIT" means it goes out of MENU.

PATTERN MENU

NUMBER : 01
TITLE :
RECORD ▶<08SEC>
PLAY ▶

SAVE CLR BACK EXIT
< NEAR ▶ DATA SAVE >

4. 2. 6 Area



The Area function means that it displays the Area name between two programmed pan positions. Maximun 16 Area functions are toured in order.

- (1) Select the Area number
AR 01 : Defined Area number / 01 : Undefined Area number

Move :  JOYSTICK Select : 



- (2) Set the Area TITLE

Move :  JOYSTICK Select :  or  JOYSTICK Delete :  or  JOYSTICK

It's available to set the desired TITLE, displayed on the executing screen of Area.



After the TITLE set, push NEAR button to go out.

(3) Set the Direction

Select :  or  Set ON :  Set OFF : 

C_ Clock WISE is counterclockwise mark, Clock WISE is clockwise mark.

AREA MENU

NUMBER : 01
TITLE :
DIRECTION : <C_CLOCK WISE>
S PAN POS. ▷
E PAN POS. ▷

 
SAVE CLR BACK EXIT
<NEAR / RIGHT ▷ DIRECTION >

(4) Define the Start pan position

① Select the "Start Pan Pos" menu

② Move and set the position

③ Set & Back

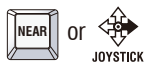

AREA MENU

NUMBER : 01
TITLE :
DIRECTION : NONE
S PAN POS. ▶
E PAN POS. ▷

SAVE CLR BACK EXIT
< MOVE & NEAR / START POS >

AREA START PAN POSITION

 
< EXIT ▷ FOCUS NEAR >
SET POSITION P : 000 T : 000 Z : x01

(5) Define the END pan position

① Select the "END Pan Pos" Menu

② Move and set the position

③ Set & Back

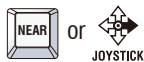

AREA MENU

NUMBER : 01
TITLE :
DIRECTION : NONE
S PAN POS. ▷
E PAN POS. ▶

SAVE CLR BACK EXIT
< MOVE & NEAR / END POS >

AREA STOP PAN POSITION

< EXIT ▷ FOCUS NEAR >
SET POSITION P : 000 T : 000 Z : x01

- (6) “Save” above setting Area data to the memory.
- (7) “CLR” means above setting Area data will not be saved and be cleared.
- (8) “BACK” means it goes back to the previous menu :Motion.
- (9) “EXIT” means it goes out of MENU

AREA MENU

NUMBER : 01

TITLE :

DIRECTION : NONE


S PAN POS. ▷

E PAN POS. ▷

SAVE CLR BACK EXIT

< NEAR ▷ DATA SAVE >


4.2.7 Alarm

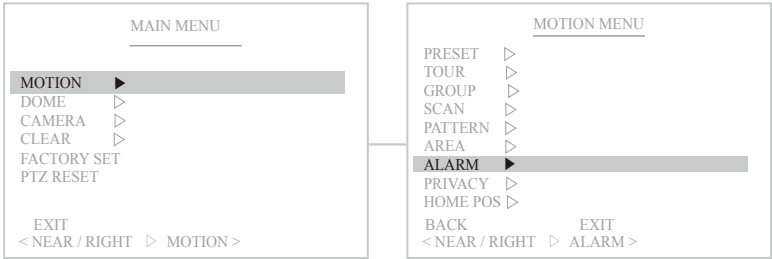

The Alarm function means that the camera moves to the programmed Preset position by the Alarm trigger. Maximum 8 Alarm functions are toured in order.

- (1) Select the Alarm number
E01 : Defined Alarm number / 01 : Undefined Alarm number


Move :  JOYSTICK Select : 

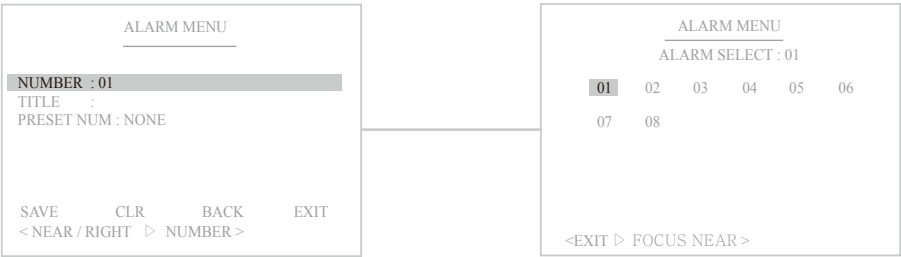

- (2) Set the Alarm TITLE

Move :  JOYSTICK Select :  or  JOYSTICK Delete :  or  JOYSTICK

It's available to set the desired TITLE, displayed on the executing screen of Alarm.

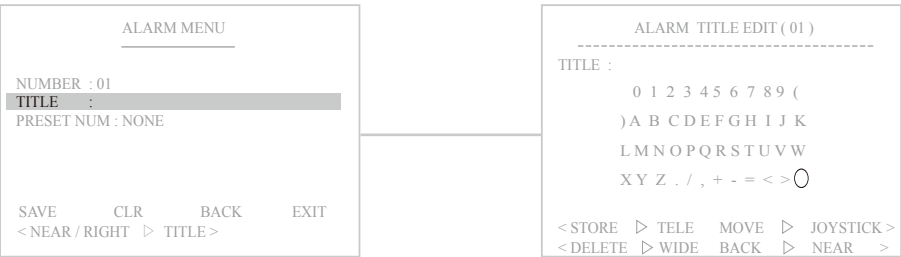

After the TITLE is set, push the NEAR button to exit.

(3) Define the Preset position with Alarm trigger

- ① Select the "Preset Num" ② Move and set the position ③ Set & Back



or



JOYSTICK



JOYSTICK



ALARM MENU

NUMBER : 01
 TITLE :
PRESET NUM : NONE

SAVE
CLR
BACK
EXIT

< NEAR / RIGHT
> JOYSTICK >

ALARM MENU

PRESET SELECT : 001

P001	P002	P003	P004	P005
006	007	008	009	010
011	012	013	014	015
016	017	018	019	020
021	022	023	024	025
026	027	028	029	030
031	032	033	034	035
036	037	038	039	040
041	042	043	044	045

<EXIT >FOCUS NEAR >
 <SEL >NEAR /MOVE > JOYSTICK>

(4) "Save" above setting Alarm data to the memory.

(5) "CLR" means above setting Alarm data will not be saved and be cleared.

(6) "BACK" means it goes back to the previous menu :Motion.

(7) "EXIT" means it goes out of MENU


ALARM MENU

NUMBER : 01
 TITLE :
 PRESET NUM : NONE

SAVE
CLR
BACK
EXIT

< NEAR
> DATA SAVE >

4. 2. 8 Privacy Zone Masking

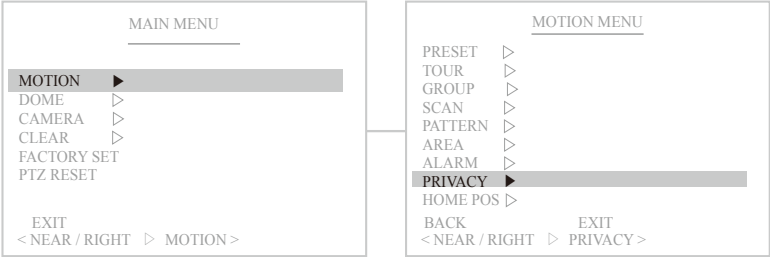


The Privacy Zone Masking function means that it sets the blocking territories to prevent camera functions for the privacy of personal reasons. Maximum of 8 Privacy Zone Masking functions are toured in order.

- (1) Select the Privacy Zone number
R01 : Defined Alarm number / 01 : Undefined Alarm number

Move :  JOYSTICK Select : 



- (2) Color : BLACK/WHITE


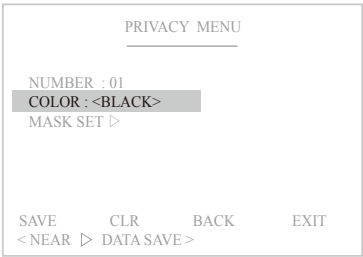


You can change the color of the privacy mask.
Choose the color you want from the menu.
※ Default color: WHITE

(3) Mask set

Move :  JOYSTICK Select :  or  JOYSTICK Delete :  or  JOYSTICK

It's available to set the desired position and size of the blocking territories freely.

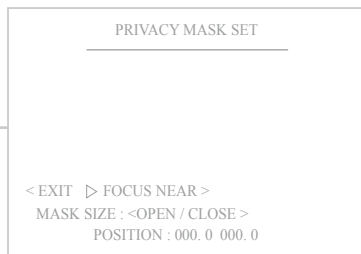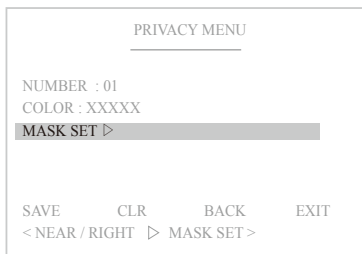


After the Privacy Zone is set, push the NEAR button to go out.

(4) "Save" above settings of Privacy Zone data to the memory.


(5) "CLR" means above setting of Privacy Zone data will not be saved and be cleared.

(6) "BACK" means it goes back to the previous menu :Motion.

(7) "EXIT" means it goes out of MENU.

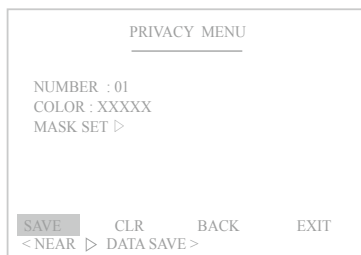

4. 2. 9 Home Position

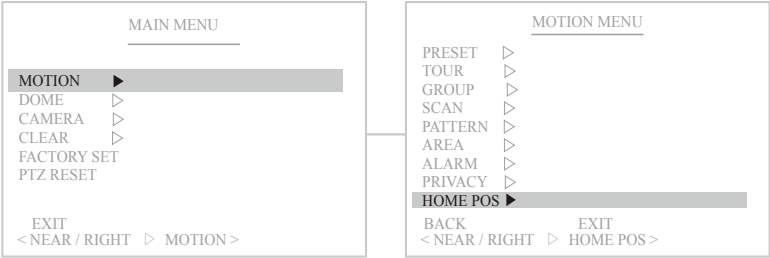

Home Position : Move to selected home position.(255 + PRESET)

(1) Home Position ON/OFF setting

Move :  Select : 



(2) Home Position SET

Move :  Select : 



4.3 Dome Setting




Pan, Tilt, Zoom motion is adjustable in the “Dome Setting” Menu.

4.3.1 Set the Dome camera title

Move : JOYSTICK Select : or JOYSTICK Delete : or JOYSTICK

It's available to set the desired camera title.

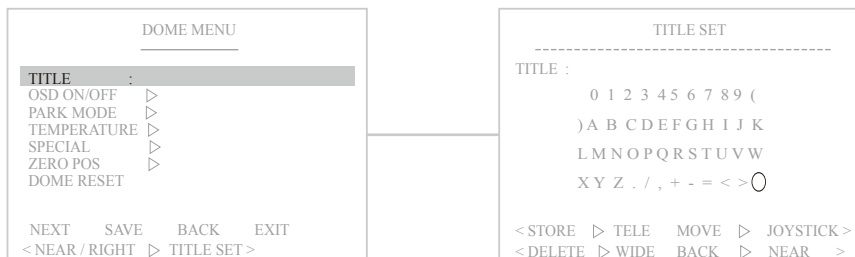


After the TITLE is set, push NEAR button to exit.

4.3.2 OSD ON/OFF Set

You can select the OSD ON to shown on the screen or clear by selecting OFF in this function.

Select : JOYSTICK or Set ON : JOYSTICK Set OFF :

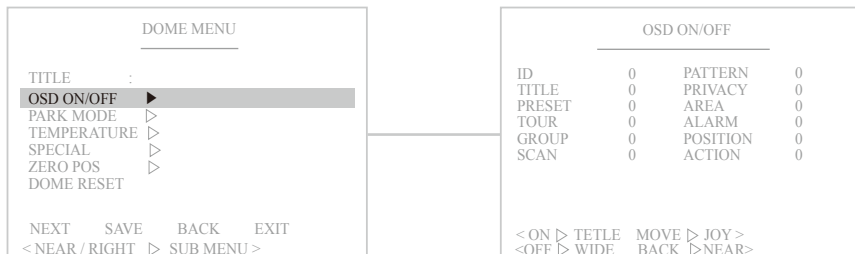


4. 3. 3 PARK MODE

This function enables to locate the camera to specific position automatically if operator doesn't operate the controller for a while.





- ON/OFF : Select ON/OFF
- TIME : Select 10 sec~1 HOUR
- MOTION : Set PRESET / TOUR / GROUP / SCAN / PATTERN / HOMEPOS
- NUMBER
 - PRESET : 1~255
 - TOUR : 1~8
 - GROUP : 1~6
 - SCAN : 1~8
 - PATTERN : 1~4

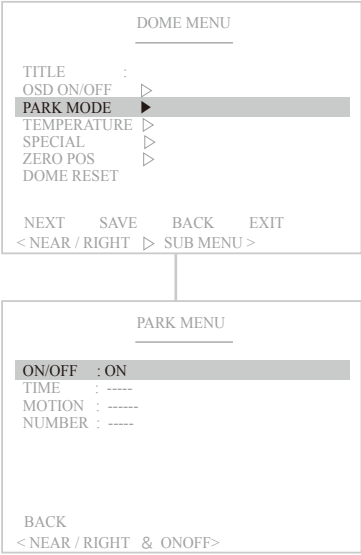

4. 3. 4 TEMP MODE

It shows you the current temperature and you can also set the value manually. The compulsory Fan & Heater operation is a useful function to remove humidity.

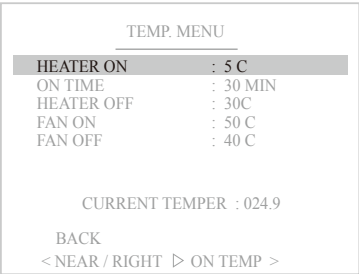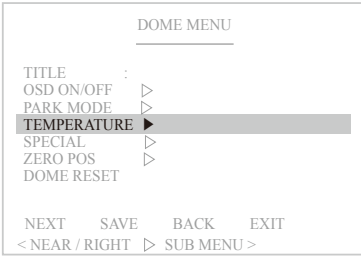


(1) HEATER ON

Set the operating temperature of the heater. (0~70℃)

Select :  or  Set ON : 

JOYSTICK NEAR JOYSTICK

Set OFF : 

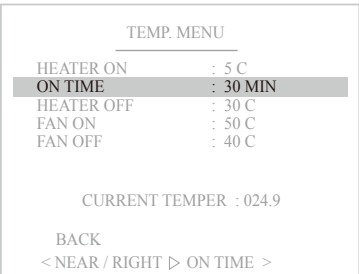


(2) ON TIME

Set the operating time of the heater.
- By 10min. (10~60 min.)

Select :  or  Set ON : 

JOYSTICK NEAR JOYSTICK

Set OFF : 

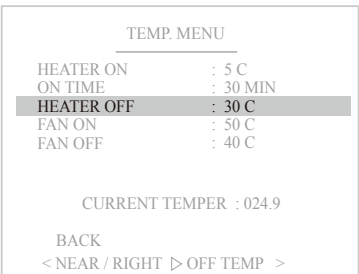

(3) HEATER OFF

Set the temperature of heater OFF. (0~70℃)

Select :  or  Set ON : 

JOYSTICK NEAR JOYSTICK

Set OFF : 

TEMP. MENU	
HEATER ON	: 5 C
ON TIME	: 30 MIN
HEATER OFF	: 30 C
FAN ON	: 50 C
FAN OFF	: 40 C
CURRENT TEMPER : 024.9	
BACK	
< NEAR / RIGHT ▷ FAN ON >	

(4) FAN ON

Set the operating temperature of the Fan. (0~70℃)

Select :  or  Set ON :  JOYSTICK

Set OFF : 

TEMP. MENU	
HEATER ON	: 5 C
ON TIME	: 30 MIN
HEATER OFF	: 30 C
FAN ON	: 50 C
FAN OFF	: 40 C
CURRENT TEMPER : 024.9	
BACK	
< NEAR / RIGHT ▷ FAN OFF >	





(5) FAN OFF

Set the temperature of Fan OFF. (0~70℃)

Select :  or  Set ON :  JOYSTICK

Set OFF : 

4.3.5 Special

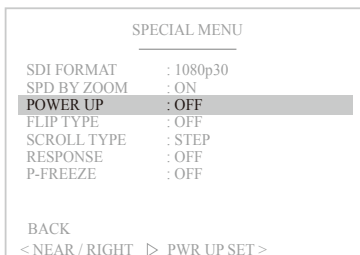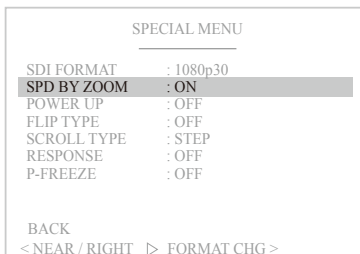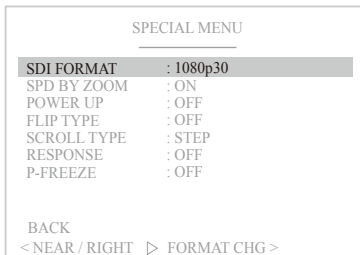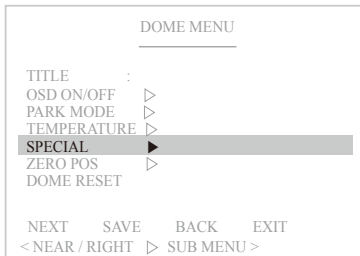


(1) SDI FORMAT

720p30(25) ~ 1440p30(25)

* Video format setting depends upon the models.

* Video format is not applied for analogue output.

Select :  or  Set ON : 

Set OFF : 

(2) SPEED BY ZOOM

Adjust PAN/Tilt Speed by Zoom ration.

(Available to check with max zoom rate.)


Select :  or  Set ON : 

Set OFF : 

(3) POWER UP

When this function is ON, the camera memorizes the latest action and restores, it from sudden power failure.

Select :  or  Set ON : 

Set OFF : 

SPECIAL MENU	
SDI FORMAT	: 1080p30
SPD BY ZOOM	: ON
POWER UP	: OFF
FLIP TYPE	: OFF
SCROLL TYPE	: STEP
RESPONSE	: OFF
P-FREEZE	: OFF
BACK	
< NEAR / RIGHT ▷ AUTOFLIP >	

(4) FLIP TYPE

- OFF: TILT movement ranges from 0 ~90°
- AUTO: When TILT move to 90°, PAN 180° automatically reversed moved
- DIGITAL: TILT movement ranges from 0 ~ 180°
(Reversal of Image with 90° degree angle.)

Select :  or  Set ON : 

Set OFF : 

SPECIAL MENU	
SDI FORMAT	: 1080p30
SPD BY ZOOM	: ON
POWER UP	: OFF
FLIP TYPE	: OFF
SCROLL TYPE	: STEP
RESPONSE	: OFF
P-FREEZE	: OFF
BACK	
< NEAR / RIGHT ▷ TYPE >	

(5) SCROLL TYPE

Set the cursor progress
STEP : by 1 STEP
AUTO : Continuous scroll

Select :  or  Set ON : 

Set OFF : 

SPECIAL MENU	
SDI FORMAT	: 1080p30
SPD BY ZOOM	: ON
POWER UP	: OFF
FLIP TYPE	: OFF
SCROLL TYPE	: STEP
RESPONSE	: OFF
P-FREEZE	: OFF
BACK	
< NEAR / RIGHT ▷ ON/OFF >	

(6) RESPONSE TXD

Tx communication line to transfer the unique value of protocol response.

Select :  or  Set ON : 

Set OFF : 

SPECIAL MENU	
SDI FORMAT	: 1080p30
SPD BY ZOOM	: ON
POWER UP	: OFF
FLIP TYPE	: OFF
SCROLL TYPE	: STEP
RESPONSE	: OFF
P-FREEZE	: OFF
BACK	
< NEAR / RIGHT ▷ ON/OFF >	



(7) P-FREEZE

The screen is stopped while the camera is operating motion funtion.


Select :  or  Set ON : 

Set OFF : 


4. 3. 6 ZERO POS

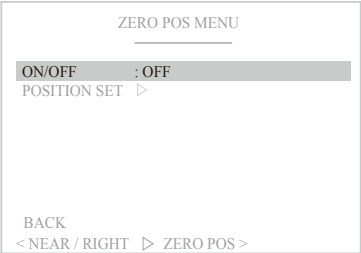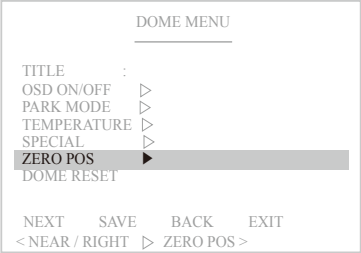

When select ON, the zero position is changeable.

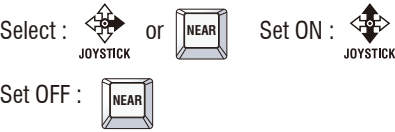

4. 3. 7 DOME RESET

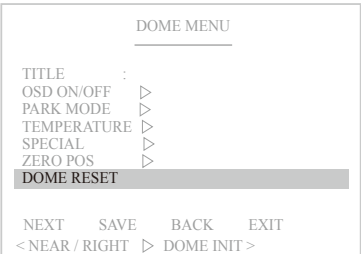

DOME MENU initialization function.

DOME MENU	
TITLE	:
OSD ON/OFF	:▷
PARK MODE	:▷
TEMPERATURE	:▷
SPECIAL	:▷
ZERO POS	:▷
DOME RESET	
<div> <div>NEXT</div> <div>SAVE</div> <div>BACK</div> <div>EXIT</div> </div>	
< NEAR / RIGHT ▷ TITLE >	

DOME NEXT MENU	
DATA BACK/LOAD ▶	
EXT IR SET	:▷
WIPER SETTING	:▷
INIT. SETTING	:▷
<div> <div>NEXT</div> <div>SAVE</div> <div>BACK</div> <div>EXIT</div> </div>	
< NEAR / RIGHT ▷ SUB MENU >	

4. 3. 8 DATA BACK/LOAD : Save or load the Motion, Camera and PTZ Setting Data.

DATA BACK/LOAD	
MOTION	: SAVE
CAMERA	: SAVE
DOME	: SAVE
ALL	: SAVE
MOTION	: LOAD
CAMERA	: LOAD
DOME	: LOAD
ALL	: LOAD
<div> <div>BACK</div> </div>	
< NEAR / RIGHT ▷ DATA SAVE >	

DATA BACK/LOAD		
MOTION	: SAVE	YES <NO>
CAMERA	: SAVE	
DOME	: SAVE	
ALL	: SAVE	
MOTION	: LOAD	
CAMERA	: LOAD	
DOME	: LOAD	
ALL	: LOAD	
<div> <div>BACK</div> </div>		
< NEAR / RIGHT ▷ DATA SAVE >		

4. 3. 9 EXTERNAL IR SET

EXT IR SET	
IR SYNC MODE	: ALS SYNC
IR ILLUMINATE	: HIGHEST
ICR CHG LUX	: 2 LUX
IR CONT. TYPE	: AUTO
IR OFFSET	: 0
<div> <div>BACK</div> </div>	
< NEAR / RIGHT ▷ SYNC SET >	

(1) IR SYNC MODE

ALS SYNC : Synchronized in visible light.

ALL ON : IR always on.

ALL OFF : IR always off.

ICR SYNC : Operate External IR connected Camera ICR

※ Factory default is ALS SYNC .

Select :  or  Set ON : 

Set OFF : 

EXT IR SET	
IR SYNC MODE	: ALS SYNC
IR ILLUMINATE	: HIGHEST
ICR CHG LUX	: 2 LUX
IR CONT. TYPE	: AUTO
IR OFFSET	: 0
<div> <div>BACK</div> </div>	
< NEAR / RIGHT ▷ ILLUMINATE >	

(2) IR ILLUMINATE

HIGHEST : Output the Max.IR light

HIGH : Output the hight level of IR light

LOWEST : Out put the Min. IR light

LOW : Output the low level of IR light

※ Factory default is HIGHEST.

Select :  or  Set ON : 

Set OFF : 

EXT IR SET	
IR SYNC MODE	: ALS SYNC
IR ILLUMINATE	: HIGHEST
ICR CHG LUX	: 2 LUX
IR CONT. TYPE	: AUTO
IR OFFSET	: 0
BACK < NEAR / RIGHT > ICR LUX >	

(3) ICR CHG LUX

Set the Day / Night ICR illumination. (0.5~20)

※ Factory default is 2 LUX.

※ Support ALS Sync Mode only.

Select :  or  Set ON : 

Set OFF : 

EXT IR SET	
IR SYNC MODE	: ALS SYNC
IR ILLUMINATE	: HIGHEST
ICR CHG LUX	: 2 LUX
IR CONT. TYPE	: AUTO
IR OFFSET	: 0
BACK < NEAR / RIGHT > IR CONT. TYPE>	

(4) IR CONT. TYPE

Select AUTO or MANUAL mode in IR Zoom function.

AUTO : CAMERA , IR ZOOM

MANUAL : IR ZOOM

※ factory default is AUTO.

Select :  or  Set ON : 

Set OFF : 

EXT IR SET	
IR SYNC MODE	: ALS SYNC
IR ILLUMINATE	: HIGHEST
ICR CHG LUX	: 2 LUX
IR CONT. TYPE	: AUTO
IR OFFSET	: 0
BACK < NEAR / RIGHT > IR OFFSET>	

(5) IR OFFSET

Set the IR sensitivity. (-4~4)

※ Factory default is 0

Select :  or  Set ON : 

Set OFF : 

4. 3. 10 WIPER SETTING

WIPER SETTING	
WIPER MODE	: OFF MODE
WIPER POSITION	: RIGHT
WIPER INT. TIME	: XXXX
WIPER ON TIME	: XXXX
BACK < NEAR / RIGHT > WIPER MODE >	

(1) WIPER MODE

Select ON MODE / OFF MODE / TIME SET to use the wiper function.

(Default : OFF MODE)

Select :  or  Set ON : 

Set OFF : 

WIPER SETTING

WIPER MODE : ON MODE
WIPER POSITION : RIGHT
 WIPER INT. TIME : XXXX
 WIPER ON TIME : 10MIN

BACK
 <NEAR / RIGHT ▷ WIPER POS.>

(2) WIPER POSITION

Set wiper position function.

Select :  or  Set ON :  JOYSTICK

Set OFF : 

WIPER SETTING

WIPER MODE : TIME SET
 WIPER POSITION : RIGHT
WIPER INT. TIME : 8MIN
 WIPER ON TIME : ALWAYS

BACK
 <NEAR / RIGHT ▷ WIPER TIME.>


(3) WIPER INTERVAL TIME

10SEC ~ 4HOUR

The wiper will be operated on as the time set on the interval.

* The wiper will be operated during the time set on the Wiper On Time.

Select :  or  Set ON :  JOYSTICK

Set OFF : 

WIPER SETTING

WIPER MODE : ON MODE
 WIPER POSITION : RIGHT
 WIPER INT. TIME : XXXXX
WIPER ON TIME : <ALWAYS>

BACK
 <CHANGE▷UP/DN SEL▷NEAR>

(4) WIPER ON TIME


1MIN ~ ALWAYS

The wiper will be operated during the time set on the Wiper On Time.


Select :  or  Set ON :  JOYSTICK

Set OFF : 

4. 3. 11 INIT. SETTING MENU

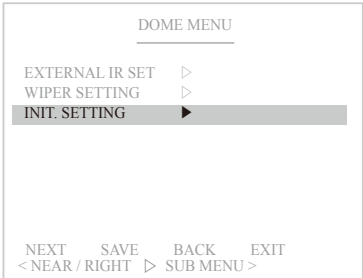

This function performs re-energization of the product and the initialization operation continuously after the specified time has elapsed.

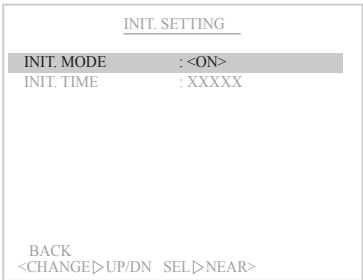

INIT. MODE : OFF, ON

(1) INIT. Setting

Set whether to use the initialization operation function when the specified time has elapsed.

※ Factory default value is OFF

Select :  or  Set ON : 

Set OFF : 

(2) INIT. TIME

Set the cycle to perform the initial operation.


After the product is turned off, initialization is performed at each startup time.

12 hours / 1 day / 2 days / 3 days / 5 days

It can be selected when INIT.MODE is ON.

Select :  or  Set ON : 

Set OFF : 

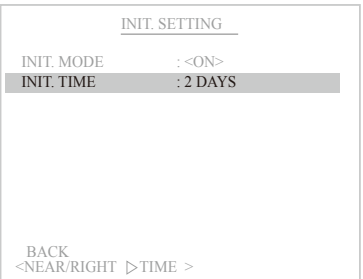

4. 4 Clear Setting

Clears the PTZ position and function value. Select :  or  Set ON :  Set OFF : 

MAIN MENU

MOTION ▷

DOME ▷

CAMERA ▷

CLEAR ▶

FACTORY SET

PTZ RESET

EXIT

< NEAR / RIGHT ▷ CLEAR >

CLEAR MENU

PRESET	<X>	ALARM	X
TOUR	X	PRIVACY	X
GROUP	X	HOME POS.	X
SCAN	X	ZERO POS.	X
PATTERN	X	MOTION ALL	X
AREA	X		

< ON ▷ TELE BACK ▷ NEAR >

< OFF ▷ WIDE EXIT ▷ FAR >

4. 5 Factory set

MAIN MENU

MOTION ▷

DOME ▷

CAMERA ▷

CLEAR ▷

FACTORY SET

PTZ RESET

EXIT

< NEAR / RIGHT ▷ FACTORY SET >

Clear the DOME, CAMERA and MOTION setting value.



Restore setting values to the factory default.
All existing setting value will be erased.

4. 6 PTZ Reset

MAIN MENU

MOTION ▷

DOME ▷

CAMERA ▷

CLEAR ▷

FACTORY SET

PTZ RESET

EXIT

< NEAR / RIGHT ▷ PTZ RESET >

It is a reset function.

4. 7 Other Quick Opercating Guide

ICR AUTO (ON) = 240 + F1 Long Preset
 ICR DAY (ON) = 241 + F1 Long Preset
 ICR NIGHT (ON) = 242 + F1 Long Preset
 WIPER (ON / OFF) = 244 + F1 Long Preset
 HEATER (ON / OFF) = 245 + F1 Long Preset
 IR ZOOM (AUTO / MANUAL) = 248 + F1 Long Preset
 LIGHT (ON / OFF) = 252 + F1 Long Preset
 INFO (ON / OFF) = 255 + F1 Long Preset

5. SPECIFICATION

5.1 Mechanism Specification

5.1.1 MECHANICAL

- Pan : 360°Continuous Pan, 0.1° to 120°/sec (proportional to zoom)
- Pan Preset Speed : 250°/sec, $\pm 0.1^\circ$ Accuracy
- Tilt : -8°(352°) to 90°(188°) movement, 0.8°~80°/sec (proportional to zoom)
- Tilt Preset Speed : 250°/sec, $\pm 0.05^\circ$ Accuracy
- Weight : Approximately 6.8 Kg(MECHANICAL)
- Dimensions Set : 231(Ø) x 385(mm)

5.1.2 ENVIRONMENTAL

- Construction : Aluminum
- Ingress Protection : IP66 (Outdoor Housing)
- Operating Temp : Outdoor -40°C to 60°C (-40° F to 140° F)/ with 30W Heater
- Humidity : 0% to 90% (non-condensing)
- Fan operate : 50°C on , 40°C off
- Heater operate : 5°C on , 15°C off

5.1.3 FUNCTIONS

- Preset : 255 points, less than 0.1° accuracy
- Tour : 8 programmable
- Group : 6 group(Max.6 Tours are programmable in each Group)
- Scan : 8 (programmable speed and diagonal scan)
- Pattern : 4 patterns for 60 second.
- Area : 16 Area
- Alarm : 8 alarm
- Privacy Zone : 8 block with title (Mask)
- ID Address : Up to 255 selectable ID (Rotary switch)
- Data Communication Control : RS-485 / RS-422 / UCC(Only PELCO D / Baud 9600)
- Protocol : Multiple protocol (PELCO D/P, WTX, EZP)
- Baud rate : 2400, 4800, 9600, 19200, 38400, 57600, 115200 bps selectable

5.1.4 ELECTRICAL




- Power : AC21~26V 60Hz / 50Hz(Power adaptor not included)
- Consumption : Operation(5A) / MAX 6A
- Fan & Heater : 10 W / 30 W



5.1.5 USER CONNECTIONS

- Data communication connection : RS-422, 485 + / - Optional Control Data
- SDI connection : BNC
- Alarm Inputs : 8 Programmable
- Relay : 2 Dry Contact Output Rating: 2A @30VAC


6. DIMENSION

6.1 DIMENSION

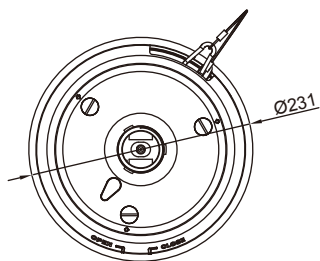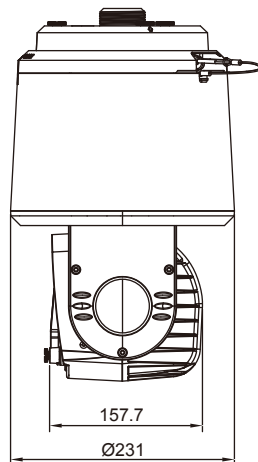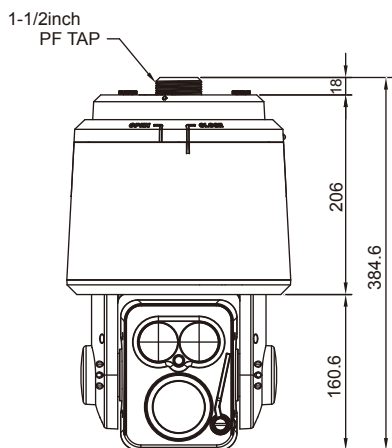

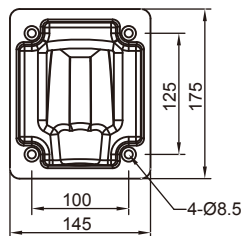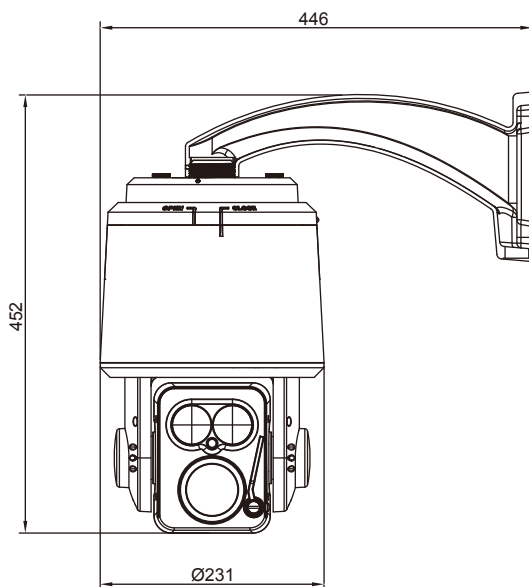

VIEW "A"

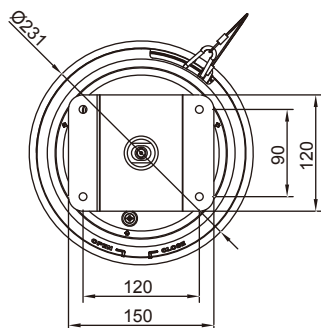

VIEW "A"

