




Manual and dimensions






ISO INNOBIZ

Mod. : Aum-140N

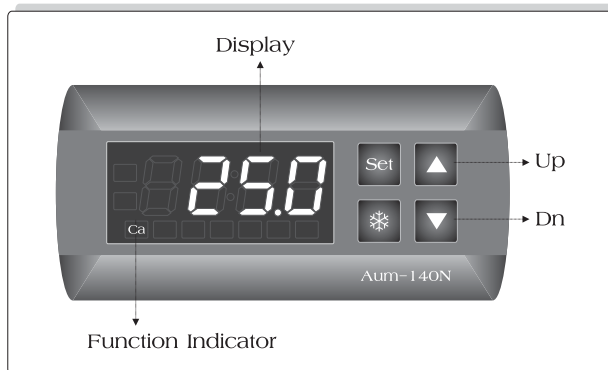

- *. Color : Black
- *. Drilling Template : B.:70.5xH.:30.0xD.:60.0mm

Fig. 01

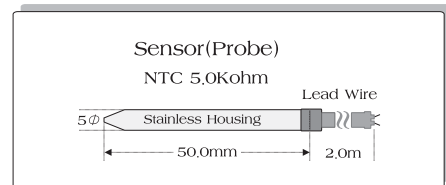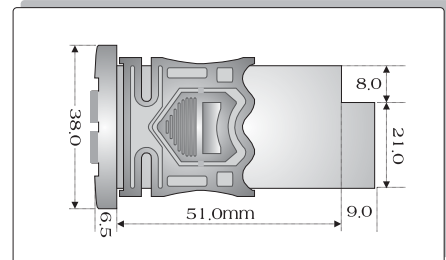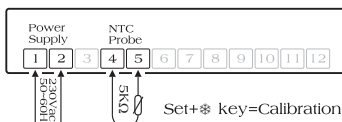

Please be sure to read and fully understand the notices before using it.

No.1 : **Calibration**
Range : **0.0 ~ +/- 6.3°C**
Apply : +/- Present temp.



- ※. **Aum-140N** requires **230Vac** power supply. When a sensor is connected and switched on, the actual temperature detected will be shown on the display.
- a. The function is to correct the differences of present temperature that happen when the lead wire of a sensor for the temperature is extended considerably.
- b. When the sensor is connected, keep it away from the high voltage device, power generator, motor, etc. .
- c. Press "**Set**" and "*" key at the same time to select "**Calibration**" function and then press "▲/▼" key to revise the previous setting.

*. All specifications are subject to change without notice.

Cautions in use

1. Please avoid excessive rising of temperature, humidity and impact.
2. Please it upright to prevent water droplet at the end part of sensor.
3. Keep it away from high voltage device or power generator and motor.
4. Please wait for 5seconds to turning it on again to avoid electric impact.
5. Use it between 0~60°C in temperature, 60% humidity around the controllers.
6. Please install in safe from strong acids, alkalis, oil, dust & direct rays of sun.
7. Please set safe protection at the double circuit when using at expensive appliances (Freezer, Heater and motor).



Wooree Electronics