


ITEM : Sight Glass & Flow Indicator

WISE[®] WISE Control Inc.
www.wisecontrol.com

19F, 181, Gasan digital 1-ro, Geumcheon-gu, Seoul, Republic of Korea
Tel : +82-2-300-2300 ; Fax : +82-2-300-2301

 WISE CONTROL	INSTALLATION & OPERATION MANUAL	DOC.NO. : C-QIM-2731-F14 PAGE : 2/10
--	--	---


CONTENTS

1. INTRODUCTION FOR USAGE OF FLOWMETER

- 1) GENERAL**
- 2) INSTALLATION**

2. SIGHT GLASS AND FLOW INDICATOR

- 1) GENERAL**
- 2) STANDARD FEATURE**
- 3) CHARACTERISTICS**
- 4) INSTALLATION AND MAINTENANCE**
- 5) TROUBLESHOOTING**

 WISE CONTROL	INSTALLATION & OPERATION MANUAL	DOC.NO. : C-QIM-2731-F14 PAGE : 3/10
--	--	---

INSTRUCTION FOR USAGE OF FLOWMETER

1. General

For the correct usage of the Flowmeter, Installation, Maintenance, Repair and Inspection shall be done at the site. No matter how excellent in the design and best parts applied in the Flowmeter, not only the flowmeter is bad in its performance but also the whole system is low in the creditability and safety without good consideration on the Process, and well organized work control and maintenance plan.

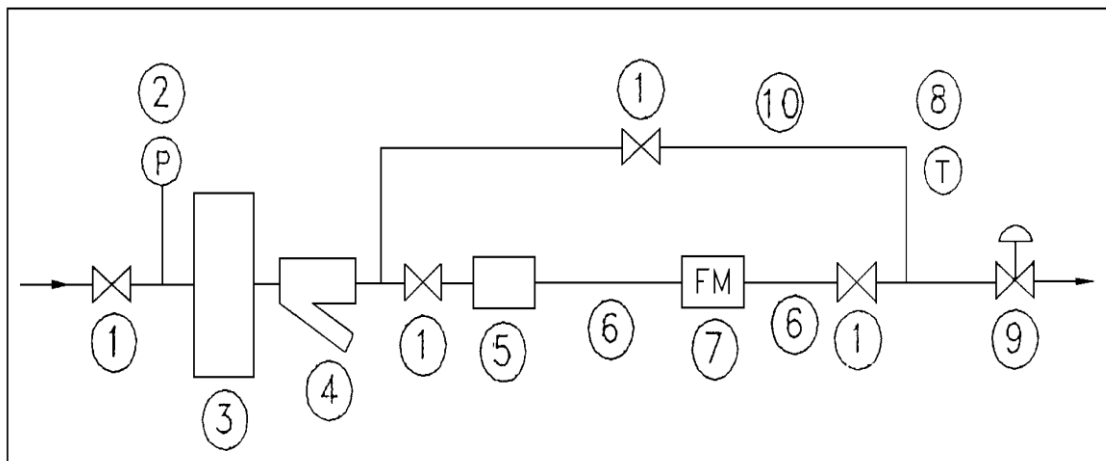
Hence, due to the Carelessness in installation and maintenance of the Flowmeter in the Process can cause the bad performance or malfunction of the whole system, the correct installation and proper maintenance program shall be set up as a part of the Process and executed by the plan.

2. Installation

(1) Flometer Diagram

It is designed the basic piping diagram to maximize the performance of the flowmeter, and it is called "Flowmeter Diagram"

As shown on Fig.1-1, each entity has own role and is required for the accurate measurement of the flow rate. But, the actual "Flowmeter Diagram" can be differed by the principle of the applied flowmeter and the fluid flow to be measured, then please refer this manual carefully to make the proper diagram. Also simple explanations for each entity are added.

**(FIG. 1-1) Sample of " Flowmeter Diagram"**

- | | | | |
|--------------------|----------------------|-------------|--------------------|
| ① Stop Valve | ② Pressure Gauge | ③ Separator | ④ Strainer(filter) |
| ⑤ Flow Conditioner | ⑥ Straight Pipe Line | ⑦ Flowmeter | ⑧ Thermometer |
| ⑨ Flow Control V/V | ⑩ By-pass Line | | |

(2) Installation Condition

For the accurate and consistent measurement, it is recommended to install the flowmeter with cautions as the below.

① AMBIENT TEMPERATURE

- ▷ Install the Flowmeter at the place where the temperature keep in constant or change in small.
- ▷ The allowable temperature in the installed place shall be complied to the Specification of the Flowmeter.

② ATMOSPHERE

- ▷ Avoid the place existing the corrosive gas.
- ▷ Don't let the water flow into the conduit or stay in.


③ Install at the place without or minimized the shock and vibration.

④ Keep enough space for the maintenance and repair.

⑤ Avoid the place existing Electromagnetic Interference.

⑥ Avoid in the piping occurred the cavitation effect.

⑦ Must keep the required straight line length by the type of the flowmeter.

 WISE CONTROL	INSTALLATION & OPERATION MANUAL	DOC.NO. : C-QIM-2731-F14 PAGE : 5/10
--	--	---

(3) Installation

It shall be installed by the instruction specified and flushed the flowmeter prior to the installation.

- ① Confirm the flow direction with the indication on the flowmeter.
- ② Use the correct size of the tightening bolts with the Pipe.
- ③ Install the seal such as gasket to prevent from leaking.
- ④ Tighten the bolts with the constant force and the diagonal directional sequence.
- ⑤ Follow the specified earthing method in electrical works.
(refer to the attached wiring diagram)

(4) Maintenance and Check

Generally the maintenance program can be classified by two types; Precautionary program and Post program.

In Precautionary program, it is included in the Internal Check List for the precaution to the installation.

of the malfunction and defect, which is being kept in record, and Occasional Check-out of the cleanness and tightness. Post Program is designed for the reactive of the flowmeter after the malfunction occurred and is included in the understands of the problem, the investigation of the cause, resolutions and prevention in future. It will be explained in detail at the provisions for the principle of the flowmeter, maintenance and checking method for each type of the flowmeter.

① Seperator


This is the device to reduce the error on reading due to the air or steam included in the fluid flow. It shall be applied in the system using the mass flowmeter.

② Strainer (Filter)

This is the device to prevent the damage by collecting the dust, chips, sand or other foreign substances in the fluid flow.

③ Flow Conditioner

The is the device installed at the upstream of the flowmeter in order to minimize the effects on the flowmeter characteristics by removing or reducing the vortex, turbulence and axial flow.

 WISE CONTROL	INSTALLATION & OPERATION MANUAL	DOC.NO. : C-QIM-2731-F14 PAGE : 6/10
--	--	---

④ Straight Piping Line

It is the straight part of the piping line between the upstream and downstream of the flowmeter for the accuracy of the measurement. This part is required to make the flow stable, and a priority factor to be considered in the design of the piping line.

[The required length of the Straight Piping Line]

Type	Electro Mag. Meter	Ultra Sonic Meter	Vortex Meter	P/D Meter	Turbine Meter	Differ. Press. Meter	Variable Area Meter	Mass Meter
Upstream	5D	10D	15D	N/A	20D	20D	N/A	N/A
Downstream	2D	5D	5D	N/A	5D	5D	5D	N/A

⑤ By-Pass Line

It is recommended to design the Piping Line that the maintenance, repair, inspect and calibration of the flowmeter can be done without stopping of the PROCESS.

⑥ Flow Control Valve

If the flow control V/V was placed in upstream of the flowmeter, it could be interfered to the flow and the correct measurement could not expected. Hence, it is recommended to install the flow control V/V in downstream, or keep the enough distance from the flowmeter to prevent from effecting on the flow, if installed in upstream.

WISE CONTROL	INSTALLATION & OPERATION MANUAL	DOC.NO. : C-QIM-2731-F14 PAGE : 7/10
--------------	--	---

SIGHT GLASS AND FLOW INDICATOR (F850)

1. General

The flow rate can be obtained by measuring the Pressure difference of the flow through the FLAPPER & Spring tension Interrelation and flow measurement.

This type of Flowmeter has some advantages such as simple structure, easy to handle and wide application from small to large flow.

2. Standard Feature

- (1) DIAMETER : 1" - 20"
- (2) TEST PRESSURE : 10Kgf/cm²G(Max),Option (20kgf/cm²)
- (3) MAX. OPERATING TEMP : 120 °C
- (4) ACCURACY : F.S ±5%

3. Characteristics

- (1) Simple and clear reading the instant flow in piping.
- (2) Simple structure and easy installation.
- (3) Compact size and available for the large flow measurement.

4. Installation and Maintenance

- (1) Install the Flowmeter in matching the Measuring Part with the direction of flow.
- (2) Clean up the GLASS Inside periodically (including Strainer)
- (3) Connect the Measuring Part in Straight Piping Line
(IN Let = 3D ~ 20D Length, OUT Let = 3D ~ 5D Length)
- (4) For the repair or cleaning of the Indicator, add the BY Pass function.

WISE CONTROL	INSTALLATION & OPERATION MANUAL	DOC.NO. : C-QIM-2731-F14 PAGE : 8/10
--------------	--	---

5. Troubleshooting

※ Prior to install the Flowmeter, Flushing the Piping Line shall be done.

The Strainer is recommended to install in the front of Flowmeter.

Q. Incorrect Buoyant of Rota in Gauge.

A1. Check the Flow first.

A2. In measuring the gas, check the operating pressure with the Flowmeter
Operating Pressure.

< Flowmeter Operating Pressure is called the pressure on the of the Flowmeter>

A3. Check the clogging inside of Body & Indicator to cause the Pressure Loss.

A4. Dismount the Strainer and Clean.

A5. Check the Limit Stopper of Flow.

(Open the Upper CAP, and check the clogging of hole on the Upper Limit Stopper
in Glass.)

Q. Leak between the glass and Connection to BODY.

A1. Check the omission of the seal (packing) between the Indicator and Connection.

A2. Tighten down the Indicator tight bolts

Q. Impossible to read the Flow rate


A1. Open the Upper cover and disassemble the GLASS.

Clean the inside of GLASS with soft cloths or brush.

Q. Leak in the FLANGE Part

A. Tighten down the connecting bolts.

A. Check the omission of PACKING

 WISE CONTROL	INSTALLATION & OPERATION MANUAL	DOC.NO. : C-QIM-2731-F14 PAGE : 9/10
--	--	---

SIGHT GLASS AND FLOW INDICATOR (F851)

1. General

When flow of liquid come by difference pressure from pipe line inside have a flapper on use measuring flow.

Simple design and treatment use for medium or large flow late.

F851 is application under favor of come by difference pressure from flapper and spring tension.

2. Standard Feature


- (1) DIAMETER : 1/2" - 6"
- (2) TEST PRESSURE : 10Kgf/cm²G(Max)
- (3) MAX. OPERATING TEMP. : 60 °C
- (4) ACCURACY : F.S ±5%

3. Characteristics

- (1) It's can simplicity read inside of pipeline.
- (2) It's Simple design and convenient to handle .
- (3) Small size use can measuring large flow rate
- (4) Easy for installation
- (5) Easy for maintenance.

4. Installation and Maintenance

- (1) When installation of flow meter doing in one flow direction.
(flow direction is installation an arrow on the body)
- (2) Must be use the straight line for flow meter.
(IN Let = 3D ~ 20D , OUT Let = 3D ~ 5D)
- (3) When out of order instrument and cleaning added function of by-pass.
- (4) It's installation strainer for dregs and sludge

 WISE CONTROL	INSTALLATION & OPERATION MANUAL	DOC.NO. : C-QIM-2731-F14 PAGE : 10/10
--	--	--

5. Troubleshooting

※ Installation before must be cleaning.

It is possible installation strainer.

Q. An incorrect indicating

A1. Check of the regularity flow liquid.

A2. in case of gas check of the working pressure with standard pressure
< working pressure is posterior to installation flow meter >

A3. check dregs and sludge of the inside flow meter

A4. cleaning to the strainer

Q. In case of come by connection part leakage

A1. Check of the connection part o-ring.

A2. Instrument part BOLT (M6*25 hexagon BOLT)screw up

Q . When illegible flow rate

A1. Instrument part separate from body.

Soft cloth and brush use wiping inside body

Be careful lost o-ring and part of item

Assemble in reverse order

Q. In case of come by body part leakage

A. Strong screw up companion bolt

A. Check of the packing or gasket