Electromagnetic Flowmeters Separated Type

Model: F951

Spec. sheet no. FD09-04

Description

The electromagnetic flowmeter can be used to accurately measure the flowrate of liquids, paper pulp, slurry and mineral slurry which has an electrical conductivity greater than $10 \mu s/cm$.

F951 is a flow measurement system consists of a flowmeter primary and remote mounted converter.



Specification

Type

Separate type

Size

 $15 \sim 1,000A (\frac{1}{2} \sim 40")$

Process connection

Flange type [ANSI, ASME, DIN, JIS, KS, ETC.]

Measuring range

0.2 ~ 10 m/s

Accuracy

±0.5 % Full scale (15 ~ 800A)

±1.0 % Full scale (900A ~: It needs for site calibration.)

Lining

Standard : Hard rubber (0 ~ 60 °C) Option : Teflon (-10 ~ 160 °C) Max. 400A

Ambient temperature

-10 ~ 60 °C

Conductivity

Standard : ≥ 10 µs/cm Option : ≥5 µs/cm

Power supply

Standard : AC 85 ~ 250 V, 50 ~ 60 Hz Option : DC 24 V [2-wire Loop power]

Power consumption

Max. 15 VA

Display

LCD Display with back light Flowrate : 5-Digit Display Total : 9-Digit Display

Output

Analog: DC 4 ~ 20 mA (Isolated) - Active

Pulse : Open collector purse Communication : RS485

Protection class

Sensor : IP67 Converter : IP67

Special feature

Self check
Empty pipe
Enable to reverse flow direction
Data logging
Error message

Electrode signal cable

Standard length: 5 M Option: Max. 30 M



WISE Data Sheet 10/2020 | F951_01

Main order

Ordering information

1. Base model

F951 Electro-Magnetic flowmeter Separated type

2. Meter size

Α	15A (½")	0	350A (14")
В	20A (¾")	Р	400A (16")
С	25A (1")	Q	450A (18")
D	32A (11/4")	R	500A (20")
Е	40A (1½")	S	550A (22")
F	50A (2")	Т	600A (24")
G	65A (2½")	U	650A (26")
Н	80A (3")	V	700A (28")
I	100A (4")	W	750A (30")
J	125A (5")	X	800A (32")
K	150A (6")	Υ	900A (36")
L	200A (8")	Z	1000A (40")
M	250A (10")	1	Other
N	300A (12")		

3. Connection flange

Α	ANSI 150Lb	Н	KS 10K
В	ANSI 300Lb	1	KS 16K
С	ASME 150Lb	J	KS 20K
D	ASME 300Lb	K	DIN PN 10
E	JIS 10K	L	DIN PN 16
F	JIS 16K	M	DIN PN 20
G	JIS 20K	0	Other

4. Electrode material

- 1 Titanium
- 2 316L SS
- 3 Hastelloy-C
- 4 Platinum Iridium
- 5 **Tantalum**
- 6 Other

5. Ground ring material

- 1 None
- 2 316L SS
- 3 Hastelloy C
- 4 Platinum Iridium
- 5 Titanium
- 6 Tantalum
- 7 Other

6. Lining material

- Hard rubber (Flange: A105)
- 2 PTFE (Flange: A182 F304)
- 3

(Hard Rubber w/Flange: A182 F304, PTFE w/Flange: A182 F316, etc.)

7. Excitation and signal cable

- 1 5 M
- 2 10 M
- 3 20 M
- 4 Other (Max. 30 M)

* Example Specification

Sample ordering code								
1	2	3	4	5	6		7	
F951	1	Α	1	1	1		1	


1 Connection: 4" ANSI 150Lb RF

2 Electrode Material : Titanium 3 Ground Ring: None

Lining Material: Hard Rubber (Flange: A105)

Standard material

No.	Part list	Material
1	Head	Cast Aluminium
2	Body	304SS
3	Flange	Standard : Carbon steel Option : 304SS, etc.
4	Lining	Standard : Hard Rubber Option : Teflon
5	Electrode	Standard : Titanium Option : 316L SS Hastelloy-C Platinum Iridium Tantalum

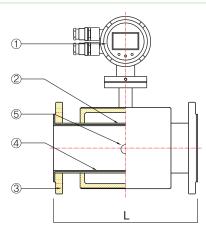



© WISE Control Inc. All rights reserved. ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE.

F951_02 | WISE Data Sheet 10/2020

Principle of Electromagnetic Flowmeter

Principle of operation

The electromagnetic flowmeters are the ideal flowmeters for metering the flow of all liquids, slurries and sludges that have a specific minimum electrical conductivity. These flowmeters measure accurately, create no additional pressure drop, contain no moving or protruding parts, are wear free and corrosion resistant. Installations are possible in any existing piping system.

The electromagnetic flowmeters has proven itself over many decades and is the preferred flowmeter in the Chemical, Pharmaceutical and Cosmetic Industries. Municipal Water and Waste Water treatment facilities and in the Food and Paper industries.

Measurement operation

Faraday's Laws of induction form the basis form the basis for the electromagnetic flowmeter which states that a voltage is generated in a conductor as it moves through a magnetic field.

This principle is applied to a conductive fluid which flows through the meter tube perpendicular to the direction of the magnetic field. (see the figure 1.)

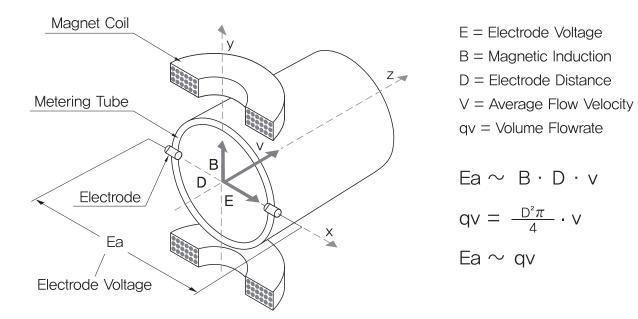


Figure 1. Basic operating principle of an Electromagnetic Flowmeter

The voltage induced in the fluid is measured by two electrodes located diametrically opposite to each other. This electrode voltage "Ea" is proportional to the magnetic induction "B", the electrode distance "D" and the average flow velocity "V". Nothing that the magnetic induction "B" and the electrode distance "D" are constant values indicates that a proportionality existes between the electrode voltage "Ea" and the average flow velocity "V". From the equation for calculating the volume flowrate "Ea~qv", it follows that the signal voltage is linear and proportional to the volumetric flowrate.

WISE Data Sheet 10/2020 F951 C

Measuring range


In the normal industry application it is better to set the measured medium speed as 2~4m/s.

Under the special situation the minimum speed should be more than 0.2m/s and maximum speed less than 8m/s. If there are solid granules in liquid the usual speed should be less than 3m/s for purpose to avoid the over-attrition between lining and electrical poles.

For viscid liquid the speed can choose as 2m/s the fast flow speed makes for the automatic elimination of obstructive substances glued on poles, therefore improve the inspection's preciseness.

	Flow range					Max.	
O: ()	Minimum		Maximum		Dimension "L"	Working	Approx
Size (mm)	Velocity (m/s)	Flow rate (m³/h)	Velocity (m/s)	Flow rate (m³/h)	(mm)	Pressure (bar)	Weight (Kg)
15A		0.19		6.35			7
20A		0.34		11.29			7
25A		0.53		17.64			8
32A		0.87		28.91	200	40	8
40A		1.36		45.71			9
50A		2.12		70.58			10
65A		3.58		119.28			11
80A		5.43		180.68			13
100A		8.48		282.32	250		17
125A		13.25		441.12	200	16	20
150A	0.2	19.08	10.0	636.21	300		30
200A		33.91		1,129.27	350		41
250A		52.99		1,764.48	400		58
300A		76.30		2,540.86	500		70
350A		103.86		3,458.39	300		82
400A		135.65		4,517.08			106
450A		171.68		5,716.93	600	10	116
500A		211.95		7,057.94	000		130
600A		305.21		10,163.43			185
700A		415.42		13,833.55	700		230
800A		542.59		18,068.31	800		300
900A		686.72		22,867.71	900		380
1000A		847.80		28,231.74	1,000	6	480

Graph Illustration of diameter, Flow speed and Volume of flowmeter

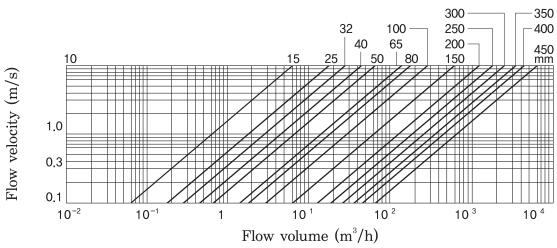



F951_04 | WISE Data Sheet 10/2020

Grounding

General information on ground connections

Observe the following items when grounding the device;

- The flowmeter grounding is one of the most important things for flowmeter installation.
- For plastic pipes or pipes with insulating lining, the grounding is provided by the grounding ring.
- When stray potentials are present, install a grounding ring upstream and downstream of the flowmeter sensor.
- For measurement-related reasons, the potential in the station ground and in the pipeline should be identical.

*** Important Notice**

If the flowmeter sensor is installed in plastic or earthenware pipelines, or in pipelines with an insulating lining, transient current may flow through the grounding electrode in special cases.

In the long term, it may destroy the sensor, since the ground electrode will turn in degrade electrochemically. In these special cases, the connection to the ground must be performed using grounding plates. Install a grounding ring upstream and downstream of the device in this case.

Metal pipe with fixed flanges

Use a copper wire (at least 2.5 mm²) to establish the ground connection between the sensor, the pipeline flanges and an appropriate grounding point.

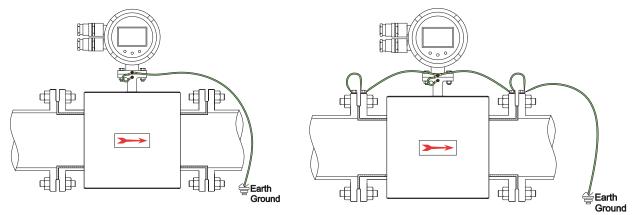


Figure 2. Metal pipe, without liner (Over 50A sizes)

Figure 3. Metal pipe, without liner (From 10 to 40A sizes)

Plastic pipes, non-metallic pipes or pipes with insulating liner

For plastic pipes or pipes with insulating lining, the ground for the measuring agent is provided by the grounding ring. If grounding electrodes are used, the grounding ring is not necessary.

- a) Install the flowmeter sensor with grounding ring in the pipeline.
- b) Connect the terminal lug for the grounding ring and grounding connection on the flowmeter sensor with the grounding strap.
- c) Use a copper wire (min. 2.5 mm²) to link the ground connection to a suitable grounding point.
- It is essential to use this grounding method in an electrolysis process at a plating factory.

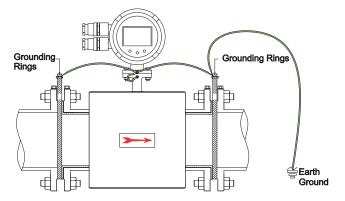


Figure 4. Plastic pipes, non-metallic pipes or pipes with insulating liner



Grounding

Ground for pipes with flexible connection

For pipes with flexible connection, it should be welded M16 or 1/4 sized bolts on both sides of the pipes as shown the figure 5 to get proper ground results.

Make sure to use a copper wire (min. 2.5 mm²) to link the ground connection to a suitable grounding point.

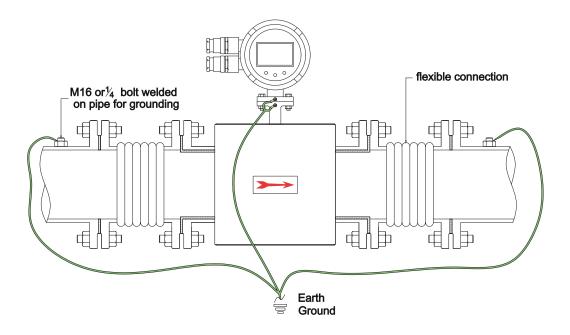


Figure 5. Ground for pipes with flexible connection




F951_06 | WISE Data Sheet 10/2020

Piping installation

Upstream downstream piping installation methods (Standard)

To ensure specific accuracy over widely varying process conditions install the flowtube with a minimum of five straight upstream and two pipe diameters downstream from the electrode plan, as shown below. This flowtube placements is usually adequate to allow for disturbances created by elbows, valves and reducers.

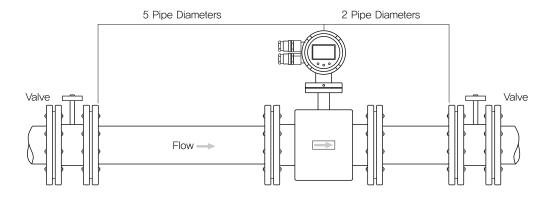



Upstream and Downstream straight pipe diameter

* Note: It can be measured a correct flowrate only when a detector is full with fluid inside completely. Make sure to operate it with fluid in full inside.

Required pipe length on piping connections

If various joints are used upstream of the detector outlet, the straight pipe length as show in figure below is required.

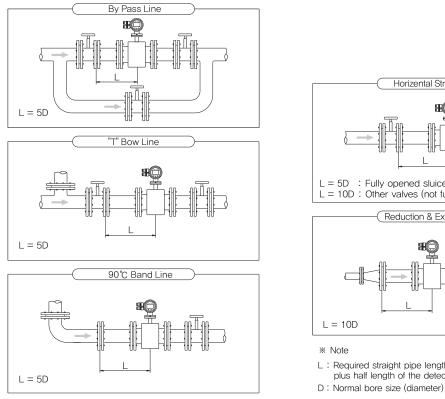

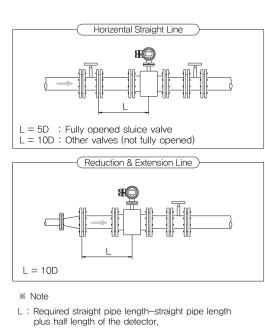


The figure above required straight pipe length on the upstream side


It follows the regulations of JIS B 7554 and KS B 0612 standards for the straight-pipe length installation conditions of electromagnetic flowmeter.

WISE Data Sheet 10/2020 | F951 07


Controller wiring connection function

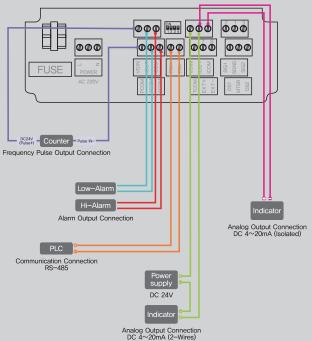

Wiring connection on sensor to converter

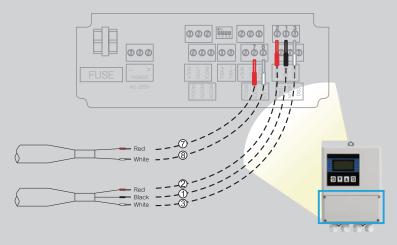

Wiring connection on sensor

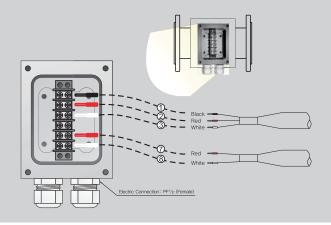



F951_08 | WISE Data Sheet 10/2020


Dimension

Converter dimension





Converter wiring diagram

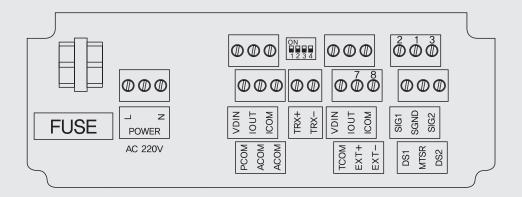

1) Power: AC 85 ~ 250 V (50 ~ 60 Hz) / DC 24 V 2) Aanlogue output: DC 4 ~ 20 mA (Isolated) 3) Pulse output: Open collector pulses 4) Alarm output: Hi and Low alarm output 5) Network function (Option): RS-485

WISE Data Sheet 10/2020

