DAEHAN SENSOR



Paddle Type Level Switches with level sensor

DSP - Series
Level Switch with contact output


Product Name
DSP - 200





Table of Contents

1.	Introduction	3
2.	Features	3
3.	Specification	3
4.	Installation	4
5.	Calibration & Setting	4
6.	Wiring Connection	5
7.	Check Point Before A/S	6

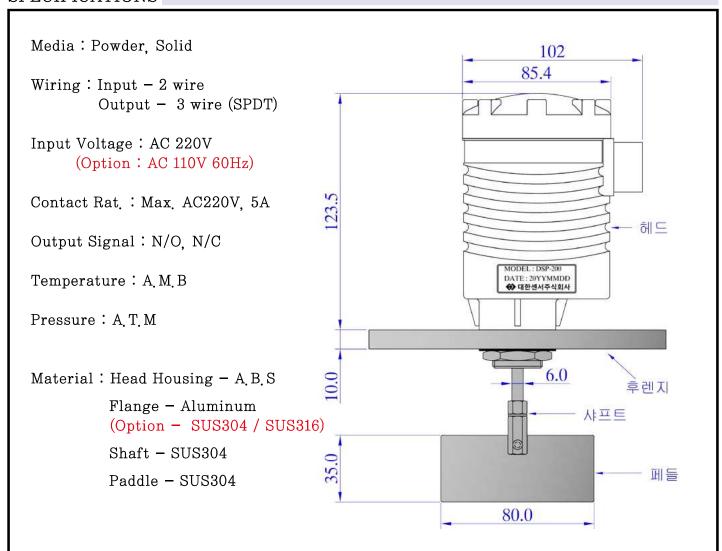

Introduction

The level switch with rotary motion.

When the powder reaches to the pedal, it stops the rotation of the pedals. At this point, a contact signal from the micro switch inside sensor head sends output signal to allow level control as users want.

Features

It is simple and easy to install, wiring and operating without expert knowledge.

This level switch is good for mainly grider, mills, and grain mixer tank.

O Cautions O

Check the suiability between sensor specification and where to install.

Suggest to use a protetion pipe when suspened solid exist in the tank.

Should not use for a liquid adhesive.

Be cautions not to bend sensor.

Do not impact on Sensor.


Installation

As shown in the picture, install on the tank.


Check if Flange (Socket) of the tank is the standard product or not.

Assembel the paddle inside the tank.

Connect the controller to the contact terminals inside the sensor head.

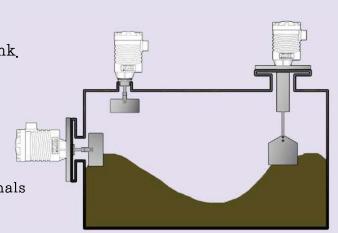

◎ Installation Cautiion ◎

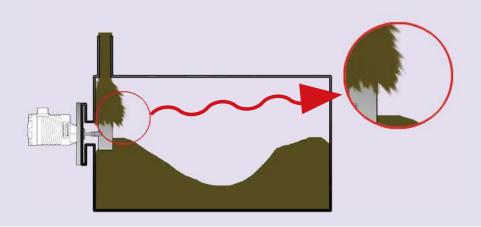

When it prevents the smooth rotation of the pedals, sensors can be mistaken for a malfunction as detecting a large amount of powder.


Calibration

DF-Series sensor is custom-made sensor.

It is determined that contact output location and direction when it is manufactured.

If you need to change, please contact us.

There is no way for you to alter setting.

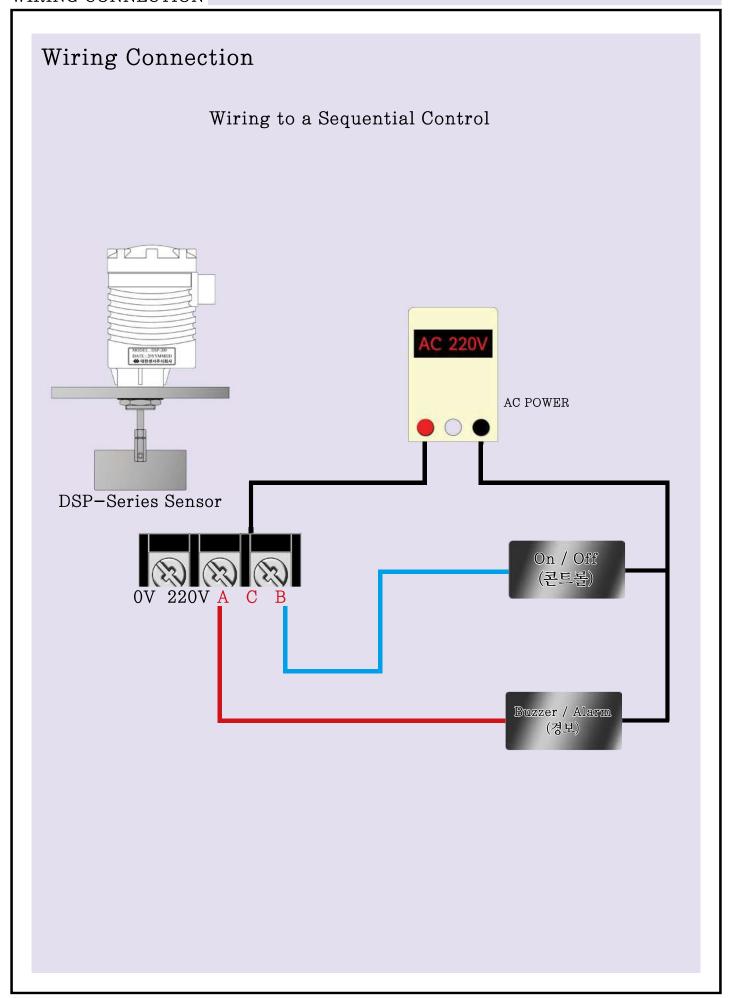

Check & A/S

The input voltage is normal?

: Check if the input of AC 220V/110V, is normally supplying.

The wiring is correct?

: Check the connect the wire short-circuit and / or poor contact.

The state of sensor is normal?

: Check if water or liquid exists inside of the sensor.

Head Office

94-2, Yongdap-dong, Seongdong-gu, Seoul, Korea

R&D Office

2-71, Jeonong-dong, Dongdaemun-gu, Seoul, Korea

Tel: 02-2213-9888(代) Fax: 02-2245-3482

e.mail: master@dh34.com Domain: www.dh34.com